

EDGE

: EDB10A-E2, EDB12A-E2, EDB12TA-E2

EDGE.

EDGE,
EDGE.

EDGE

. EDGE

 
EDGE

 
()

EDGE


1

1

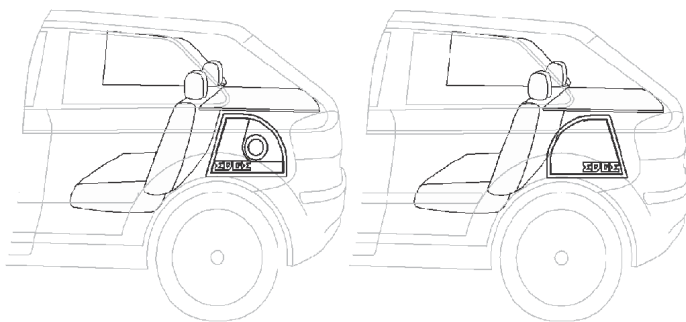


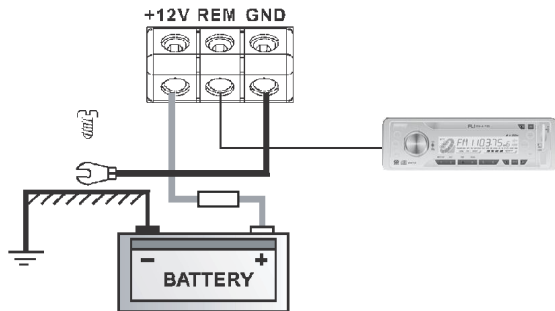

ED7200

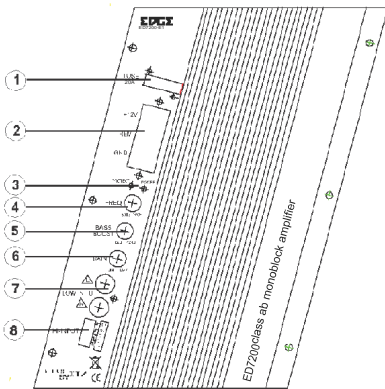 

ED7300

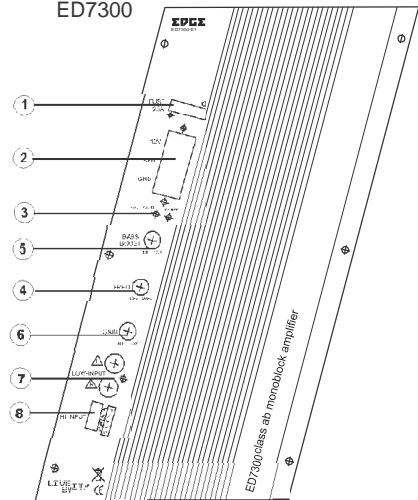 

1.

ED7200: , 20 ;

ED7300: , 25 ;

2.

12AWG (3.2 mm²).

50

3.2 mm² (12 AWG).

0.85 mm² (18AWG).

()

12

3.

(,)

4.

50 - 250 (50) 250

5.

()

- 12

45 0

+12

8

6.

7.

/ RCA

RCA

RCA

RCA

8.

$\frac{3}{4}$

EDGE

50 - 250

50

250

EDGE.

10 .

12 .

ED7200 -
20 .

ED7300 -
25 .

EDB10A-E2	EDB12A-E2	EDB12TA-E2
ED7200	ED7200	ED7300
10" (272)	12" (324)	15" (397)
300	338	338
365	408	740
400	413	413
250	300	600
750	900	1800
20	20	25

EDGE Audio

