



VITEK

ENGLISH

APPLIANCE FOR HEATING LIQUIDS (KETTLE) VT-1168 W

The appliance for heating liquids (kettle) is intended for boiling water only.

DESCRIPTION

1. Body
2. Mesh filter
3. Lid
4. Lid opening button
5. Water level scale
6. Handle
7. ON/OFF button
8. Cord storage
9. Base

ATTENTION!

For additional protection it is reasonable to install a residual current device (RCD) with nominal operation current not exceeding 30 mA. To install RCD, contact a specialist.

SAFETY MEASURES

Before using the unit, read this instruction manual carefully and keep it for future reference.

Use the unit for intended purposes only, as specified in this instruction manual. Mishandling the unit can lead to its breakage and cause harm to the user or damage to his/her property.

• Use the unit for its intended purpose only and in strict accordance with the instruction manual.

• Make sure that your home mains voltage corresponds to the voltage specified on the unit body.

• To fill the kettle with water, take it off the base (9) and open the lid (3) by pressing the button (4).

• Fill the kettle with water up to the maximal mark «MAX» on the water level scale (5), close the lid (3) and place the kettle on the base (9). Make sure that the kettle lid (3) is closed tightly.

• Insert the power plug into the mains socket.

• To fill the kettle with water, take it off the base (9) and open the lid (3) by pressing the button (4).

• Fill the kettle with water up to the maximal mark «MAX» on the water level scale (5), close the lid (3) and place the kettle on the base (9). Make sure that the kettle lid (3) is closed tightly.

• Switch the kettle on by setting the ON/OFF button (7) to the lower position, the illumination of the button (7) will light up.

• Once water starts boiling, the kettle will be switched off automatically, the illumination of the button will go out. Pour water out and repeat the water boiling procedure 2-3 times.

Note:

• Before using the kettle make sure that the button (7) is not blocked by any foreign objects, and the lid (3) is closed tightly, otherwise auto switch off of kettle is not possible.

• Before removing the kettle from the base, make sure that the kettle is switched off and the button (7) is in the upper position.

Attention!

To avoid scalding by hot steam, do not bend over the kettle spout while it is operating.

Usage!

• Insert the power plug into the mains socket.

• To fill the kettle with water, take it off the base (9) and open the lid (3) by pressing the button (4).

• Fill the kettle with water so that the water level is not below the minimal mark «MIN» and not above the maximal mark «MAX».

• Close the lid (3) and place the filled kettle on the base (9).

• Do not use the kettle in bathrooms. Do not use it near swimming pools or other containers filled with water.

• Do not use the kettle near heat sources or open flame.

• Do not leave the kettle unattended.

• Place the kettle on a flat stable surface, do not place the kettle on the edge of the table.

• Before switching the kettle on, make sure that it is placed on the base evenly.

• Use only the base supplied with the unit.

• Do not let the power cord hang from the edge of the table and make sure it does not touch hot surfaces or sharp edges of furniture. You can adjust the power cord length by winding it around the base.

• Do not touch the power cord and the power plug with wet hands.

• Do not switch the kettle on if it is empty.

• Do not fill the kettle with water when it is standing on the base.

• Do not use the kettle without the filter or if the lid is not closed tightly.

• Take the kettle off the base before opening the lid.

• Use the kettle only for water boiling, do not heat or boil any other liquids.

• Ensure that the water level in the kettle is not below the minimal mark «MIN» and not above the maximal mark «MAX». If the water level exceeds the maximal mark, boiling water can splash out of the kettle during boiling.

• To avoid scalding by hot steam, do not bend over the kettle spout while it is operating.

• Do not open the kettle lid while water boiling.

• Regularly clean the mesh filter (2) from dirt. Open the lid (3) by pressing the button (4). Place the kettle so that the spout is turned away from you, push the center of the upper part of the filter from the flask side and remove the filter. Carefully wash the filter under a water jet after having slightly cleaned it with a soft brush. Insert the filter into the fastening slots at the spout side and press the upper part of the filter until clamping.

Note:

• There is cord storage (8) on the reverse side of the base (9). You can adjust the optimal power cord length by folding it in the cord storage in a corresponding way.

Cleaning and care

• Before cleaning disconnect the unit from the mains, pour out water and let the kettle cool down.

• Achten Sie darauf, dass der Wasserstand im Wasserkocher nicht unter der minimalen Wasserstandsmarke «MIN» und nicht über der maximalen Wasserstandsmarke «MAX» liegt. Falls der Wasserstand über der maximalen Marke ist, kann sich das Kochende Wasser aus dem Wasserkocher und den Kochen aussieben.

• Beugen Sie sich über der Tüle während des Wasserkocherbetriebs nicht, um Dampfverbrühung zu vermeiden.

• Öffnen Sie den Deckel des Wasserkochers während des Wasserkochens nicht.

• Berühren Sie die heißen Oberflächen des Wasserkochers nicht, fassen Sie nur den Griff an.

• Seien Sie beim Tragen des mit siedendem Wasser gefüllten Wasserkochers vorsichtig.

• Es ist nicht gestattet, den laufenden Wasserkocher vom Untersatz abzuheben. Wenn es notwendig ist, den Wasserkocher abzunehmen, schalten Sie den Wasserkocher mit der Tüle von Ihnen, drücken Sie von der Seite des Wasserkocherkörbels die Mitte des Oberteils des Filters und nehmen Sie den Filter heraus. Spülen Sie den Filter unter dem Wasserstrahl sorgfältig ab, indem Sie ihn mit einer weichen Bürste leicht reinigen. Stellen Sie den Filter von der Seite der Tüle in das Aufspannun ein und drücken Sie den Oberteil des Filters bis zum Einnieten.

Descaling

• Scale, appearing inside the kettle, influences the water taste and disturbs the heat exchange between water and the heating element.

• You can use special detergents for electric kettles to remove scale.

• Clean the kettle from scale regularly.

Storage

• Before taking the unit away for long storage, unplug it, pour out water and let the unit cool down.

• Fix the power cord in the cord storage (8).

• Keep the kettle away from children in a dry cool place.

Delivery set

Kettle with filter – 1 pc.

Instruction manual – 1 pc.

Technical specifications

Power supply: 220-240 V ~ 50/60 Hz

Power consumption: 1850-2200 W

Maximum water capacity: 1.7 l

The manufacturer preserves the right to change the specifications of the units without a preliminary notification

Unit operating life is 3 years

Guarantee

Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

• Do not leave children unattended to prevent using the unit as a toy.

• For children safety reasons do not leave polyethylene bags, used as packaging, unattended.

Attention! Do not allow children to play with polyethylene bags or packaging film. **Danger of suffocation!**

• Check the power cord and the power plug and the kettle body integrity periodically.

• Never use the unit if the power cord or the power plug is damaged, if the unit works improperly or after it was dropped.

• Do not repair the unit by yourself. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, unplug the unit and apply to any authorized service center at the contact addresses given in the warranty certificate and on the website www.vitek.ru.

• Transport the unit in the original package only.

• Keep the unit out of reach of children and disabled persons.

THE UNIT IS INTENDED FOR HOUSEHOLD USAGE ONLY

BEFORE THE FIRST USE

After unit transportation or storage at low temperature keep it for at least three hours at room temperature before switching on.

CE This product conforms to the EMC-Requirements as laid down by the Council Directive 2004/108/EC and the Low Voltage Regulation (2006/95/EC)

DAS GERÄT IST NUR FÜR DEN GEBRAUCH IM HAUSHALT GEEIGNET

VOR DER ERSTEN NUTZUNG

Falls das Gerät unter niedrigen Temperaturen transportiert oder aufbewahrt wurde, lassen Sie es bei Raumtemperatur nicht weniger als drei Stunden bleiben.

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

