

CONGRATULATIONS!

You are now the proud owner of the ROCCAT™ Kave XTD Digital – Premium 5.1 Surround Headset with USB Remote & Sound Card. With true 5.1 surround sound, supreme comfort, robust design and a desktop remote featuring a high-quality inbuilt sound card and Bluetooth® smartphone pairing technology, the Kave XTD is the total audio solution for gamers.

USB Remote & Sound Card

Featuring a high-quality inbuilt sound card, the Kave XTD remote gives you total audio control at your fingertips. With 5.1 speaker ports, you can hook your existing sound system up and switch between output modes easily. Completed by a game/movie mode toggle, volume master controls, stylish LED lighting and tons more, the remote works as your audio command center.

Bluetooth® Pairing

Also featured in the Kave XTD remote is patented ROCCAT™ Bluetooth® technology which lets you to pair your BT-enabled smartphone to your headset, allowing you to make and receive calls without having to leave the action. Saving you time and keeping you focused on your game, you can chat to your friends through your headset while you keep on fragging.

High-comfort Surround Sound

With two 40mm driver units and one 30mm vibrator unit per ear cup, the Kave XTD provides fully-immersive surround sound audio. With hand-sewn leatherette ear cushions and plush headband padding, supreme comfort is complemented by a light yet robust and battle-proof design. A detachable microphone with mute LED rounds off your perfect gaming headset.



SPECIFICATIONS

PACKAGE CONTAINS

- ROCCAT™ Kave XTD Digital – Premium 5.1 Surround Headset
- Desktop USB Remote with Inbuilt Sound Card
- Driver CD-ROM
- Quick-Installation Guide

SYSTEM REQUIREMENTS

- Free USB 2.0 port (500mA) for power supply
- Windows® 7 32 / 64 bit, Windows® 8 / Windows® 8 Pro
- For phone feature*: Bluetooth® 3.0, backward compatible with Bluetooth® 1.1, 1.2, 2.0 (+EDR) and 2.1

TECH SPECS

CENTER/FRONT/REAR DRIVER UNITS

- frequency response: 20~20.000Hz
- max. SPL at 1KHz: 115±3dB
- max. input power: 50mW
- driver diameter: 40mm
- driver unit material: Neodymium magnet
- impedance: 32Ω

VIBRATION DRIVER UNITS

- frequency response: 20~100Hz
- max. input power: 300mW
- driver diameter: 30mm

MICROPHONE

- frequency response: 10~10.000Hz
- driver diameter: 4x1.5mm
- sensitivity at 1KHz: -32±-2dB
- impedance: 2.2kΩ + 15%
- directivity: omni-directional

GENERAL

- weight (headset only): 335gr
- cable length: 3.6m

CALL BUTTON GUIDE*

Status	Call Button Action	Function
Standby	Press and hold (4s)	Initiate pairing
Incoming call	Press once	Accept call
Incoming call	Press and hold (2s)	Reject call
On a call	Press once	End call
Paired/Standby	Press and hold (2s)	Call back
Paired/Standby	Press once	Initiate call

Status	Bluetooth® LED Illumination
Not paired	Off
Paired	On
Pairing	Blinking

Status	Call Button LED
On a call	On
Idle	Off

* full functionality dependent on finalizing BT® pairing

 
*only works with installed device driver



QUICK-INSTALLATION GUIDE

IMPORTANT DOCUMENT

ROCCAT GmbH
Otto von Bahrenpark, Paul-Dessau-Str. 3G, 22761 Hamburg, Germany
© 2013 ROCCAT GmbH. All rights reserved. Any product names mentioned in this manual may be trademarks or registered trademarks and are the property of their respective owners. Information contained herein is subject to change without notice. ROCCAT GmbH shall not be made liable for any errors that may appear in this manual. This publication or parts of it may not be reproduced without the express consent of the publisher.

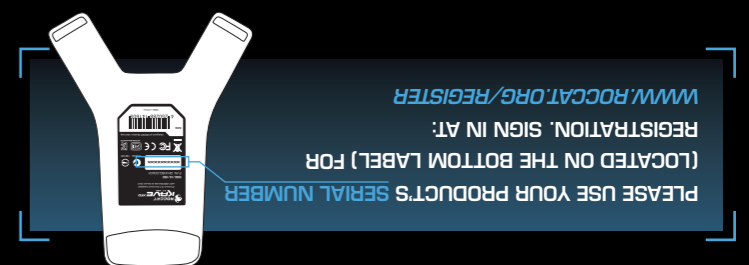


WWW.ROCCAT.ORG/SUPPORT

Our support team is ready to help with any technical questions. Just send an e-mail to support@roccat.org. Or visit our website at:

Should you need assistance ...



 DESKTOP REMOTE

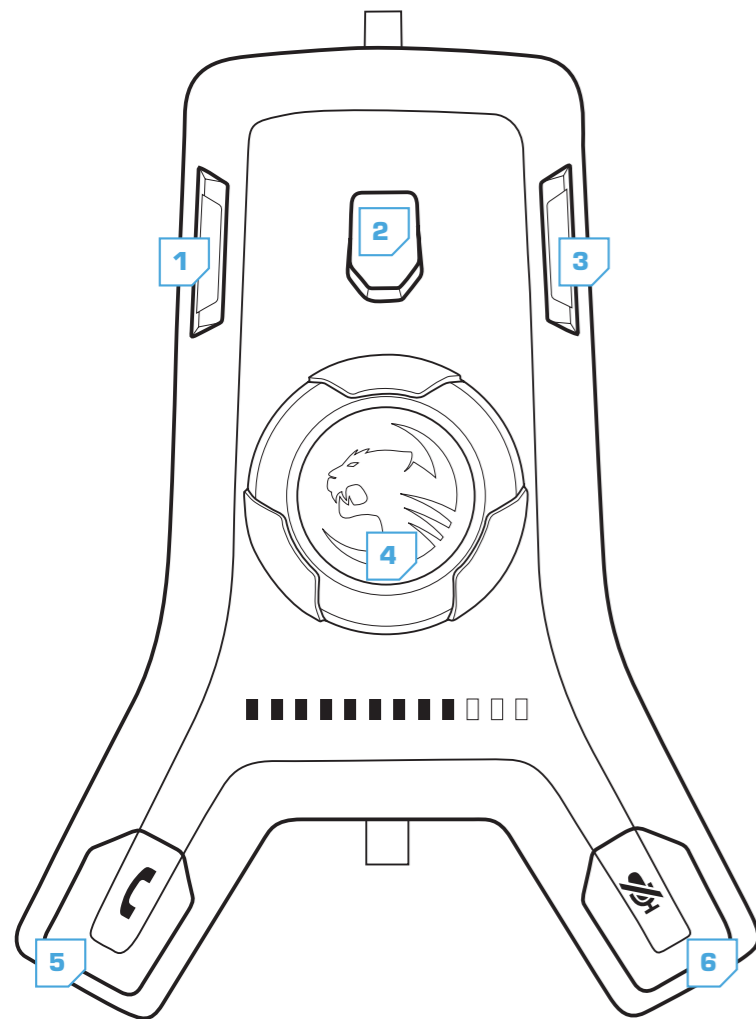

1 = Movie/game mode toggle

2 = Channel toggle

 
3 = Output mode toggle

4 = Volume/mute control

5 = Call button

6 = Microphone mute button

CONNECTION/INSTALLATION*

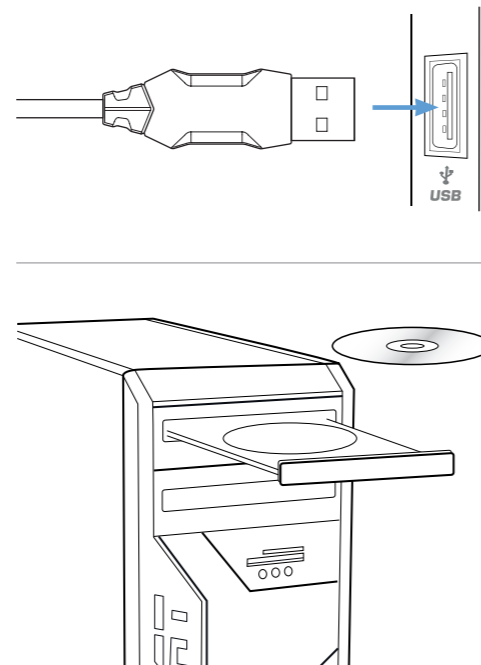

DE

BITTE BEACHTEN: UM DAS KAVE XTD MIT ALLEN FUNKTIONEN NUTZEN ZU KÖNNEN, MUSS DER TREIBER INSTALLIERT SEIN.

1. Stecke den USB-Stecker in einen freien USB-Anschluss deines Computers.
2. Lege die Installations-CD-ROM ein oder lade den Treiber von roccat.org/support herunter.
3. Installiere den Treiber.
4. Starte deinen Computer nach der Installation des Treibers neu.

FR

INFORMATION : INSTALLEZ LE PILOTE POUR PROFITER PLEINEMENT DES CAPACITÉS DU KAVE XTD.

1. Branchez le connecteur USB à un port USB libre de votre PC.
2. Insérez le disque d'installation ou téléchargez le pilote à partir de roccat.org/support.
3. Installez le pilote.
4. Redémarrez votre PC après la fin de l'installation du pilote.

DK

BEMÆRK: FOR AT OPNÅ FULD KAVE XTD OPLEVELSE SKAL DRIVEREN VÆRE INSTALLERET.

 
1. Sæt USB-stikket i en fri USB-port på din computer.
2. Indsæt installationen CD-ROM eller download driveren fra roccat.org/support.
3. Installer driveren.
4. Genstart din computer, når installationen af driveren er afsluttet.

PL

UWAGA: BY W PEŁNI KORZYSTAĆ ZE WSZYSTKICH ZALET KAVE XTD, NALEŻY UPEWNIĆ SIĘ, ŻE STEROWNIK JEST ZAINSTALOWANY.

1. Umieść wtyk USB w wolnym gnieździe USB komputera.
2. Umieść instalacyjną płytę CD w napędzie lub pobierz sterownik ze strony roccat.org/support.
3. Zainstaluj sterownik.
4. Uruchom ponownie komputer po zakończeniu instalacji sterownika.

ADJUSTMENT

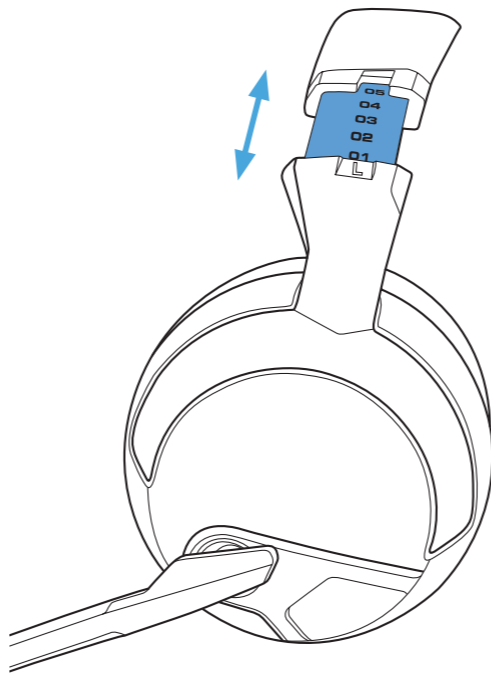

EN

PLEASE NOTE: TO ENJOY THE FULL KAVE XTD EXPERIENCE PLEASE ENSURE THE DRIVER IS INSTALLED.

 
1. Plug the USB connector into any free USB port on your computer.
2. Insert the installation CD-ROM or download the driver from roccat.org/support.
3. Install the driver.
4. Reboot your computer after the driver installation has completed.

PT

TENHA EM ATENÇÃO: PARA DESFRUTAR DA TOTAL EXPERIÊNCIA KAVE XTD, CERTIFIQUE-SE DE QUE O DRIVER ESTÁ INSTALADO.

1. Ligue a ficha USB em qualquer porta USB livre do seu computador.
2. Insira o CD-ROM de instalação ou faça download do driver em roccat.org/support.
3. Instale o driver.
4. Reinicie o seu computador após ter completado a instalação do driver.

ATTACH/DETACH MIC

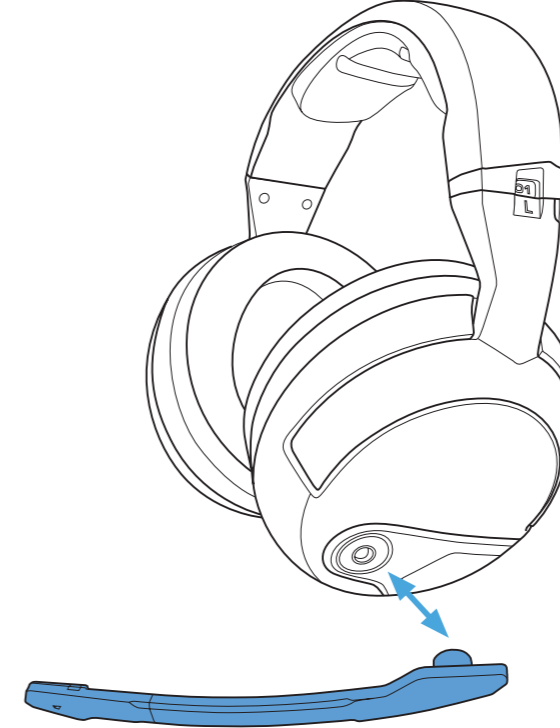

ES

NOTA: PARA DISFRUTAR DE TODA LA EXPERIENCIA QUE OFRECE KAVE XTD ASEGÚRESE DE QUE EL CONTROLADOR ESTÉ INSTALADO.

 
1. Enchufe el conector USB a cualquier puerto USB libre de su ordenador.
2. Inserte el CD ROM de instalación o descargue el controlador de roccat.org/support.
3. Instale el controlador.
4. Reinicie su ordenador una vez finalizada la instalación del controlador.

RU

ДЛЯ ИНФОРМАЦИИ: ДЛЯ ИСПОЛЬЗОВАНИЯ ВСЕХ ВОЗМОЖНОСТЕЙ KAVE XTD НУЖНО УСТАНОВИТЬ ДРАЙВЕР.

1. Вставьте USB-коннектор в свободный USB-порт компьютера.
2. Вставьте установочный компакт-диск в дисковод или загрузите драйвер с roccat.org/support.
3. Установите драйвер.
4. Перезагрузите компьютер после завершения установки драйвера.

5.1 SPEAKER PORTS

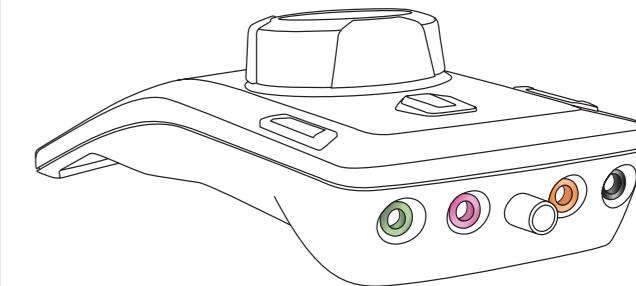

- = Front speakers
- = Microphone
- = Subwoofer/center speaker
- = Rear speakers

FI

HUOMAA: VARMISTA, ETTÄ AJURI ON ASENNETTU, JOTTA VOISIT NAUTTIA TÄYDESTÄ KAVE XTD -KOKEMUKSESTA.

1. Liitä USB-liitin tietokoneesi vapaaseen USB-liitäntään.
2. Aseta asennus-CD-ROM tietokoneeseen tai lataa ajuri osoitteesta roccat.org/support.
3. Asenna ajuri.
4. Käynnistä tietokoneesi uudelleen, kun ajurin asennus on suoritettu loppuun.

SE

OBSERVERA: FÖR ATT KUNNA UTNYTTJA FUNKTIONERNA HOS KAVE XTD FULLT UT MÅSTE DRIVRUTINEN INSTALLERAS.

1. Sätt USB-kontakten i en ledig USB-port på din dator.
2. Lägg in CD-skivan för att installera eller ladda ner drivrutinen från roccat.org/support.
3. Installera drivrutinen.
4. Starta om datorn när drivrutinen installerats.