

**GB**  
STRAIGHT AND CURL INSTRUCTIONS FOR USE  
Read the user's manual and the safety instructions  
carefully before using for the first time.

**GENERAL DESCRIPTION**

- A - On/off button
- B - Temperature display using light diodes
- C - Heat resistant power cord
- D - Isolating extension cord
- E - Ceramic coated straightening plates
- F - 32 mm ceramic coated curling iron
- G - Hair grip lever
- H - Grip hair clip
- I - "Straightening" or "curling" function switch
- J - Swivel power cord
- K - Stay cool tips
- L - Appliance rest

**1. SAFETY INSTRUCTIONS**

\* As an additional safety measure, we recommend the installation of a residual current difference device in the electrical circuit supplying the bathroom, acting at not more than 30 mA. Ask your installer for advice.

\* The appliance's accessories become very hot during use. Avoid contact with them.

\* The appliance must be unplugged; before cleaning and maintenance, in the event of any problem in operation, as soon as you have finished using it.

\* Check the voltage of your local supply against the voltage of your appliance. Avoid connecting the appliance can cause irreparable harm, not covered by guarantee.

\* When using the appliance in the bathroom, unplug it after use as the presence of water may damage the plug or the appliance itself.

\* WARNING: never use your appliance with wet hands or close to water in bathtubs, showers, washbasins or other receptacles.

\* This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

\* If the power cord is damaged, it must be replaced by the manufacturer, its service centre or any person with similar qualifications, in order to avoid all dangers.

\* Do not use your appliance and contact an Approved Service Centre if:

- Your appliance has fallen or dropped.

- If it does not work correctly.

- For any functional problem contact our consumer service or your dealer.

- Do not use if the power cord is damaged.

- Do not immerse in water or run under the tap, even for cleaning purposes.

- Do not hold with wet hands.

- Do not hold by the hair grip which is hot, but by the handle.

- Do not plug by pulling on the power cord, only by disconnecting the plug.

- Do not use an extension lead.

- Do not clean using an abrasive or corrosive substance.

- Do not use at a temperature less than 0°C and higher than 35°C.

**GUARANTEE:**

This product has been designed for domestic use only. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.

**2. USING FOR THE FIRST TIME**

Your appliance heats up quickly and the temperature remains stable throughout use.

\* Plug the device in.

\* Press the on/off button (A) for 2 to 3 seconds.

\* Wait for one minute, your appliance is ready to use.

\* Select the ideal temperature for your hair using the "+" and "-" temperature switch (C).

\* You can activate the stay cool function by pressing the corresponding button (D).

