



ENGLISH

Kettle

- Press button (6) (On/Off), at that you hear short sound signal and kettle reservoir backlight (blue colored) is switched on.
- During the heating process color of the backlight is changing in the next sequence: blue – purple (heating) – red (boiling).
- When water starts boiling you can hear short sound signals, and kettle is switched off automatically.
- In boiling mode you can switch off the kettle on your own by pressing button (6) (On/Off).
- Make sure the kettle is switched off before detaching it from the base.
- Wait 15-30 seconds after switching off the kettle. Afterwards you can switch it on again to boil water.

Important safety instructions

- Read these instructions carefully before using electric kettle.
- Make sure appliance operating voltage meets power supply line voltage at your house.
- Power cord is equipped with "euro-plug"; insert it into socket with reliable grounding contact.
- In order to avoid risk of fire do not use adapters for connecting the appliance to wall outlet.
- Press button (7) (Keep warm), at that water heating process up to the given temperature is started, afterwards water temperature in the kettle is kept at the given level.
- Watch water level is above minimal mark and below maximal mark.
- Install kettle on level and firm surface.
- Do not use this appliance near heat sources and open flame.
- Use only the base included into delivery set.
- You can adjust length of power cord by winding it around the base.
- Do not allow power cord hanging over table edge, and also take care it is not touching heated surfaces.
- Do not open the lid during water heating.
- Be careful during water heating in order to avoid hot steam burns.
- Do not touch hot surfaces of the kettle, hold it only by handle.
- Be careful while carrying the kettle full of boiling water.

Cleaning Filter

Switch off the kettle, detach it from the base, pour water out and leave the kettle for cooling down.

Open the lid (4) by pressing button (5). Put kettle in front of you, hold the upper part of filter (3), pull it upwards and take the filter out.

It is recommended to wash filter under water jet and bush it slightly.

Install filter (3) into its place by pressing on the upper part of filter to fasten it into position.

Cleaning and maintenance

Disconnect the appliance from the wall outlet before cleaning, pour water out and leave the kettle for cooling down.

Wipe outer surface of the kettle by damp cloth. Use soft cleansers to remove dirt. Do not use metal brushes and abrasive cleaners.

Electric kettle is intended for household purposes only.

Special attention is required in case the appliance is used by children or invalids.

Store the appliance at places inaccessible by children.

Do not allow children using this appliance as a toy.

Keep these instructions

Before using first time

- Unpack the kettle.
- Make sure operating voltage of the kettle meets supply line voltage.
- Insert power cord plug into wall outlet.
- Open kettle lid (4) by pressing button (5).
- Fill kettle with water up to maximal mark, close the lid, place kettle on the base, at that long sound signal is sounded and kettle reservoir backlight is switched on.

Turn on the kettle by pressing button (6) (On/Off), at that you hear short sound signal and kettle reservoir backlight (blue colored) is switched on. During water heating process the color of backlight is changed, when water is boiled it turns red, short sound signals are played, and kettle is switched off automatically. Pour water out and repeat water boiling procedure two times.

Using Kettle

- Connect appliance to wall outlet.
- Before filling kettle with water, detach kettle from its base in order, open the lid (4) by pressing button (5), pour in some water watching water level indicating scale (2). Close the lid (4).
- Install full kettle at the base in convenient direction (the base enables rotating the appliance 360° around).
- At kettle installation on the base long sound signal is played and kettle reservoir backlight is switched on. Backlight color is changed according to the next sequence: blue – green – cyan – dark blue – purple – red.

This product conforms to the EMC-Requirements as laid down by the Council Directive 89/336/ECC and to the Low Voltage Regulation (73/23 EEC)

GUARANTEE

Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

The manufacturer reserves the right to change the device's characteristics without prior notice.

Service life of the unit is not less than 3 years

Guaranty period is 3 years

The manufacturer reserves the right to change the device's characteristics without prior notice.

Product producer retains the right to change the characteristics of the device without prior notice.

Technical Specifications

Supply voltage: 220-240 V ~ 50 Hz

Maximal power: 2200 W

Maximal water capacity: 1,5 L

The manufacturer reserves the right to change the device's characteristics without prior notice.

Producer retains the right to change the characteristics of the device without prior notice.

Guaranty period is 3 years

