



ENGLISH

Hair clipper

Description

- 1. Movable blade
- 2. Fixed blade
- 3. Power switch
- 4. Charging indication
- 5. AC adapter jack
- 6. Charging/charging stand
- 7. Power cord
- 8. Detachable comb attachments
- 9. Brush for cleaning
- 10. Lubricating oil
- 11. Scissors
- 12. Comb

SAFETY MEASURES

You can use the hair clipper in a bathroom or shower only while built-in battery operating. Never use the hair clipper with connected net adapter in a bath or a sink, filled with water. Never immerse the hair clipper into water or any other liquids. Charge the battery as necessary; never charge the battery for more than 24 hours.

ALWAYS...

Always disconnect the net adapter from the mains and the unit while using in the bathroom or shower. Always wipe your hands dry before you plug in the net adapter.

Step 1

Set the comb attachment (3 mm) or (6 mm). Hold the unit in a way that the blades are directed upwards. Hold the clipper with its blades up. Start cutting in direction of hair growth (Pic. 1). Slowly move the clipper up. Cut hair from below back of the head.

Step 2

Turn off the clipper by the switch set the comb to the position for cutting longer hair (9 mm) or (12 mm) and continue cutting hair near the crown of the head (Pic. 2).

Step 3 Cutting in the temple area

Turn off the clipper, set the comb to the position for shorter hair (3 mm) or (6 mm) and cut hair in the temple area. Then set the comb to the position (9 mm) or (12 mm) and continue cutting hair in the direction of the crown of the head (Pic. 3).

Step 4

Cutting in the frontal crown area Using the comb (9 mm) or (12 mm) cut hair from the crown towards the top against the direction of hair growth (Pic. 4).

You can cut hair against hair growth and along hair growth, but bear it in mind that hair that is cut against hair growth will be shorter than that that is cut along hair growth.

- Use comb positions (3 mm) or (6 mm) for very short cut.

- To leave long hair use the necessary comb (9 mm) or (12 mm).

- To leave longer hair squeeze hair strands between fingers and cut them with the clipper.

- Never use the unit outdoors. Avoid knots and twisting of the net adapter cord. Always store the unit out of the reach of children.

Always clean the unit before taking it for storage.

NEVER

Never use the hair clipper with connected net adapter in the bathroom or shower.

Tauch Sie den Netzadapter nie ins Wasser oder an einen Dusche. Niemals die Haarschneidemaschine mit dem Akkubatterien immer heraus.

Always store the net adapter out of the socket after charging of the batteries.

Always store the unit out of the reach of children.

Never use the hair clipper with connected net adapter in the bathroom or shower.

Never use the net adapter into water or any other liquids.

Never use the unit outdoors. Avoid knots and twisting of the net adapter cord. Always store the unit out of the reach of children.

Never use the unit if the teeth of the blades are damaged. It can lead to injuries and cuts.

Conical haircut Set the comb (12 mm) and start cutting from the back of the head towards the crown and from the sides. Cut hair against hair growth from the front to the crown and from sides (Pic. 7). To achieve a haircut with a flat crown use a comb: shave and cut hair strands along the comb. Hair to find out uneven strands.

HAIR CLIPPER IS INTENDED FOR HOUSEHOLD USE ONLY

Before you start

- Unpack the unit.
- Before switching on the unit, lubricate the blades with the oil supplied.

Battery charging

- Make sure that the power switch (3) is in the "off" position.
- Connect the net adapter jack to the stand (6) or directly to the jack on the unit (5).
- Make sure that the voltage of the mains corresponds to the voltage specified on the unit.
- Insert the net adapter into the socket, the indication (4) will light up.

Note

- First charging should not be more than 6 hours.
- Do not charge the batteries for more than 24 hours.

ATTENTION! While the battery is fully charged the operating time of the unit is about 45 minutes.

Remove the attachment: by pressing the edges of the blades remove hair from the inner side and the shavers.

Remove the cut-off hair from the blades, using the brush supplied.

Wipe the accessories and the body with a wet cloth, and then wipe them dry with a soft cloth.

Do not use abrasives materials and detergents. Lubricate the blades with oil.

Keep the clipper in a dry safe place.

Do not immerse the clipper in water or other liquids.

Environment protection

This clipper has an accumulator batteries subjected to utilization. Before you get rid of the broken clipper, please use the unit from the net adapter.

Connect the plug of the net adapter to the jack on the unit (5), wait 5 minutes before you start using the unit.

NEVER use the hair clipper with connected net adapter near a bath or a sink, filled with water.

Hair cutting instructions

Before you start on the unit, lubricate the blades with the oil supplied.

Before cutting switch on the unit and make sure that it operates without malfunction, if there is much oil on the blades, remove it with a dry cloth.

Attention! The head of the person whose hair you are cutting should be at the level of your breast.

Cover the shoulders with a towel, comb the hair.

Always move the unit against the hair growth; otherwise the hair will not be properly cut.

Move the unit slowly while cutting of the hair.

Reminder: To achieve even haircut move the clipper along hair, do not move sharply, cut one-pass small amount of hair, if necessary return to the cut for additional haircut.

The best results are achieved while operating with dry, not wet hair. Remove the cut-off hairs from the clipper blades. Combs hair to find out uneven strands.

Starting cut

For the first time it is better to leave longer hair. With mastering the clipper you can model different haircuts yourself.

• Use the power switch (3) to switch on/off of the unit.

This product conforms to the EMC Directive as laid down by the Council Directive 89/336/EEC and to the Low Voltage Regulation (73/23 EEC)

CE This product conforms to the EMC Directive as laid down by the Council Directive 89/336/EEC and to the Low Voltage Regulation (73/23 EEC)

Begin

Lassen Sie sich dem ersten Betrieb weniger Haare schneiden. Mit der Zeit nach der Beherrschung der Haarschneidemaschine können Sie gewünschte Frisuren modellieren.

• Nutzen Sie den Netzschalter (3), um das Gerät einzuschalten.

• Schließen Sie den Schniedekamm an das Gerät an, so dass die Vorsprünge der Verschlüsse des Schniedekamms mit den Aussparungen am Gehäuse des Geräts zusammenfallen.

• Um den Schniedekamm abzunehmen, heben Sie den Schniedekamm vom Aufbewahrung des Gehäuses am Kopf des Netzdapters ab.

• Staubtuch zum Laden/zur Aufbewahrung des Gehäuses.

• Entfernen Sie die Haarschneidemaschine aus dem Gehäuse.

• Entfer

