

## ENGLISH

### GARMENT STEAMER VT-1285 BD

The garment steamer is intended for careful smoothing of folds on clothes or furniture.

#### DESCRIPTION

1. Steam release openings
2. Steam supply button
3. Water inlet lid
4. Water tank
5. Nozzle brush
6. Pilot lamp
7. Water tank release buttons

#### ATTENTION!

For additional protection it is reasonable to install a residual current device (RCD) with nominal operation current not exceeding 30 mA, to install RCD, contact a specialist.

#### SAFETY MEASURES

Before using the unit, read this instruction manual carefully and keep it for future reference.

Use the unit for intended purposes only, as specified in this instruction manual.

Mishandling the unit can lead to its breakage and cause harm to the user or damage to his/her property.

- Before using the unit for the first time, make sure that the voltage in your mains corresponds to unit operating voltage.
- The power cord is equipped with a "europlug"; plug it into the socket with a reliable grounding contact.
- To avoid fire, do not use adapters for connecting the unit to the mains
- Do not use the unit outdoors.
- Place the unit vertically on a flat moisture-resistant surface, do not place it horizontally and do not turn it over.
- Before using the unit, examine the power cord closely and make sure that the cord is not damaged. If you find any damages of the power cord, do not use the garment steamer.
- Never use the unit if the power cord does not contact with hot surfaces and sharp furniture edges. Avoid damaging the isolation of the power cord.
- Use only the attachments supplied.
- Do not switch the unit on if it is empty.
- Switch the unit off once the water tank is empty.
- During operation hold the garment steamer vertically and do not turn it over.
- Fill the tank only with clean water, it is recommended to use water additionally cleaned with a domestic filter. Do not use carbonated water or any perfume additives. Always unplug the garment steamer before cleaning, filling it with water or pouring water out of the tank or if you do not use the unit.
- Do not cover the steam release openings and do not insert foreign objects inside them.
- To avoid burns, hold the garment steamer with your hand in the steam supply button area, because the upper part of the garment steamer body heats up strongly during operation.
- During garment steamer operation avoid getting burnt by hot steam that goes out from the steam release openings.
- Use the unit only for the intended purposes. Never steam clothes on a person as the released steam temperature is very high. Always use a hanger.
- Never direct the steamer on people, animals and plants as well as on furniture, electric appliances, books and any other objects which can be damaged by hot steam.
- Do not immerse the unit body, the power cord and the power plug into water or any other liquids.
- Do not touch the unit body and the power plug with wet hands.
- Never leave the unit connected to the mains unattended.
- Clean the garment steamer regularly.
- Do not allow children to use the unit as a toy and do not allow them to touch the unit body and the power cord during the steamer operation.
- This unit is not intended for usage by children under 8 years of age.
- Children aged 8 years and over as well as disabled persons can use this unit only if they are under supervision of a person who is responsible for their safety and if they are given all the necessary and understandable instructions concerning the safe usage of the unit and information about danger that can be caused by its improper usage.
- For children safety reasons do not leave polyethylene bags, used as packaging, unattended.

**Attention! Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!**

- Install and remove the nozzle brush only after the unit has cooled down completely.
- Never pull the power cord when disconnecting the unit from the mains; take the power plug and carefully pull it out of the socket.
- Do not repair the unit by yourself. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, unplug the unit and apply to any authorized service center at the contact addresses given in the warranty certificate and on the website [www.vitek.ru](http://www.vitek.ru).
- Transport the unit in its original package only.
- Keep the unit out of reach of children and disabled persons.
- There may be water residue in the tank, this is normal, as the garment steamer has undergone factory quality control.

THE UNIT IS INTENDED FOR HOUSEHOLD USAGE ONLY

#### UNIT PURPOSE

The garment steamer can be used for any types of fabrics and for smoothing folds on clothes. If you have doubts about steaming any certain kind of fabric or clothes, you should follow the recommendations on the product label.

If such information is not available, try to steam the fabric from the backside which is unnoticeable.

When steaming such fabrics as silk or corduroy, keep the garment steamer some distance away from the material.

Use the nozzle brush (5) to remove lint or threads from the fabric.

#### BEFORE THE FIRST USE

After unit transportation or storage at low temperature keep it for at least two hours at room temperature before switching on.

- Unpack the unit, remove any stickers that can prevent unit operation.
- Make sure that the unit operating voltage corresponds to the voltage of your mains.

Wipe the garment steamer body with a slightly damp cloth and then wipe it dry.

- Press the buttons (7) and remove the water tank (4).
- Open the water inlet lid (3), fill the water tank (4) with water not exceeding the MAX mark and close the lid (3) tightly. Wipe water drops on the unit body with a dry cloth.

Install the water tank (4) to its place.

Insert the power plug into the mains socket, the pilot lamp (6) will light up.

- Take the garment steamer with your hand and hold it in the area of the steam supply button (2).
- To switch the steam supply on, press and hold down the button (2).
- To clean the steam chamber, direct the outgoing steam on a fabric; for instance, try to smooth a kitchen towel.
- After the unit operation unplug the garment steamer and let it cool down.

**Notes:** When the garment steamer is switched on for the first time the heating element burns, therefore occurrence of foreign smell and a small amount of smoke is possible, it is normal.

**Water selection**  
Use tap water to fill the water tank (4). If tap water is hard, it is recommended to mix it with distilled water in proportion 1:1; if tap water is too hard, mix it with distilled water in proportion 1:2 or use distilled water only.

**Steamer operation**  
Set the nozzle brush (5) on the garment steamer (pic. 1).

- Do not plug the garment steamer in if the water tank (4) is empty.
- Unplug the unit and wait until it cools down before installing or removing the nozzle brush (5).

- Press the buttons (7) and remove the water tank (4).
- Open the water inlet lid (3), fill the water tank (4) with water and close the lid (3) tightly.

Install the water tank (4) to its place.

**Attention!**

Before removing the water tank (4) make sure that the unit is unplugged.

Make sure that water drops do not get onto the garment steamer body, the power cord or the power plug.

Do not exceed the «MAX» mark when filling the water tank (4) with water.

Do not fill the tank (4) with carbonated water, perfume additives, vinegar, chemical agents etc.

If you need to refill water during operation, switch the garment steamer off by unplugging it.

- Hang the clothes on a hanger.

**Notes:**

Never steam clothes on a person as the outgoing steam temperature is very high.

For stable steam supply, provide that the water level is not below the minimal mark.

Insert the power plug into the mains socket, the pilot lamp (6) will light up.

Take the garment steamer with your hand and hold it in the area of the steam supply button (2).

To stop the steam supply, release the button (2).

Slowly move the garment steamer up the fabric. Smooth the fabric with the free hand.

Hold the garment steamer vertically and do not turn it over.

During the operation the upper part of the unit body heats up strongly, be careful and do not touch the hot parts of the unit body!

After steaming the clothes should cool down and dry, it may take some time.

After the unit operation unplug the garment steamer and let it cool down.

To remove the nozzle brush (5) pull the lock (pic. 2).

Press the buttons (7) and remove the water tank (4).

Open the water inlet lid (3) and drain any remaining water from the water tank (4).

Install the water tank (4) to its place.

Do not touch the unit body and the power plug with wet hands.

Never leave the unit connected to the mains unattended.

Clean the garment steamer regularly.

Do not allow children to use the unit as a toy and do not allow them to touch the unit body and the power cord during the steamer operation.

This unit is not intended for usage by children under 8 years of age.

Children aged 8 years and over as well as disabled persons can use this unit only if they are under supervision of a person who is responsible for their safety and if they are given all the necessary and understandable instructions concerning the safe usage of the unit and information about danger that can be caused by its improper usage.

For children safety reasons do not leave polyethylene bags, used as packaging, unattended.

**Attention! Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!**

- Install and remove the nozzle brush only after the unit has cooled down completely.
- Never pull the power cord when disconnecting the unit from the mains; take the power plug and carefully pull it out of the socket.
- Do not repair the unit by yourself. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, unplug the unit and apply to any authorized service center at the contact addresses given in the warranty certificate and on the website [www.vitek.ru](http://www.vitek.ru).
- Transport the unit in its original package only.
- Keep the unit out of reach of children and disabled persons.
- There may be water residue in the tank, this is normal, as the garment steamer has undergone factory quality control.

THE UNIT IS INTENDED FOR HOUSEHOLD USAGE ONLY

**UNIT PURPOSE**  
The garment steamer can be used for any types of fabrics and for smoothing folds on clothes. If you have doubts about steaming any certain kind of fabric or clothes, you should follow the recommendations on the product label.

If such information is not available, try to steam the fabric from the backside which is unnoticeable.

When steaming such fabrics as silk or corduroy, keep the garment steamer some distance away from the material.

Use the nozzle brush (5) to remove lint or threads from the fabric.

#### BEFORE THE FIRST USE

After unit transportation or storage at low temperature keep it for at least two hours at room temperature before switching on.

- Unpack the unit, remove any stickers that can prevent unit operation.
- Make sure that the unit operating voltage corresponds to the voltage of your mains.

Wipe the garment steamer body with a slightly damp cloth and then wipe it dry.

Press the buttons (7) and remove the water tank (4).

Open the water inlet lid (3), fill the water tank (4) with water not exceeding the MAX mark and close the lid (3) tightly. Wipe water drops on the unit body with a dry cloth.

Install the water tank (4) to its place.

Insert the power plug into the mains socket, the pilot lamp (6) will light up.

Take the garment steamer with your hand and hold it in the area of the steam supply button (2).

To switch the steam supply on, press and hold down the button (2).

To clean the steam chamber, direct the outgoing steam on a fabric; for instance, try to smooth a kitchen towel.

After the unit operation unplug the garment steamer and let it cool down.

**Notes:** When the garment steamer is switched on for the first time the heating element burns, therefore occurrence of foreign smell and a small amount of smoke is possible, it is normal.

**Water selection**  
Use tap water to fill the water tank (4). If tap water is hard, it is recommended to mix it with distilled water in proportion 1:1; if tap water is too hard, mix it with distilled water in proportion 1:2 or use distilled water only.

**Steamer operation**  
Set the nozzle brush (5) on the garment steamer (pic. 1).

- Do not plug the garment steamer in if the water tank (4) is empty.
- Unplug the unit and wait until it cools down before installing or removing the nozzle brush (5).

Press the buttons (7) and remove the water tank (4).

Open the water inlet lid (3), fill the water tank (4) with water not exceeding the MAX mark and close the lid (3) tightly. Wipe water drops on the unit body with a dry cloth.

Install the water tank (4) to its place.

Insert the power plug into the mains socket, the pilot lamp (6) will light up.

Take the garment steamer with your hand and hold it in the area of the steam supply button (2).

To switch the steam supply on, press and hold down the button (2).

To clean the steam chamber, direct the outgoing steam on a fabric; for instance, try to smooth a kitchen towel.

After the unit operation unplug the garment steamer and let it cool down.

**Notes:** When the garment steamer is switched on for the first time the heating element burns, therefore occurrence of foreign smell and a small amount of smoke is possible, it is normal.

**Water selection**  
Use tap water to fill the water tank (4). If tap water is hard, it is recommended to mix it with distilled water in proportion 1:1; if tap water is too hard, mix it with distilled water in proportion 1:2 or use distilled water only.

**Steamer operation**  
Set the nozzle brush (5) on the garment steamer (pic. 1).

Do not plug the garment steamer in if the water tank (4) is empty.

Unplug the unit and wait until it cools down before installing or removing the nozzle brush (5).

Press the buttons (7) and remove the water tank (4).

Open the water inlet lid (3), fill the water tank (4) with water not exceeding the MAX mark and close the lid (3) tightly. Wipe water drops on the unit body with a dry cloth.

Install the water tank (4) to its place.

Insert the power plug into the mains socket, the pilot lamp (6) will light up.

Take the garment steamer with your hand and hold it in the area of the steam supply button (2).

To switch the steam supply on, press and hold down the button (2).

To clean the steam chamber, direct the outgoing steam on a fabric; for instance, try to smooth a kitchen towel.

After the unit operation unplug the garment steamer and let it cool down.

**Notes:** When the garment steamer is switched on for the first time the heating element burns, therefore occurrence of foreign smell and a small amount of smoke is possible, it is normal.

**Water selection**  
Use tap water to fill the water tank (4). If tap water is hard, it is recommended to mix it with distilled water in proportion 1:1; if tap water is too hard, mix it with distilled water in proportion 1:2 or use distilled water only.

**Steamer operation**  
Set the nozzle brush (5) on the garment steamer (pic. 1).

Do not plug the garment steamer in if the water tank (4) is empty.

Unplug the unit and wait until it cools down before installing or removing the nozzle brush (5).

Press the buttons (7) and remove the water tank (4).

Open the water inlet lid (3), fill the water tank (4) with water not exceeding the MAX mark and close the lid (3) tightly. Wipe water drops on the unit body with a dry cloth.

Install the water tank (4) to its place.

Insert the power plug into the mains socket, the pilot lamp (6) will light up.

Take the garment steamer with your hand and hold it in the area of the steam supply button (2).

To switch the steam supply on, press and hold down the button (2).

To clean the steam chamber, direct the outgoing steam on a fabric; for instance, try to smooth a kitchen towel.

After the unit operation unplug the garment steamer and let it cool down.

**Notes:** When the garment steamer is switched on for the first time the heating element burns, therefore occurrence of foreign smell and a small amount of smoke is possible, it is normal.

**Water selection**  
Use tap water to fill the water tank (4). If tap water is hard, it is recommended to mix it with distilled water in proportion 1:1; if tap water is too hard, mix it with distilled water in proportion 1:2 or use distilled water only.

**Steamer operation**  
Set the nozzle brush (5) on the garment steamer (pic. 1).

Do not plug the garment steamer in if the water tank (4) is empty.

Unplug the unit and wait until it cools down before installing or removing the nozzle brush (5).

Press the buttons (7) and remove the water tank (4).

Open the water inlet lid (3), fill the water tank (4) with water not exceeding the MAX mark and close the lid (3) tightly. Wipe water drops on the unit body with a dry cloth.

Install the water tank (4) to its place.

Insert the power plug into the mains socket, the pilot lamp (6) will light up.

Take the garment steamer with your hand and hold it in the area of the steam supply button (2).

To switch the steam supply on, press and hold down the button (2).

To clean the steam chamber, direct the outgoing steam on a fabric; for instance, try to smooth a kitchen towel.

After the unit operation unplug the garment steamer and let it cool down.

**Notes:** When the garment steamer is switched on for the first time the heating element burns, therefore occurrence of foreign smell and a small amount of smoke is possible, it is normal.

**Water selection**  
Use tap water to fill the water tank (4). If tap water is hard, it is recommended to mix it with distilled water in proportion 1:1; if tap water is too hard, mix it with distilled water in proportion 1:2 or use distilled water only.

**Steamer operation**  
Set the nozzle brush (5) on the garment steamer (pic. 1).

Do not plug the garment steamer in if the water tank (4) is empty.

Unplug the unit and wait until it cools down before installing or removing the nozzle brush (5).

Press the buttons (7) and remove the water tank (4).

Open the water inlet lid (3), fill the water tank (4) with water not exceeding the MAX mark and close the lid (3) tightly. Wipe water drops on the unit body with a dry cloth.

Install the water tank (4) to its place.

Insert the power plug into the mains socket, the pilot lamp (6) will light up.

Take the garment steamer with your hand and hold it in the area of the steam supply button (2).

To switch the steam supply on, press and hold down the button (2).

To clean the steam chamber, direct the outgoing steam on a fabric; for instance, try to smooth a kitchen towel.

After the unit operation unplug the garment steamer and let it cool down.

**Notes:** When the garment steamer is switched on for the first time the heating element burns, therefore occurrence of foreign smell and a small amount of smoke is possible, it is normal.

**Water selection**  
Use tap water to fill the water tank (4). If tap water is hard, it is recommended to mix it with distilled water in proportion 1:1; if tap water is too hard, mix it with distilled water in proportion 1:2 or use distilled water only.

**Steamer operation**  
Set the nozzle brush (5) on the garment steamer (pic. 1).

Do not plug the garment steamer in if the water tank (4) is empty.

Unplug the unit and wait until it cools down before installing or removing the nozzle brush (5).

Press the buttons (7) and remove the water tank (4).

Open the water inlet lid (3), fill the water tank (4) with water not exceeding the MAX mark and close the lid (3) tightly. Wipe water drops on the unit body with a dry cloth.

Install the water tank (4) to its place.

Insert the power plug into the mains socket, the pilot lamp (6) will light up.

Take the garment steamer with your hand and hold it in the area of the steam supply button (2).

To switch the steam supply on, press and hold down the button (2).

To clean the steam chamber, direct the outgoing steam on a fabric; for instance, try to smooth a kitchen towel.

After the unit operation unplug the garment steamer and let it cool down.

**Notes:** When the garment steamer is switched on for the first time the heating element burns, therefore occurrence of foreign smell and a small amount of smoke is possible, it is normal.

**Water selection**  
Use tap water to fill the water tank (4). If tap water is hard, it is recommended to mix it with distilled water in proportion 1:1; if tap water is too hard, mix it with distilled water in proportion 1:2 or use distilled water only.

**Steamer operation**  
Set the nozzle brush (5) on the garment steamer (pic. 1).

Do not plug the garment steamer in if the water tank (4) is empty.

Unplug the unit and wait until it cools down before installing or removing the nozzle brush (5).

Press the buttons (7) and remove the water tank (4).

Open the water inlet lid (3), fill the water tank (4) with water not exceeding the MAX mark and close the lid (3) tightly. Wipe water drops on the unit body with a dry cloth.

Install the water tank (4) to its place.

Insert the power plug into the mains socket, the pilot lamp (6) will light up.

Take the garment steamer with your hand and hold it in the area of the steam supply button (2).

To switch the steam supply on, press and hold down the button (2).

To clean the steam chamber, direct the outgoing steam on a fabric; for instance, try to smooth a kitchen towel.

After the unit operation unplug the garment steamer and let it cool down.

**Notes:** When the garment steamer is switched on for the first time the heating element burns, therefore occurrence of foreign smell and a small amount of smoke is possible, it is normal.

**Water selection**  
Use tap water to fill the water tank (4). If tap water is hard, it is recommended to mix it with distilled water in proportion 1:1; if tap water is too hard, mix it with distilled water in proportion 1:2 or use distilled water only.

**Steamer operation**  
Set the nozzle brush (5) on the garment steamer (pic. 1).

Do not plug the garment steamer in if the water tank (4) is empty.

Unplug the unit and wait until it cools down before installing or removing the nozzle brush (5).

Press the buttons (7) and remove the water tank (4).

Open the water inlet lid (3), fill the water tank (4) with water not exceeding the MAX mark and close the lid (3) tightly. Wipe water drops on the unit body with a dry cloth.

Install the water tank (4) to its place.

Insert the power plug into the mains socket, the pilot lamp (6) will light up.

Take the garment steamer with your hand and hold it in the area of the steam supply button (2).

To switch the steam supply on, press and hold down the button (2).

To clean the steam chamber, direct the outgoing steam on a fabric; for instance, try to smooth a kitchen towel.

After the unit operation unplug the garment steamer and let it cool down.

**Notes:** When the garment steamer is switched on for the first time the heating element burns, therefore occurrence of foreign smell and a small amount of smoke is possible, it is normal.

**Water selection**  
Use tap water to fill the water tank (4). If tap water is hard, it is recommended to mix it with distilled water in proportion 1:1; if tap water is too hard, mix it with distilled water in proportion 1:2 or use distilled water only.

**Steamer operation**  
Set the nozzle brush (5) on the garment steamer (pic. 1).

Do not plug the garment steamer in if the water tank (4) is empty.

Unplug the unit and wait until it cools down before installing or removing the nozzle brush (5).

Press the buttons (7) and remove the water tank (4).

Open the water inlet lid (3), fill the water tank (4) with water not exceeding the MAX mark and close the lid (3) tightly. Wipe water drops on the unit body with a dry cloth.

Install the water tank (4) to its place.

Insert the power plug into the mains socket, the pilot lamp (6) will light up.

Take the garment steamer with your hand and hold it in the area of the steam supply button (2).



