



**VITEK**

## ENGLISH

### ELECTRIC KETTLE VT-7008 TR

The liquid heating appliance (kettle) is intended for boiling water only.

#### DESCRIPTION

1. Kettle body
2. Filter
3. Lid
4. Lid opening button
5. ON/OFF button -0/1
6. Handle
7. Water level scale
8. Cord storage
9. Base

#### Notes:

- Before using the kettle, make sure that the on/off button (5) is not blocked by any foreign objects, and the lid (3) is closed tightly, otherwise auto switch off of the kettle is not possible.
- Before removing the kettle from the base, make sure that the kettle is switched off and the on/off button (5) is in position «0».

#### ATTENTION!

For extra safety, we recommend installing a residual current device (RCD) with nominal threshold current 30 mA or under. To have a RCD installed, contact service personnel.

#### ATTENTION!

To avoid burns by hot steam, do not bend over the kettle spout while it is operating.

#### Safety Measures

Before using the electric unit, read this instruction manual carefully and keep it for future reference.

Use the unit for its intended purpose only, as specified in this instruction manual. Mishandling the unit can lead to its breakage and cause harm to the user or damage to her/his property.

- Use the unit for its intended purpose only and in strict accordance with the instruction manual.
- Fill the kettle with water, not below the minimal mark «MIN» and not above the maximal mark «MAX». Determine the water level using the water level scale (7).
- Close the lid (3) and put the full kettle on the base (9).
- Make sure that the operating voltage of the kettle corresponds to the voltage of your mains.
- The power cord is equipped with a «europlug» plug fit into the socket with a reliable grounding contact.
- To switch the kettle on, set the on/off button (5) to the position «1», the illumination of the kettle flask will light up.
- Once water starts boiling, the kettle will be switched off automatically and the illumination of the kettle flask will go out. Pour water out and repeat the water boiling procedure 2-3 times.
- Make sure that the kettle is closed tightly, otherwise auto switch off of the kettle is not possible.
- Before removing the kettle from the base, make sure that the kettle is switched off and the on/off button (5) is in position «0».

#### Notes:

- If the kettle is closed tightly, the illumination of the kettle flask will go out.
- Make sure that the kettle is closed tightly, otherwise auto switch off of the kettle is not possible.
- Before removing the kettle from the base, make sure that the kettle is switched off and the on/off button (5) is in position «0».

#### ATTENTION!

To avoid burns by hot steam, do not bend over the kettle spout while it is operating.

#### Usage

Make sure that the on/off button (5) is in the «0» position (off).

Insert the power plug into the mains socket.

To fill the kettle with water, take it off the base (9) and open the lid (3) by pressing the button (4).

• Insert the kettle with water, not below the minimal mark «MIN» and not above the maximal mark «MAX». Determine the water level using the water level scale (7).

• Close the lid (3) and put the full kettle on the base (9).

• Make sure that the operating voltage of the kettle corresponds to the voltage of your mains.

• The power cord is equipped with a «europlug» plug fit into the socket with a reliable grounding contact.

• To switch the kettle on, set the on/off button (5) to the position «1», the illumination of the kettle flask will light up.

• Once water starts boiling, the kettle will be switched off automatically and the illumination of the kettle flask will go out.

• Before removing the kettle from the base (9), make sure that it is switched off and the on/off button (5) is in the «0» position.

• After switching the kettle off, wait for 10-20 seconds, then you can switch it on again for re-boiling.

• Do not use the kettle outdoors.

• Do not use the operating kettle unattended.

• Place the kettle on a flat stable surface; do not place the kettle on the edge of the table.

• Do not direct the kettle spout at wooden furniture, electrical appliances, books and objects which can be damaged by moisture, hot steam, etc.

• Before switching the kettle on, make sure that it is placed on the base evenly.

• Use only the base supplied with the unit.

• Do not let the power cord hang from the edge of the table and make sure it does not touch hot surfaces or sharp edges of furniture. You can adjust the power cord length by winding it around the base.

• Do not touch the power cord and the power plug with wet hands.

• Do not switch the kettle on if it is empty.

• Do not fill the kettle with water when it is standing on the base.

• Do not use the kettle without the filter or if the lid is not closed tightly.

• Do not immerse the kettle and the base into water or any other liquids.

• Use the kettle only for water boiling, do not heat or boil any other liquids.

• Ensure that the water level in the kettle is not below the minimal mark «MIN» and not above the maximal mark «MAX». If the water level exceeds the maximal mark, boiling water can splash out of the kettle during boiling.

• To avoid burn by hot steam, do not bend over the kettle spout while it is operating.

• Do not open the kettle lid while water is boiling.

• Do not touch hot surfaces of the kettle, take it only by the handle.

• Be careful while carrying the kettle filled with boiling water.

• Do not remove the operating kettle from the base. If you need to take the kettle off, switch it off first, setting the on/off button to the position «0» and then remove it from the base.

• Unplug the kettle base before cleaning and when you are not using the kettle. Never pull the power cord when disconnecting the base from the mains; take the power plug and carefully remove it from the mains socket.

• To avoid electric shock, do not immerse the unit and the base into water or any other liquids.

• Do not clean the kettle and the base in a dishwashing machine.

• This unit is not intended for usage by children under 8 years of age. Place the unit out of reach of children under 8 years of age during operation and cooling down.

• This unit is not intended for usage by people (including children over 8) with physical, neural and mental disorders or with insufficient experience or knowledge. Such persons may use the unit only if they are under supervision of a person who is responsible for their safety and if they are given all the necessary and understandable instructions concerning the safe usage of the unit and information about danger that can be caused by its improper usage.

• Do not leave children unattended to prevent using the unit as a toy.

• For children safety reasons do not leave polyethylene bags, used as packaging, unattended.

#### ATTENTION! Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!

• Check the power cord, the power plug and the kettle body integrity periodically.

• If the power cord is damaged, it should be replaced by the manufacturer, a maintenance service or similar qualified personnel to avoid danger.

• Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, unplug the unit and apply to any authorized service center from the contact address list given in the warranty certificate and on the website [www.vitek.ru](http://www.vitek.ru).

• Transport the unit in the original package only.

• Keep the unit out of reach of children and disabled persons.

#### THE UNIT IS INTENDED FOR HOUSEHOLD USE ONLY, ITS COMMERCIAL USAGE AND USAGE IN PRODUCTION AREAS AND WORK SPACES IS PROHIBITED.

The manufacturer preserves the right to change design, structure and specifications not affecting general principles of the unit operation without a preliminary notification due to which insignificant differences between the manual and product may be observed. If the user reveals such differences, please report them via e-mail info@vitek.ru for receipt of an updated manual.

#### BEFORE THE FIRST USE

After unit transportation or storage under cold (winter) conditions, it is necessary to keep it for at least three hours at room temperature. There may be water spots in the kettle, this is normal, as the unit has undergone factory quality control.

#### ATTENTION! Be careful while handling the kettle, glass flask can break when dried or hit against a solid object or surface.

Detailed regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

CE This product conforms to the EMC Directive 2014/30/EU and to the Low Voltage Directive 2014/35/EU.

This product conforms to the EMC Directive 2014/30/EU and to the Low Voltage Directive 2014/35/EU.

TELEFON DЛЯ СПРАВОК: 8-800-100-18-30

СДЕЛАНО В КНР

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79</

