



ENGLISH

TERMO POT

Electric thermo pot is intended only for water boiling. For proper and safe usage of the unit, read this instruction carefully.

DESCRIPTION

- 1. "REFILL" mark
- 2. Water level indicator
- 3. Water dispense button
- 4. Water spout
- 5. Control panel
- 6. Lid opening button
- 7. Steam escape holes
- 8. Removable upper lid
- 9. Lid clamp
- 10. Handle for carrying
- 11. Case
- 12. Netzkabelanschluss
- 13. Rotating base
- 14. Sealing gasket
- 15. "FULL" mark
- 16. Power cord
- 17. Hand pump locking
- 18. Hand pump

Note:
Water dispensing is performed only with the lighting indication (26).

You can dispense water, using the hand pump (18), by preliminary setting the hand pump locking (17) to ON position.

- Pull out the plug from the socket.
- With closed lid (8) press the lid clamp (9) and remove the lid.
- Pour out the rest of water from the thermo pot.

Attention: during dispensing water be careful not to get burns from hot water.

USING OF THE UNIT

- Fill the thermo pot with water and insert the plug into the socket. The (20) "TEMP DECLINING" will light up on the control panel. Press the (21) "RE-BOLING" / "TEMP DECLINING" button, the thermo pot will switch on into boiling mode, the (22) "BOILING" indication will light up.

After water starts boiling, the unit will switch to temperature keeping mode. You can select warming temperature by pressing the (19) "TEMPSET" button, the corresponding indication (23, 24 or 28) will start flashing, when water temperature reaches the preset temperature, the (20) "TEMP DECLINING" and (21) "BOILING" will be lighted.

With the increasing temperature the (23, 24 or 28) will be lighted, with further increasing temperature the (22) "BOILING" indication will light up.

Attention: Improper usage of the unit may cause injuries or damages.

OPERATING INSTRUCTIONS IMPORANT SAFEGUARDS

• Before switching on the unit read this instruction.

• Make sure that your home electricity supply corresponds to the voltage of current specified on the housing.

• Use the power cord to connect the unit to the electrical wall outlet.

• In the temperature keeping mode or boiling mode insert it into the socket with care.

• For safety plug this unit into the outlet with current (15) "FULL".

• Hot water is supplied in two ways:

- automatically, when cup presses the water dispensing spout (3);

• when pressing the (25) "DISPENSE" button.

Attention:

• Water is dispensed only when the (26) indication is on, lock/unlock is switched by the (27) button.

You can dispense water, using the hand pump (18), by preliminary setting the hand pump locking (17) to ON position.

• After usage, pour out water from the unit, unplug it, let the unit cool down completely and take it away for keeping.

CLEAN AND CARE

• Before cleaning, disconnect the unit, pour out water from the unit, and let the unit cool down completely.

• When children or infants persons are near a pot, it is necessary to be especially careful.

• Provide that the power cord is not hanging over the table and make sure that it does not touch heated surfaces.

• Do not open the lid and do not pour water while boiling.

• Do not rotate the unit while dispensing water. Do not make efforts to open the lid. Close the lid firmly.

• Keep your hands away from steam openings otherwise you can get burns. Do not block steam openings by foreign objects.

• Do not touch hot surfaces of the thermo pot.

• Be careful while carrying the thermo pot, filled with boiling water. Do not touch the lid opening button.

• Do not carry the thermo pot, by holding the lid opening button.

• Remove the lid to pour the rest of hot water. Be careful while pouring out hot water.

• In order to avoid electric shock do not immerse the unit into water or other liquids.

• Do not immerse the thermo pot into water or other liquids.

• Do not wash the unit in a dish wash machine.

• Do not rotate the unit while dispensing water.

• Do not make efforts to open the lid. Close the lid firmly.

• Keep your hands away from steam openings otherwise you can get burns. Do not block steam openings by foreign objects.

• Do not touch hot surfaces of the thermo pot.

• Be careful while carrying the thermo pot, filled with boiling water. Do not touch the lid opening button.

• Do not carry the thermo pot, by holding the lid opening button.

• Remove the lid to pour the rest of hot water. Be careful while pouring out hot water.

• In order to avoid electric shock do not immerse the unit into water or other liquids.

• Always switch off and unplug the unit if it is not being used or before cleaning.

• Do not wash the unit in a dish wash machine.

• Clean the unit with a soft cloth.

• Do not use abrasive materials.

• Do not immerse the thermo pot into water or other liquids.

• Do not open the lid and do not pour water while boiling.

• Do not rotate the unit while dispensing water.

• Do not make efforts to open the lid. Close the lid firmly.

• Keep your hands away from steam openings otherwise you can get burns. Do not block steam openings by foreign objects.

• Do not touch hot surfaces of the thermo pot.

• Be careful while carrying the thermo pot, filled with boiling water. Do not touch the lid opening button.

• Do not carry the thermo pot, by holding the lid opening button.

• Remove the lid to pour the rest of hot water. Be careful while pouring out hot water.

• In order to avoid electric shock do not immerse the unit into water or other liquids.

• Always switch off and unplug the unit if it is not being used or before cleaning.

• Do not wash the unit in a dish wash machine.

• Clean the unit with a soft cloth.

• Do not use abrasive materials.

• Do not immerse the thermo pot into water or other liquids.

• Do not open the lid and do not pour water while boiling.

• Do not rotate the unit while dispensing water.

• Do not make efforts to open the lid. Close the lid firmly.

• Keep your hands away from steam openings otherwise you can get burns. Do not block steam openings by foreign objects.

• Do not touch hot surfaces of the thermo pot.

• Be careful while carrying the thermo pot, filled with boiling water. Do not touch the lid opening button.

• Do not carry the thermo pot, by holding the lid opening button.

• Remove the lid to pour the rest of hot water. Be careful while pouring out hot water.

• In order to avoid electric shock do not immerse the unit into water or other liquids.

• Always switch off and unplug the unit if it is not being used or before cleaning.

• Do not wash the unit in a dish wash machine.

• Clean the unit with a soft cloth.

• Do not use abrasive materials.

• Do not immerse the thermo pot into water or other liquids.

• Do not open the lid and do not pour water while boiling.

• Do not rotate the unit while dispensing water.

• Do not make efforts to open the lid. Close the lid firmly.

• Keep your hands away from steam openings otherwise you can get burns. Do not block steam openings by foreign objects.

• Do not touch hot surfaces of the thermo pot.

• Be careful while carrying the thermo pot, filled with boiling water. Do not touch the lid opening button.

• Do not carry the thermo pot, by holding the lid opening button.

• Remove the lid to pour the rest of hot water. Be careful while pouring out hot water.

• In order to avoid electric shock do not immerse the unit into water or other liquids.

• Always switch off and unplug the unit if it is not being used or before cleaning.

• Do not wash the unit in a dish wash machine.

• Clean the unit with a soft cloth.

• Do not use abrasive materials.

• Do not immerse the thermo pot into water or other liquids.

• Do not open the lid and do not pour water while boiling.

• Do not rotate the unit while dispensing water.

• Do not make efforts to open the lid. Close the lid firmly.

• Keep your hands away from steam openings otherwise you can get burns. Do not block steam openings by foreign objects.

• Do not touch hot surfaces of the thermo pot.

• Be careful while carrying the thermo pot, filled with boiling water. Do not touch the lid opening button.

• Do not carry the thermo pot, by holding the lid opening button.

• Remove the lid to pour the rest of hot water. Be careful while pouring out hot water.

• In order to avoid electric shock do not immerse the unit into water or other liquids.

• Always switch off and unplug the unit if it is not being used or before cleaning.

• Do not wash the unit in a dish wash machine.

• Clean the unit with a soft cloth.

• Do not use abrasive materials.

• Do not immerse the thermo pot into water or other liquids.

• Do not open the lid and do not pour water while boiling.

• Do not rotate the unit while dispensing water.

• Do not make efforts to open the lid. Close the lid firmly.

• Keep your hands away from steam openings otherwise you can get burns. Do not block steam openings by foreign objects.

• Do not touch hot surfaces of the thermo pot.

• Be careful while carrying the thermo pot, filled with boiling water. Do not touch the lid opening button.

• Do not carry the thermo pot, by holding the lid opening button.

• Remove the lid to pour the rest of hot water. Be careful while pouring out hot water.

• In order to avoid electric shock do not immerse the unit into water or other liquids.

• Always switch off and unplug the unit if it is not being used or before cleaning.

• Do not wash the unit in a dish wash machine.

• Clean the unit with a soft cloth.

• Do not use abrasive materials.

• Do not immerse the thermo pot into water or other liquids.

• Do not open the lid and do not pour water while boiling.

• Do not rotate the unit while dispensing water.

• Do not make efforts to open the lid. Close the lid firmly.

• Keep your hands away from steam openings otherwise you can get burns. Do not block steam openings by foreign objects.

• Do not touch hot surfaces of the thermo pot.

• Be careful while carrying the thermo pot, filled with boiling water. Do not touch the lid opening button.

• Do not carry the thermo pot, by holding the lid opening button.

• Remove the lid to pour the rest of hot water. Be careful while pouring out hot water.

• In order to avoid electric shock do not immerse the unit into water or other liquids.

• Always switch off and unplug the unit if it is not being used or before cleaning.

• Do not wash the unit in a dish wash machine.

• Clean the unit with a soft cloth.

• Do not use abrasive materials.

• Do not immerse the thermo pot into water or other liquids.

