

ENGLISH

ELECTRONIC KITCHEN SCALES VT-8007
The scale is used for weighing dry, liquid and granular products, measuring the environment temperature and displaying current time.

DESCRIPTION

1. Weighing platform
2. Weighing result display
3. Current time display
4. Temperature display
5. Measurement unit selection/hours and minutes setting button «Часы»
6. Tare button «Тара»
7. On/Off, hours/minutes selection, temperature measurement unit selection button «IT»
8. Hours/minutes setting button «Часы»
9. Battery compartment lid

SAFETY MEASURES

Before using the unit, read this instruction manual carefully and keep it for future reference.

Use the unit for intended purposes only, as specified in this manual. Mishandling the unit can lead to its breakage and cause harm to the user or damage to his/her property.

- Handle your scale with care, as it is a precision instrument, do not subject it to high or low temperatures, high humidity, never expose it to direct sunlight and do not drop the scale.
- Use the scale away from heating units.
- Do not use the scale outdoors.
- Avoid getting liquid into the scale body, this appliance is not waterproof. Do not store or use the scale in a room with high humidity (above 80%), make sure that the scale does not come into contact with water or other liquids as this may cause failure of scale indication or its damage.
- Place the scale on a flat steady surface.
- Do not put food products on the weighing platform if their weight exceeds the maximal capacity of the scale.

- This unit is not intended for usage by children, place the unit away from children.
- The unit is not intended for usage by physically or mentally disabled persons (including children) or by persons lacking experience or knowledge if they are not under supervision of a person who is responsible for their safety or if they are not instructed by this person on the usage of the unit.

- Do not leave children unattended to prevent using the unit as a toy.
- **Attention!** The unit contains a lithium battery. Prevent children from swallowing the lithium battery. If the child swallowed a battery, take him/her to the hospital immediately.
- For children safety reasons do not leave polyethylene bags, used as packaging, unattended.

- **Attention!** Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!
- Strictly follow the polarity according to the markings when installing the battery.
- Replace the battery if necessary.
- Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, remove the battery from the battery compartment and apply to any authorized service center at the contact addresses given in the warranty certificate and on the website www.vitek.ru.
- To avoid damages, transport the unit in the original package only.

- If you are not planning to use the scale for a long time, remove the battery from the battery compartment.
- Keep the unit out of reach of children and disabled persons.

- Do not leave children unattended to prevent using the unit as a toy.
- **Attention!** The unit contains a lithium battery. Prevent children from swallowing the lithium battery. If the child swallowed a battery, take him/her to the hospital immediately.
- For children safety reasons do not leave polyethylene bags, used as packaging, unattended.

- **Attention!** Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!
- Strictly follow the polarity according to the markings when installing the battery.
- Replace the battery if necessary.
- Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, remove the battery from the battery compartment and apply to any authorized service center at the contact addresses given in the warranty certificate and on the website www.vitek.ru.
- To avoid damages, transport the unit in the original package only.

- If you are not planning to use the scale for a long time, remove the battery from the battery compartment.
- Keep the unit out of reach of children and disabled persons.

- Do not leave children unattended to prevent using the unit as a toy.
- **Attention!** The unit contains a lithium battery. Prevent children from swallowing the lithium battery. If the child swallowed a battery, take him/her to the hospital immediately.
- For children safety reasons do not leave polyethylene bags, used as packaging, unattended.

- **Attention!** Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!
- Strictly follow the polarity according to the markings when installing the battery.
- Replace the battery if necessary.
- Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, remove the battery from the battery compartment and apply to any authorized service center at the contact addresses given in the warranty certificate and on the website www.vitek.ru.
- To avoid damages, transport the unit in the original package only.

- If you are not planning to use the scale for a long time, remove the battery from the battery compartment.
- Keep the unit out of reach of children and disabled persons.

- Do not leave children unattended to prevent using the unit as a toy.
- **Attention!** The unit contains a lithium battery. Prevent children from swallowing the lithium battery. If the child swallowed a battery, take him/her to the hospital immediately.
- For children safety reasons do not leave polyethylene bags, used as packaging, unattended.

- **Attention!** Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!
- Strictly follow the polarity according to the markings when installing the battery.
- Replace the battery if necessary.
- Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, remove the battery from the battery compartment and apply to any authorized service center at the contact addresses given in the warranty certificate and on the website www.vitek.ru.
- To avoid damages, transport the unit in the original package only.

- If you are not planning to use the scale for a long time, remove the battery from the battery compartment.
- Keep the unit out of reach of children and disabled persons.

- Do not leave children unattended to prevent using the unit as a toy.
- **Attention!** The unit contains a lithium battery. Prevent children from swallowing the lithium battery. If the child swallowed a battery, take him/her to the hospital immediately.
- For children safety reasons do not leave polyethylene bags, used as packaging, unattended.

- **Attention!** Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!
- Strictly follow the polarity according to the markings when installing the battery.
- Replace the battery if necessary.
- Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, remove the battery from the battery compartment and apply to any authorized service center at the contact addresses given in the warranty certificate and on the website www.vitek.ru.
- To avoid damages, transport the unit in the original package only.

- If you are not planning to use the scale for a long time, remove the battery from the battery compartment.
- Keep the unit out of reach of children and disabled persons.

- Do not leave children unattended to prevent using the unit as a toy.
- **Attention!** The unit contains a lithium battery. Prevent children from swallowing the lithium battery. If the child swallowed a battery, take him/her to the hospital immediately.
- For children safety reasons do not leave polyethylene bags, used as packaging, unattended.

- **Attention!** Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!
- Strictly follow the polarity according to the markings when installing the battery.
- Replace the battery if necessary.
- Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, remove the battery from the battery compartment and apply to any authorized service center at the contact addresses given in the warranty certificate and on the website www.vitek.ru.
- To avoid damages, transport the unit in the original package only.

- If you are not planning to use the scale for a long time, remove the battery from the battery compartment.
- Keep the unit out of reach of children and disabled persons.

- Do not leave children unattended to prevent using the unit as a toy.
- **Attention!** The unit contains a lithium battery. Prevent children from swallowing the lithium battery. If the child swallowed a battery, take him/her to the hospital immediately.
- For children safety reasons do not leave polyethylene bags, used as packaging, unattended.

- **Attention!** Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!
- Strictly follow the polarity according to the markings when installing the battery.
- Replace the battery if necessary.
- Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, remove the battery from the battery compartment and apply to any authorized service center at the contact addresses given in the warranty certificate and on the website www.vitek.ru.
- To avoid damages, transport the unit in the original package only.

- If you are not planning to use the scale for a long time, remove the battery from the battery compartment.
- Keep the unit out of reach of children and disabled persons.

- Do not leave children unattended to prevent using the unit as a toy.
- **Attention!** The unit contains a lithium battery. Prevent children from swallowing the lithium battery. If the child swallowed a battery, take him/her to the hospital immediately.
- For children safety reasons do not leave polyethylene bags, used as packaging, unattended.

- **Attention!** Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!
- Strictly follow the polarity according to the markings when installing the battery.
- Replace the battery if necessary.
- Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, remove the battery from the battery compartment and apply to any authorized service center at the contact addresses given in the warranty certificate and on the website www.vitek.ru.
- To avoid damages, transport the unit in the original package only.

- If you are not planning to use the scale for a long time, remove the battery from the battery compartment.
- Keep the unit out of reach of children and disabled persons.

- Do not leave children unattended to prevent using the unit as a toy.
- **Attention!** The unit contains a lithium battery. Prevent children from swallowing the lithium battery. If the child swallowed a battery, take him/her to the hospital immediately.
- For children safety reasons do not leave polyethylene bags, used as packaging, unattended.

- **Attention!** Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!
- Strictly follow the polarity according to the markings when installing the battery.
- Replace the battery if necessary.
- Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, remove the battery from the battery compartment and apply to any authorized service center at the contact addresses given in the warranty certificate and on the website www.vitek.ru.
- To avoid damages, transport the unit in the original package only.

- If you are not planning to use the scale for a long time, remove the battery from the battery compartment.
- Keep the unit out of reach of children and disabled persons.

- Do not leave children unattended to prevent using the unit as a toy.
- **Attention!** The unit contains a lithium battery. Prevent children from swallowing the lithium battery. If the child swallowed a battery, take him/her to the hospital immediately.
- For children safety reasons do not leave polyethylene bags, used as packaging, unattended.

- **Attention!** Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!
- Strictly follow the polarity according to the markings when installing the battery.
- Replace the battery if necessary.
- Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, remove the battery from the battery compartment and apply to any authorized service center at the contact addresses given in the warranty certificate and on the website www.vitek.ru.
- To avoid damages, transport the unit in the original package only.

- If you are not planning to use the scale for a long time, remove the battery from the battery compartment.
- Keep the unit out of reach of children and disabled persons.

- Do not leave children unattended to prevent using the unit as a toy.
- **Attention!** The unit contains a lithium battery. Prevent children from swallowing the lithium battery. If the child swallowed a battery, take him/her to the hospital immediately.
- For children safety reasons do not leave polyethylene bags, used as packaging, unattended.

- **Attention!** Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!
- Strictly follow the polarity according to the markings when installing the battery.
- Replace the battery if necessary.
- Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, remove the battery from the battery compartment and apply to any authorized service center at the contact addresses given in the warranty certificate and on the website www.vitek.ru.
- To avoid damages, transport the unit in the original package only.

- If you are not planning to use the scale for a long time, remove the battery from the battery compartment.
- Keep the unit out of reach of children and disabled persons.

- Do not leave children unattended to prevent using the unit as a toy.
- **Attention!** The unit contains a lithium battery. Prevent children from swallowing the lithium battery. If the child swallowed a battery, take him/her to the hospital immediately.
- For children safety reasons do not leave polyethylene bags, used as packaging, unattended.

- **Attention!** Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!
- Strictly follow the polarity according to the markings when installing the battery.
- Replace the battery if necessary.
- Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, remove the battery from the battery compartment and apply to any authorized service center at the contact addresses given in the warranty certificate and on the website www.vitek.ru.
- To avoid damages, transport the unit in the original package only.

- If you are not planning to use the scale for a long time, remove the battery from the battery compartment.
- Keep the unit out of reach of children and disabled persons.

- Do not leave children unattended to prevent using the unit as a toy.
- **Attention!** The unit contains a lithium battery. Prevent children from swallowing the lithium battery. If the child swallowed a battery, take him/her to the hospital immediately.
- For children safety reasons do not leave polyethylene bags, used as packaging, unattended.

- **Attention!** Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!
- Strictly follow the polarity according to the markings when installing the battery.
- Replace the battery if necessary.
- Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, remove the battery from the battery compartment and apply to any authorized service center at the contact addresses given in the warranty certificate and on the website www.vitek.ru.
- To avoid damages, transport the unit in the original package only.

- If you are not planning to use the scale for a long time, remove the battery from the battery compartment.
- Keep the unit out of reach of children and disabled persons.

«oz» – weight of food product(s) in ounces;
«kg» – weight of product(s) in kilograms.

Notes:

- To weigh liquid and granular products, place an appropriate container on the platform (1) and then set the display indicators to zero by touching the «Tara» button (6). The tare symbol «♦» will appear in the left part of the display (2) if the container weight is more than 500 g.
- Put the ingredient(s) on the weighing platform (1). The weight of the ingredient(s) will be shown on the display (2), according to the selected weight measurement units.
- To switch the scale off, remove the ingredients from the platform (1) and touch the «IT» button (7).

Note:
– Symbols «EEEE» on the display (2) indicate exceeding of the scale maximal capacity of 10 kg, remove food products from the scale immediately to prevent its damage.

– The symbol «UnSt» on the display (3) indicates that the weight of the products on the scale is unstable or the scale is placed on an unsteady surface. Place the scale on a flat steady surface.

– The scale will be switched off automatically after 2 minutes of non-operation.

TARE FUNCTION
If you want to measure the weight of several ingredients without removing the previous ones from the platform (1), proceed as follows.

1. Place the scale on a flat surface.
2. To switch the scale on, touch the «IT» button (7), the symbol «0» will appear on the display.

Notes:
– The symbol «0» shown on the display (2) indicates that you can start weighing. If the indications on the display (2) are not equal to zero, touch the «Tara» button (6), the indications will be set to zero.

3. Select the required weight measurement units by consecutively touching the button (5) «g», «lb», «oz» or «kg».
4. Put the required quantity of the first ingredient on the platform (1), checking the numerical indication on the display (2).

5. Press the «Tara» button (6), the weight indication on the display (2) will be set to zero.
6. Put the required amount of the second ingredient on the platform (1), checking the numerical indication on the display (2).

7. Repeat steps 4-6 for consequent weighing of the remaining ingredients.
8. Adding ingredients is available until the max. capacity (10 kg).
9. Remove all the ingredients from the platform, the display (2) will show the total weight of all ingredients.
10. To switch the scale off, touch the «IT» button (7).

Note:
– When weighing ingredients consecutively, the tare symbol «♦» appears on the display (2) if the weight of ingredient(s) is more than 500 g.

6. Put the required amount of the second ingredient on the platform (1), checking the numerical indication on the display (2).
7. Repeat steps 4-6 for consequent weighing of the remaining ingredients.
8. Adding ingredients is available until the max. capacity (10 kg).
9. Remove all the ingredients from the platform, the display (2) will show the total weight of all ingredients.
10. To switch the scale off, touch the «IT» button (7).

Notes:
– Symbols «EEEE» on the display (2) indicate exceeding of the scale maximal capacity of 10 kg, remove food products from the scale immediately to prevent its damage.

– The symbol «UnSt» on the display (3) indicates that the weight of the products on the scale is unstable or the scale is placed on an unsteady surface. Place the scale on a flat steady surface.

– In the successive weighing mode the scale will be switched off automatically after 2 minutes of non-operation.

– If the scale works improperly, try switching the power off: to do this, open the battery compartment lid (9) and remove the battery. After a while insert the battery to its place and switch the scale on by touching the «IT» button (7).

TEMPERATURE INDICATIONS

If there is a battery in the battery compartment, the temperature indication is permanently shown on the display (4) regardless of whether the scale is switched on or not.

Temperature measurement unit selection button
Room temperature is shown on the display (4) either in degree Celsius (°C) or in degree Fahrenheit (°F).
You can change the temperature measurement units only when the scale is switched on.

For this switch the scale on by touching the «IT» button and then touch and hold the «IT» button for more than 4 seconds.

– When you install or replace the battery, the temperature measurement units «°C» are used (by default).

CLEANING AND CARE

- Clean the scale with a soft, slightly damp cloth and then wipe it dry.
- Never use abrasives or solvents.
- Do not immerse the scale into water or any other liquids, do not wash it in a dishwashing machine.

- Keep the scale in a dry cool place away from reach of children and disabled persons.

IMPORTANT

Electromagnetic compatibility
The electronic scale can be sensitive to electromagnetic emission of other units located in close proximity (such as mobile phones, portable radio transmitters, radio controllers and microwave ovens). If signs of such emission appear (false or inconsistent data indication on the display), relocate the scale or switch off the source of interference for some time.

DELIVERY SET

1. Scale – 1 pc.
2. CR2032 battery – 1 pc.
3. Instruction manual – 1 pc.

TECHNICAL SPECIFICATIONS*
CR2032-type battery – 3 V x 1 x 1
Maximum capacity: 10 kg
Scale division value*: 1 g

* For household kitchen scales the extent of error is not specified, so it is not stated in technical specifications.
Such scales have pattern approval certificates which confirm the measurement accuracy. Moreover, specially appointed organizations perform annual "measurement accuracy confirmation" (calibration) to confirm the scales' accuracy.

RECYCLING

For environment protection do not throw out the unit and the batteries with usual household waste. After the unit reaches its service life expiration, apply to the specialized center for further recycling.
The waste generated during the disposal of the unit is subject to mandatory collection and consequent disposal in the prescribed manner.
For further information about recycling of this product apply to a local municipal administration, a disposal service or to the shop where you purchased this product.

The manufacturer preserves the right to change design, structure and specifications not affecting general principles of the unit operation without a preliminary notification due to which insignificant differences between the manual and product may be observed. If the user reveals such differences, please report them via e-mail info@vitek.ru for receipt of an updated manual.

Unit operating life is 3 years

Guarantee
Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

CE This product conforms to the EMC Directive 2014/30/EU and to the Low Voltage Directive 2014/35/EU.

РУССКИЙ

ЭЛЕКТРОННЫЕ КУХОННЫЕ ВЕСЫ VT-8007

Мультифункциональные весы используются для определения веса сухих, жидких и сыпучих продуктов, измерения температуры окружающей среды и отображения показаний текущего времени.

ОПИСАНИЕ

1. Платформа для взвешивания продуктов
2. Дисплей отображения результатов взвешивания
3. Дисплей отображения текущего времени
4. Температурный индикатор
5. Кнопка выбора единиц измерения/установки часов, минут «Часы»
6. Кнопка сброса тары «Тара»
7. Кнопка включения/выключения, подбора единицы выбора часов/минут, выбора единиц измерения температуры «IT»
8. Кнопка установки времени «Часы», час/мин/сек
9. Крышка батарейного отсека

Перед началом эксплуатации устройства внимательно прочитайте настоящую инструкцию по эксплуатации и сохраните её для использования в качестве справочного материала.

Используйте устройство только по его прямому назначению, как изложено в данной инструкции. Неправильное обращение с устройством может привести к его поломке, причиняя вред пользователю или его имуществу.

Обращайтесь с весами аккуратно, как с любым измерительным прибором, не подвергайте весы воздействию высокой или низкой температур, повышенной влажности, не подвергайте устройству воздействию прямых солнечных лучей и не роняйте весы.

- Используйте весы вдали от нагревательных приборов.
- Не используйте весы вне помещений.
- Не допускайте попадания жидкости внутрь корпуса весов, данное устройство не является водонепроницаемым. Запрещается оставлять или использовать весы в местах с повышенной влажностью (более 80%), не допускайте контакта корпуса весов с водой или с другими жидкостями во избежание нарушения правильности показаний весов или выхода прибора из строя.
- Размещайте весы на ровной устойчивой поверхности.
- Запрещается на платформу для взвешивания помещать продукты, вес которых превышает максимально допустимый предел взвешивания.

Данное устройство предназначено для использования детьми, размещайте устройство в местах, недоступных для детей.

Прибор не предназначен для использования лицами (включая детей) с пониженными функциональными возможностями или ограниченными способностями или при отсутствии у них опыта или знаний, если они не находятся под контролем или не проинструктированы об использовании прибора лицами, ответственными за их безопасность.

Осуществляйте надзор за детьми, чтобы не допустить использования устройства в качестве игрушки.

Внимание! Устройство содержит литиевый элемент питания. Не допускайте попадания литиевого элемента питания в пищевод ребенка. Если ребенок проглотил электрическую батарейку, нужно немедленно показать его врачу.

Из соображений безопасности детей не оставляйте полиэтиленовые пакеты, используемые в качестве упаковки, без присмотра.

Внимание! Не разрешайте детям играть с полиэтиленовыми пакетами или упаковочной пленкой. Опасность удушья!

При установке элемента питания строго соблюдайте полярность в соответствии с обозначениями.

Одновременно меняйте элемент питания.

Запрещается самостоятельно ремонтировать прибор. Не разбирайте прибор самостоятельно, при возникновении любых неисправностей извлеките элемент питания из батарейного отсека и обратитесь в любой авторизованный сервисный центр по контактным адресам, указанным в гарантийном талоне и на сайте www.vitek.ru.

Во избежание повреждений перевезите устройство только в заводской упаковке, если вы не будете пользоваться весами в течение длительного периода времени, необходимо извлечь элемент питания из батарейного отсека.

Храните устройство в месте, недоступном для детей и людей с ограниченными возможностями.

УСТРОЙСТВО ПРЕДНАЗНАЧЕНО ТОЛЬКО ДЛЯ ДОМАШНЕГО ИСПОЛЬЗОВАНИЯ В ЖИЛЫХ ПОМЕЩЕНИЯХ. ЗАПРЕЩАЕТСЯ КОММЕРЧЕСКОЕ ИСПОЛЬЗОВАНИЕ И ИСПОЛЬЗОВАНИЕ УСТРОЙСТВА В ПРОИЗВОДСТВЕННЫХ ЗОНАХ И РАБОЧИХ ПОМЕЩЕНИЯХ.

ИСПОЛЬЗОВАНИЕ ВЕСОВ
После транспортировки или хранения устройства при комнатной температуре необходимо выдержать его при комнатной температуре не менее трёх часов.

- Достаньте весы из упаковки, удалите любые рекламные наклейки, мажущие роботе устройства.
- Подготовьте платформу для взвешивания (1) и корпус весов мягкой, слегка влажной тканью, после чего вытрите насухо.

Установка элементов питания
ВНИМАНИЕ!
– При установке элементов питания строго соблюдайте полярность элементов питания. Чтобы избежать повреждения весов, прочтите приведенные ниже инструкции:

- используйте только элемент питания типоразмера «CR2032»;
- извлеките элемент питания, прежде чем пытаться установить элемент питания;
- устанавливайте элемент питания, строго соблюдая полярность;
- вынимайте элемент питания, если устройство не будет использоваться в течение длительного времени;
- одновременно меняйте питание;
- сдвигайте элемент питания в специализированные пункты для их дальнейшей утилизации;
- не допускайте замыкания контактов питания.

Откройте крышку батарейного отсека (9) и установите элемент питания CR2032 (входит в комплект поставки), строго соблюдая полярность.

Установите крышку батарейного отсека (9) на место.

После установки элемента питания об утилизации элементов питания в батарейном отсеке. В этом случае устанавливается изолирующая прокладка.

При наличии изолирующей прокладки в батарейном отсеке откройте крышку батарейного отсека, извлеките элемент питания и установите крышку батарейного отсека на место.

Замена элемента питания
• При низком напряжении элемента питания контрастность показаний на дисплее (2, 3, 4) уменьшается, а на дисплее (2) появляется символ «Lo».

Если весы отключились из-за низкого заряда батареи или на дисплее (2) отображается символ «Lo», замените элемент питания. Для этого откройте крышку батарейного отсека (9), извлеките элемент питания, установите новый элемент питания, строго соблюдая полярность, затем закройте крышку батарейного отсека.

Если весы не используются продолжительное время, извлеките элемент питания из батарейного отсека.

Кнопки управления
Кнопки управления весов сенсорные (чувствительные к касанию), поэтому для срабатывания кнопка достаточно слегка прикоснуться к обозначенному месту для каждой кнопки.

ОТБРАЖЕНИЕ ТЕКУЩЕГО ВРЕМЕНИ
При наличии в батарейном отсеке элемента питания показаний текущего времени постоянно отображаются на дисплее (3) вне зависимости от того, включены весы или нет.

Настройка часов
1. Нажмите и удерживайте кнопку «Часы» до тех пор, пока показания часов на дисплее (3) не начнут мигать.

Примечание:
– При установке или замене элемента питания на дисплее (3) отобразится время «AM12:00», показывая часов при этом также начнет мигать.

– Если в течение 10 секунд низкая кнопка не была нажата, показывая на дисплее (3) будет гудеть постоянно.

2. Последовательно касаясь кнопки «Часы», устанавливайте текущее время «часы». Для ввода показаний часа коснитесь кнопки «IT». После ввода показаний часа начнут мигать показания минут.

Примечание:
– В данной модели используется 12-часовой формат отображения текущего времени. При установке часового показателя час будет отображаться в виде символов «AM/PM», которые будут поочередно появляться с левой стороны дисплея (3). «AM» – время до полудня, «PM» – время после полудня.

3. Последовательно касаясь кнопки «Часы» установите текущее время «минуты». Для ввода показаний минут коснитесь кнопки «IT».

Настройка текущего времени закончена.

ВЗВЕШИВАНИЕ ИНГРЕДИЕНТОВ
Установите весы на ровную устойчивую поверхность.

1. Для включения весов прикоснитесь к кнопке (7) «IT», сначала на дисплее появятся символы «NEFL», а затем на дисплее появится символ «0».

Примечание:
– Обращение на дисплее (2) символа «0» указывает на то, что можно начинать взвешивание.

– При установке, или замене элемента питания будут использоваться единицы измерения веса «g» (по умолчанию).

– Если показания на дисплее (2) не равны нулю, прикоснитесь к кнопке (6) «Tara», показания обнулятся. Последовательным касанием кнопки (5) «g», «lb», «oz» выберите необходимые единицы измерения веса, на дисплее (2) отобразятся следующие символы:

«g» – вес продукта (продуктов) в граммах;

«lb» – вес продукта (продуктов) в фунтах и унциях;

