

Wireless Noise Canceling Stereo Headset

Reference Guide 參考指南

참고 설명서

Справочник

دليل مراجعي








N Bluetooth®

WF-SP700N

©2018 Sony Corporation
Printed in Malaysia
4-730-307-3(2)

4 7 3 0 3 0 7 3 1 (2)
http://www.sony.net/

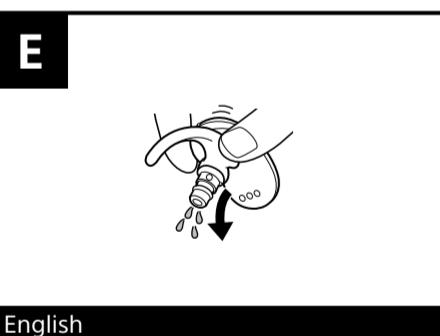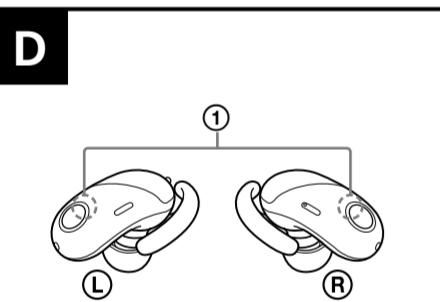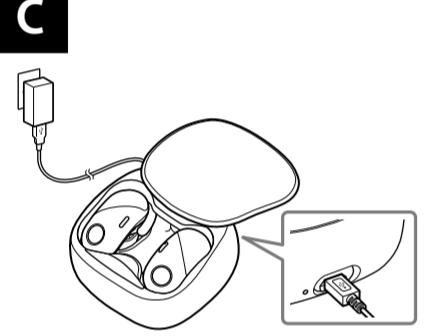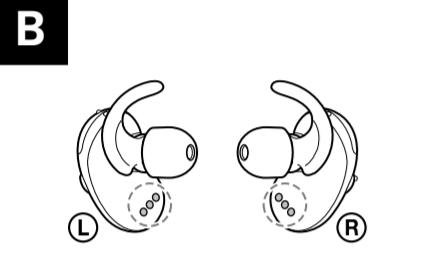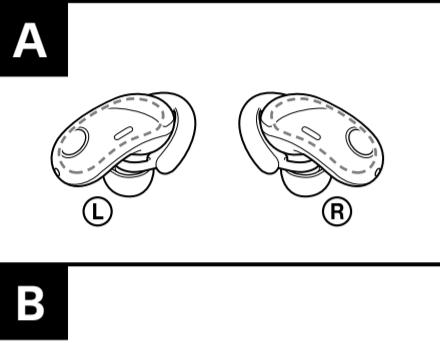

English

Headset: WF-SP700NL, WF-SP700NR

Charging case: BC-WFSP700N

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

Do not expose the batteries (battery pack or batteries installed) to excessive heat such as sunshine, fire or the like for a long time.

Do not dismantle, open or shred secondary cells or batteries. In the event of a cell leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Secondary cells and batteries need to be charged before use. Always refer to the manufacturer's instructions or equipment manual for proper charging instructions. After extended periods of storage, it may be necessary to charge and discharge the cells or batteries several times to obtain maximum performance.

Safety Information

The power bank will generate heat when charging.

Always charge in a well ventilated area. Do not charge under pillows, blankets or on flammable surfaces.

Keep the power bank away from heat sources, direct sunlight, combustible gas, humidity, water or other liquids.

Do not disassemble, open, microwave, incinerate, paint insert foreign objects into the power bank.

Do not subject the power bank to mechanical shock such as dropping or impact. Avoid dropping or placing heavy object on the power bank.

Do not short-circuit the power bank or store it in a receptacle where it may be short-circuited by other metallic or conductive objects.

Do not operate the power bank if it has been wet or otherwise damaged, to prevent against electric shock, explosion and/or injury. Contact the dealer or authorized agent.

Power Bank Usage by children should be supervised.

Please read the operating instructions, including charging instructions and information on the minimum and maximum operating temperatures, supplied with this power bank.

The nameplate and important information concerning safety are located on the bottom exterior of charging case.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license.

If the problem persists even after the resetting operation above, initialize the unit as follows.

First, remove the unit from the charging case. Hold down the button on the L (left) and R (right) sides turn off. Then hold down the buttons on the L and R sides simultaneously for more than 15 seconds. The indicator (blue) flashes 4 times, and the unit is reset to the factory settings. All pairing information is deleted.

After the unit is initialized, it may not connect to your iPhone or computer. In this case, delete the pairing information of the unit from the iPhone or computer, and then pair them again.

What is noise canceling?

The noise canceling circuit actually senses outside noise with built-in microphones and sends an equal-but opposite canceling signal to the unit.

The noise canceling effect may not be pronounced in a very quiet environment, or some noise may be heard.

Depending on how you wear the unit, the noise canceling effect may vary or a beeping sound (howling) may occur. In these cases, take off the unit and put on again.

The noise canceling function works for noise in the low frequency band primarily. Although noise is reduced, it is not canceled completely.

When you use the unit in a train or a car, noise may occur depending on train conditions.

Mobile phones may cause interference and noise. Should this occur, locate the unit further away from the mobile phone.

Do not cover the microphones of the unit (①) with your hands. The noise canceling function or the Ambient Sound Mode may not work properly, or a beeping sound (howling) may occur. In these cases, take your hands off of the microphones of the unit (Fig. ④).

On wearing the unit

After use, remove the headphones slowly.

Because the headphones are of a high density enclosure, forcing them against your ears may result in eardrum damage.

Pressing the headphones against your ears may produce a diaphragm click sound. This is not a malfunction.

Splash proof performance of this unit

The charging case is not splash proof.

The splash proof specification of this unit are equivalent to IPX4¹ in IEC 60529 "Degrees of protection against ingress of water (IP Code)", which specifies the degree of protection provided against the entry of water. However, the unit cannot be used in water. Unless the unit is used correctly, water may get into the unit and cause fire, electrocution, or malfunctions.

Note that the use of this accessory with iPod or iPhone may affect wireless performance.

Android is a trademark of Google Inc.

Other trademarks and trade names are those of their respective owners.

Precautions

On BLUETOOTH® communications

Bluetooth wireless technology operates within a range of about 10 m. Maximum communication range may vary depending on obstacles (human body, metal, wall, etc.) or electromagnetic environment.

Bluetooth communications may be disabled, or noise or audio dropout may occur under the following conditions.

- There is a human body between the unit and the Bluetooth device.

This situation may be improved by placing the Bluetooth device facing the unit or removing obstacles.

- There are obstacles such as metal or a wall, between the unit and the Bluetooth device.

- A Wi-Fi device or microwave oven is in use, or microwaves are emitted near the unit.

- The antenna is built into the unit as illustrated in the dotted line (Fig. ⑤).

The sensitivity of the Bluetooth communications will improve by removing any obstacles between the connected Bluetooth device and the antenna of this unit.

Because Bluetooth devices and Wi-Fi (IEEE802.11b/g/n) use the same frequency band (2.4 GHz), interference may occur resulting in noise or audio dropout or communications being disabled if the unit is used near a Wi-Fi device. In such a case, perform the following.

- Use this unit at least 10 m away from the Wi-Fi device.

- If this unit is used within 10 m of a Wi-Fi device, turn off the Wi-Fi device.

- Install this unit and the Bluetooth device as near to each other as possible.

Microwaves emitted from a Bluetooth device may affect the operation of electronic medical devices. Turn off the unit or remove the Bluetooth devices in the following locations, as it may cause an accident:

- Where inflammable gas is present, in a hospital, or a petrol station.

- Near automatic doors or a fire alarm.

Due to the characteristic of the wireless technology, the sound played on this unit is delayed from the sound and music played on the sending device. Therefore, the image and sound may be misaligned when viewing a movie or playing a game.

Do not use the unit on an airplane. Radio waves may affect instruments, causing an accident due to malfunction.

This unit supports security capabilities that comply with the Bluetooth standard to provide a secure connection when the Bluetooth wireless technology is used, but security may not be enough depending on the setting. Be careful when communicating using Bluetooth wireless technology.

Keep earbuds clean. To clean the earbuds, wash them with a mild detergent solution.

Do not subject the unit to excessive shock.

Clean the unit with a soft dry cloth.

Do not expose the unit to water.

If the unit is cracked or deformed, refrain from using the unit near water or contact your nearest Sony dealer.

To maintain splash proof performance

Note the following cautions carefully and use the unit correctly.

• Do not splash water forcibly against the cylindrical part from which sound is emitted. This may deteriorate the splash proof performance of the unit.

• Do not put the unit in water or use it in a humid place such as a bathroom.

• Do not drop the unit or expose it to mechanical shock. Doing so may deform or damage the unit, resulting in deterioration of splash proof performance.

• Wipe off with a soft dry cloth any water that gets on the unit. If water remains in the earbud holes, the sound may seem low or not be available at all. In this case, remove the earbuds, face the sound conduit downward, and shake the sound conduit a couple of times (Fig. ⑥).

• Do not leave the unit with water on it in cold places as the water may freeze. In order to avoid malfunctions, make sure that you wipe off water after use.

• If the unit is cracked or deformed, refrain from using the unit near water or contact your nearest Sony dealer.

System requirements for battery charge using USB

USB AC adaptor

A commercially available USB AC adaptor capable of feeding in more than 0.5 A (500 mA)

Personal Computer

(As of January 2018)

Personal computer with pre-installed with any of the following operating systems and USB port:

Operating Systems:

(when using Windows)

Windows® 10 Home / Windows® 10 Pro

Windows® 8.1 / Windows® 8 Pro

Windows® 8 / Windows® 8 Pro

Windows® 7

Home Basic / Home Premium / Professional / Ultimate

(when using Mac)

Mac OS X (version 10.9 or later)

Design and specifications are subject to change without notice.

繁體中文

耳機: WF-SP700NL, WF-SP700NR

充電盒: BC-WFSP700N

請勿將本系統安放在充電櫃或壁掛等裝置封閉處。

請勿將電池(安裝的電池組或電池)長時間暴露在如陽光或火源等類似過熱的地方。

銘牌和有關安全的重要資訊位於充電盒外側底部。

經型式認證合規之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更或修改其效能。

因應各項規範所適用的液體種類

適用: 淡水、自來水、汗水

不適用: 非上述之液體(例如: 肥皂水、清潔劑、含沐浴劑的洗髮精、溫泉水、泳池水、海水等)

USB交流電源供應器

一個可供 500 mA (500 mA) 以上的市售 USB 交流電源轉接器。

個人電腦

(截至 2018 年 1 月)

預先安裝以下作業系統和 USB埠的個人電腦:

作業系統:

(使用 Windows)

Windows® 10 Home / Windows® 10 Pro

Windows® 8.1 / Windows® 8.1 Pro

Windows® 8 / Windows® 8 Pro

Windows® 7

Home Basic / Home Premium / Professional / Ultimate

(使用 Mac)

Mac OS X (10.9 或更新的版本)

設計和規格若有變更，恕不另行通知。

僅適用於台灣

廢電池請回收

Bluetooth®字樣與商標為Bluetooth SIG, Inc. 所擁有的註冊商標; Sony Corporation對此類標記的使用已獲得授權。

NFC標示為NFC Forum, Inc. 在美國和其他國家的註冊商標。

Mac OS X, iPhone和iPod touch是Apple Inc. 在美國和其他國家註冊的商標。

Optional replacement earbuds can be ordered from your nearest Sony dealer.

Optional replacement arc supporters can be ordered from your nearest authorized Sony retailer.

其他標記和商標稱為其所有人所擁有。

On the use of calling apps for smartphones and tablets

The situation may be improved by setting the sound quality mode to "priority on stable connection." For details, refer to the Help Guide.

The situation may be improved by changing the wireless playback quality settings or fixing the wireless playback mode to SBC on the transmitting device. For details, refer to the operating instructions supplied with the transmitting device.

If you are using a smartphone, the situation may be improved by shutting down unnecessary applications or rebooting the smartphone.

Android™的商標或商號

Android™的字樣與商標為Google Inc. 所擁有的註冊商標; Sony Corporation對此類標記的使用已獲得授權。

On the use of calling apps for smartphones and tablets

The situation may be improved by setting the sound quality mode to "priority on stable connection." For details, refer to the Help Guide.

The situation may be improved by changing the wireless playback quality settings or fixing the wireless playback mode to SBC on the transmitting device. For details, refer to the operating instructions supplied with the transmitting device.

On the use of calling apps for smartphones and tablets

