


## A Package Contents

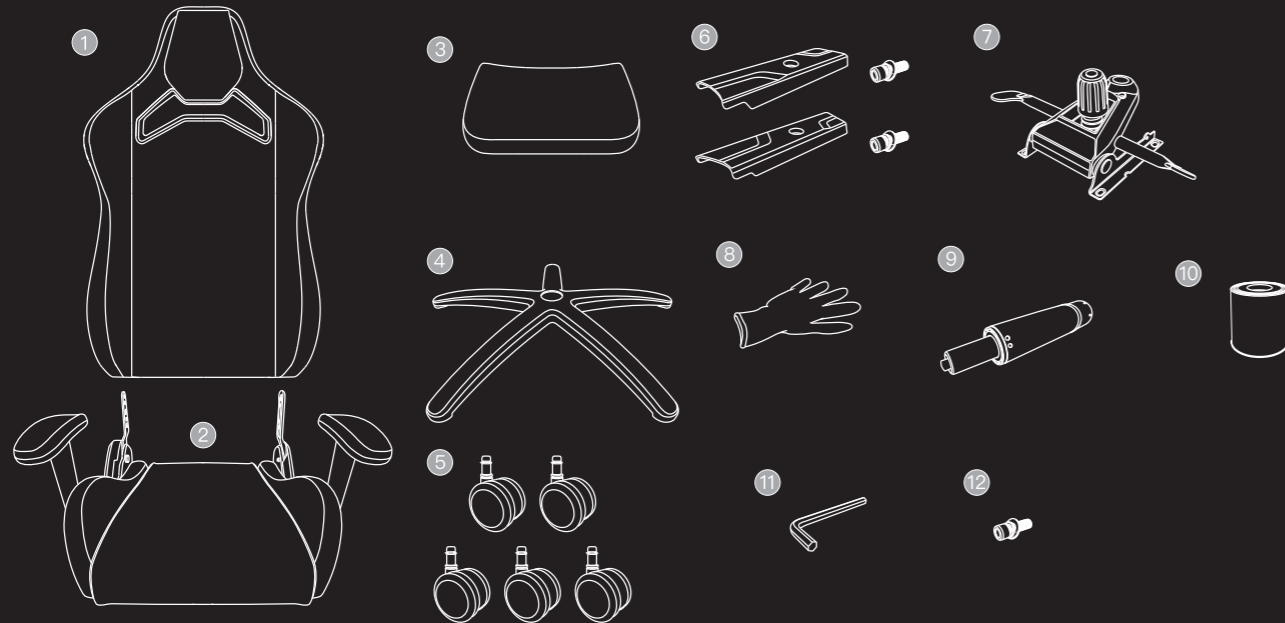


1. Backrest	5. Wheels	9. Hydraulic lift cylinder
2. Seat base	6. Side covers with bolts	10. Telescoping cover
3. Lumbar cushion	7. Control unit	11. Hex Key
4. Wheel base	8. Gloves	12. Spare bolt


**NOTE:** The illustrations are for reference only and may differ from your actual chair in appearance and features.

## B Assembling your chair


Put on the gloves before installation.

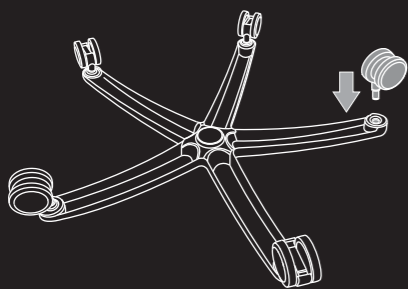


1 One by one, insert and push the wheels into the base.

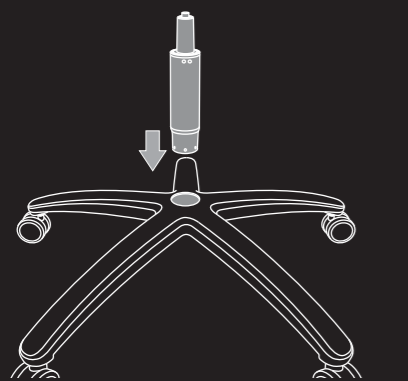

2 Insert the hydraulic lift cylinder into the center hole of the base. Remove the red protective cap on top if there was any.

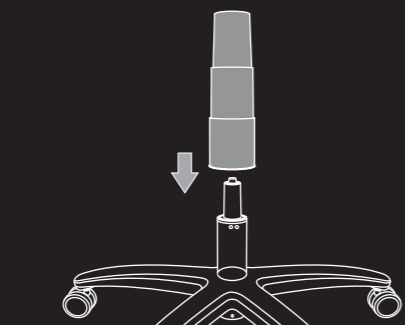


3 Place the telescoping cover on the top of the hydraulic lift cylinder.

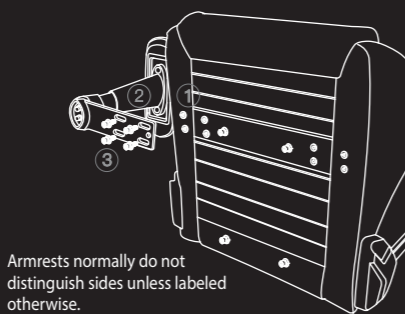


Armrests normally do not distinguish sides unless labeled otherwise.

For models with armrest pre-assembled, please skip this step.

4 Remove the pre-assembled bolts and washers (1 & 3). Place the 4 large washers (1) between the armrest mounting bar (2) and the seat base. Hold the armrest in place, then insert and tighten all 4 bolts (3). Use the hex key to tighten them all, and repeat on the other side.

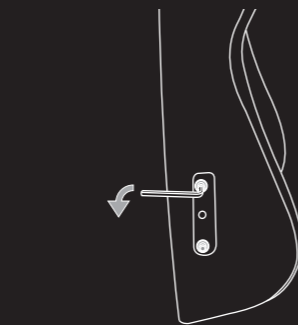


5 Use the hex key to remove the pre-assembled bolts and washers from the backrest.

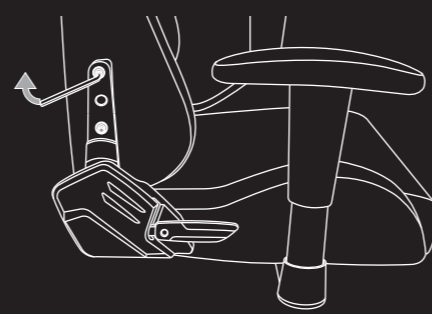


6 Remove the protective foam covers from the brackets of the seat base. Then position the backrest carefully between the brackets. Insert and attach the 4 bolts (2 on each side) you removed in step 5 by hand first. Then use the hex key to tighten them. Start with the two bolts on the top of each side, then the bottom two.

## C Installing the Lumbar cushion

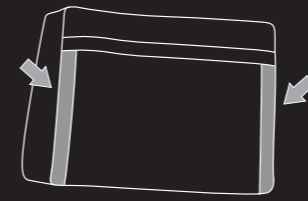

The chair and the Lumbar cushion are designed with Velcro fasteners. Attach the Lumbar cushion to the chair using the Velcro fasteners.

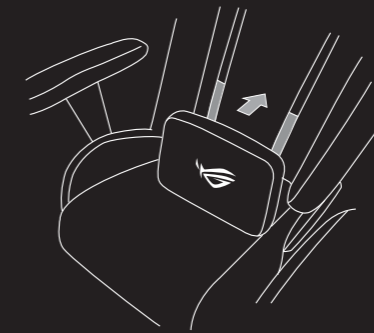


## D Lighting up your chair

1. Place your power bank into the packet at the back of the chair.
2. Connect the USB Type-A connector to your power bank.

The packet is attached to your chair with Velcro. You can easily remove and take it away.



## E Other features

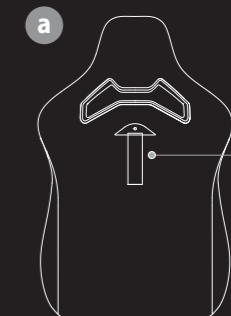

Hanger at the back of the chair for hanging your bags, clothes, cups and more.  
Maximum load: 2kg  
Please do not hang items over 2kg.

## b Using the RGB controller

Rating: 5V=1A



**DO NOT** remove the non-detachable controller as this will void the warranty.

1. Aura RGB Lighting: On / Effect / Off  
Press repeatedly to power the Aura RGB LEDs on or off, or cycle through the current 7 effects: (1) rainbow (2) breathing (3) color cycle (4) wave (5) glowing Yo-Yo (6) strobing (7) static  
Press the Aura RGB Lighting button for 3 seconds to terminate the lighting.  
Press it to wake up again or reconnect your powerbank will keep its previous setting.

**NOTE:** Your powerbank may automatically adjust its output when the lighting is terminated. Disconnect and reconnect it if the Aura RGB Lighting cannot wake up after toggling it back on.

2. Aura RGB color  
Press repeatedly to cycle through the following 8 striking colors: (1) red (2) orange (3) yellow (4) green (5) blue (6) indigo (7) purple (8) pink

**NOTE:** This feature is only available on the following Aura RGB effects: (2) breathing (6) strobing (7) static

3. Aura RGB speed: Slow / Medium / Fast  
Press repeatedly to cycle through the following 3 color effect speeds: (1) Slow (2) Medium (3) Fast


**NOTE:** This feature is only available on the following Aura RGB effects: (1) rainbow (2) breathing (3) color cycle (4) wave (5) glowing Yo-Yo (6) strobing

4. Aura RGB brightness: 50% / 75% / 100%  
Three brightness levels. The brightness can be switch by simple tap to fit the environment lighting and preference.
5. Reset to factory mode  
Press the button (2) and button (4) simultaneously to reset your chair to its factory defaults.


F Adjustable functions



1. Armrest adjustment

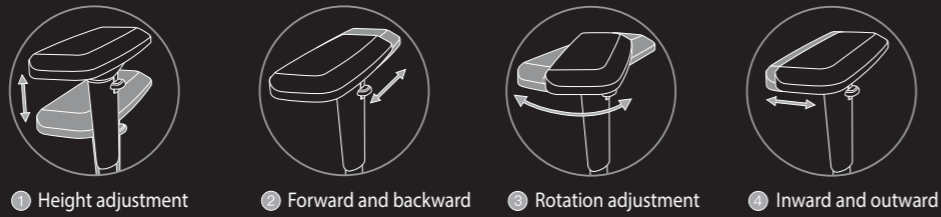

2. Headrest adjustment

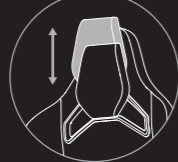

Height adjustment (7cm) Please do not excessively raise your headrest.

3. Pull up the lever and slowly lean back.



4. Chair height adjustment




5. Lock/unlock the tilt mechanism



6. Seat rockability adjustment



7. Locking caster

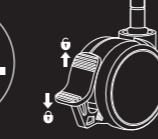

Safety Notices



- Sit in the center of the chair with your back against the backrest.
• Do not sit on the edge of the chair.
• Do not stand on the chair.
• Do not push down on the reclined backrest when a person is on it.
• Keep your hands and fingers away from the recline mechanism.
• Sit in the center of the chair with your back against the backrest.
• Do not sit on the edge of the chair.
• Do not stand on the chair.
• Do not push down on the reclined backrest when a person is on it.
• Keep your hands and fingers away from the recline mechanism.

WARNING!

- 1. This chair should only be used in a normal and non-abusive manner. We are not liable for any damages resulting from improper assembly and/or usage.
2. The maximum recommended weight load is 120KG (264.5 pounds).



警告!

- 1. 請正當使用座椅。任何由錯誤安裝或使用導致的損毀，本公司概不負責。
2. 建議最高重量為 120KG (264.5 磅)。

警告!

- 1. 請正當使用座椅。任何由錯誤安裝或使用導致的損毀，本公司概不負責。
2. 建議最高重量為 120 公斤 (264.5 磅)。

UYARI!

- 1. Bu sandalye normal bir şekilde kullanilmali, hor kullanilmamalıdır. Hatalı montaj ve/veya kullanımdan kaynaklanan hiçbir hasardan sorumlu değiliz.
2. Tavsiye edilen maksimum ağırlık yükü 120 KG'dır.

FIGYELMEZTÉSI!

- 1. A széket csak normál és nem durva módon használja. Nem vagyunk felelősek a nem megfelelő összeszerelésből és/vagy használatból származó károkért.
2. A maximális ajánlott súlyterhelés 120 KG.

AVISO!

- 1. Esta cadeira deve ser utilizada apenas de forma normal e não abusiva. Não nos responsabilizamos por quaisquer danos resultantes de montagem e/ou uso incorretos.
2. O peso máximo recomendado é de 120 KG.

OSTRZEŻENIE!

- 1. Z fotela można korzystać wyłącznie w normalny i niestwarzający zagrożenia sposób. Firma nie ponosi odpowiedzialności za jakiegokolwiek szkody wynikające z niewłaściwego montażu i/lub użytkowania.

警告:

- 1. 本製品をご使用前に、本書の注意事項・組立方法をよくお読みの上、正しくご使用ください。お客様または第三者の不適切な使用または取り扱いにより生じた故障または損害については、当社は一切の責任を負いません。

ВНИМАНИЕ!

- 1. Это кресло должно использоваться только по прямому назначению и надлежащим образом. Мы не несем ответственности за любой ущерб, причиненный в результате неправильной сборки и/или использования.

- 1. Tuto židli je dovoleno používať normálnym, nikoli hrubým spôsobom. Neneseme zodpovednosť za žiadne škody spôsobené nesprávnym sestavením a/alebo používaním.
2. Maximálny doporučený zaťaženie je 120 kg (264,5 libier).

경고!

- 1. 이 의자는 정상적이고 과도하지 않은 방식으로 사용해야 합니다. 당사는 부적절한 조립 및/또는 사용으로 인해 발생한 어떠한 손해에 대해서도 책임지지 않습니다.

AMARAN!

- 1. Kerusi ini hendaklah digunakan hanya dalam keadaan biasa dan tidak kasar. Kami tidak bertanggungjawab atas sebarang akibat daripada pemasangan dan/atau penggunaan yang salah.

VÝSTRAHA!

- 1. Táto stolička sa musí používať len normálnym a šetrným spôsobom. Nezodpovedáme za žiadne škody vyplývajúce z nesprávneho zmontovania a/alebo používania.

ADVARSE!

- 1. Stolen skal kun brukes på normal måte og ikke misbrukes. Vi er ikke ansvarlige for eventuelle skader som følger av feil montering og/eller bruk.

AVERTISMENT!

- 1. Acest scaun trebuie utilizat într-un mod normal și non-abuziv. Nu ne asumăm responsabilitatea pentru orice daune cauzate de asamblarea și/sau utilizarea necorespunzătoare.

AVVERTIMENTO!

- 1. Questa sedia deve essere usata con cura e cautela. Non siamo responsabili per eventuali danni derivanti da montaggio e/o utilizzo improprio.











