



HD3133

EN User manual
RU Руководство пользователя

PHILIPS



Specifications are subject to change without notice
© 2013 Koninklijke Philips Electronics N.V.
All rights reserved.

HD3133_UM_RU_V1.0_130419



English

1 Your multi-cooker

Congratulations on your purchase, and welcome to Philips!
To fully benefit from the support that Philips offers, register your product at www.Philips.com/welcome.

2 What's in the box (fig.1)

Multi-cooker main unit	Steamer
Rice scoop	Soup ladle
Measuring cup	Gloves
User manual	Safety leaflet
Warranty card	Recipe

3 Overview (fig.2)

① Top lid	⑥ Power socket
② Inner pot	⑦ Heating element
③ Lid release button	⑧ Water level indications
④ Control panel	⑨ Cooker handle
⑤ Main body	⑩ Detachable steam vent cap

Controls overview (fig.3)

⑪ Preset button	⑯ Boil/Steam button
⑫ Keep-warm button	⑰ Bake button
⑬ Rice button	⑱ Off button
⑭ Soup/Congee/Stew button	⑲ Display
⑮ Fry button	




Functions overview

Functions	Default cooking time	Adjustable cooking time	Preset time
Rice (Рис)	35 Minutes	/	1 - 24 Hours
Congee/Soup/Stew (Каша/Суп/Тушить)	10 Minutes	5 minutes to 10 hours	1 - 24 Hours
Fry (Жарить)	15 Minutes	5 - 60 minutes	/
Boil/Steam (Варить/Пароварка)	30 Minutes	5 - 120 minutes	1 - 24 Hours
Bake (Печь)	45 Minutes	20 - 120 minutes	1 - 24 hours

4 Using the multi-cooker

Before first use

- Take out all the accessories from the inner pot. Remove the packaging material of the inner pot.
- Clean the parts of the multi-cooker thoroughly before using it for the first time (see chapter 'Cleaning and Maintenance').

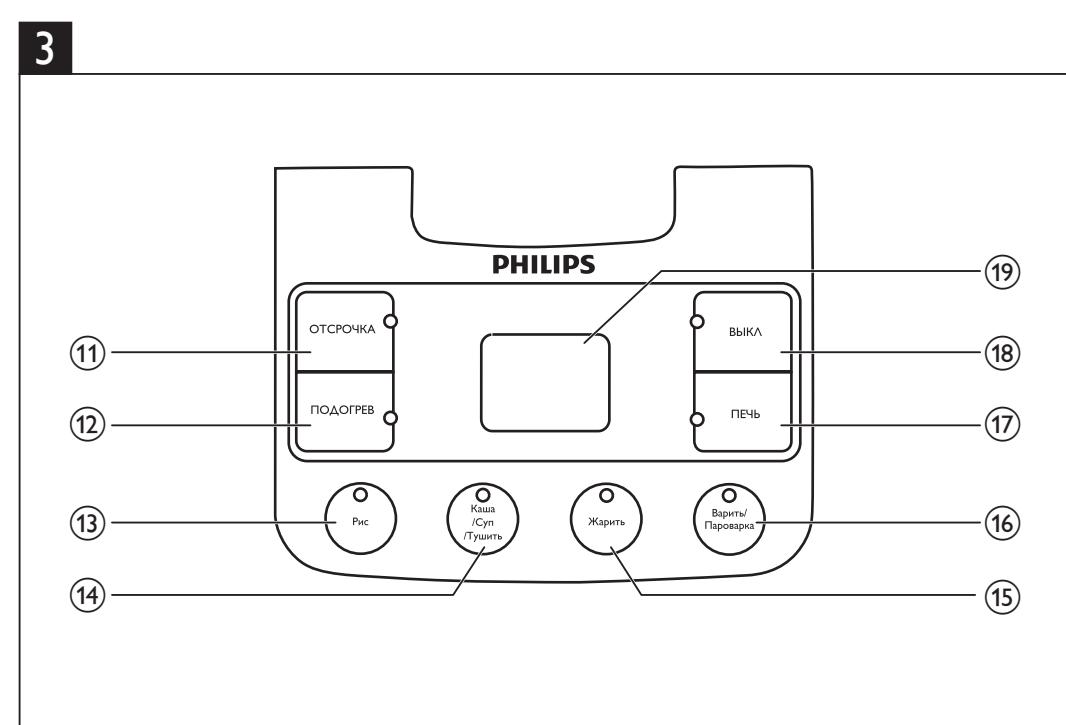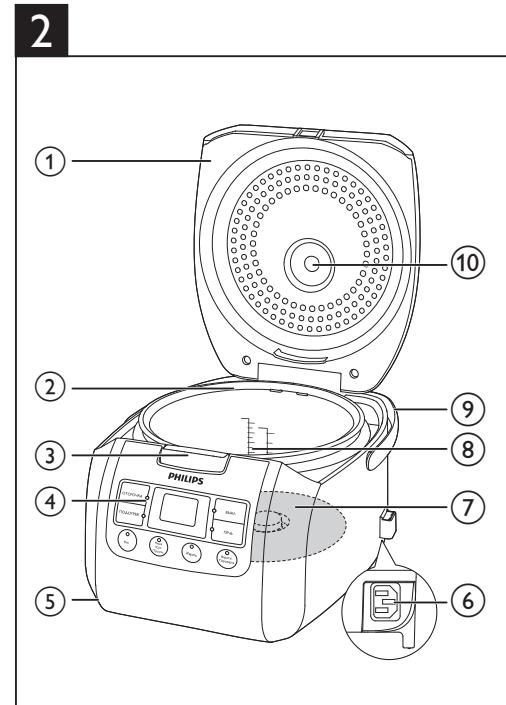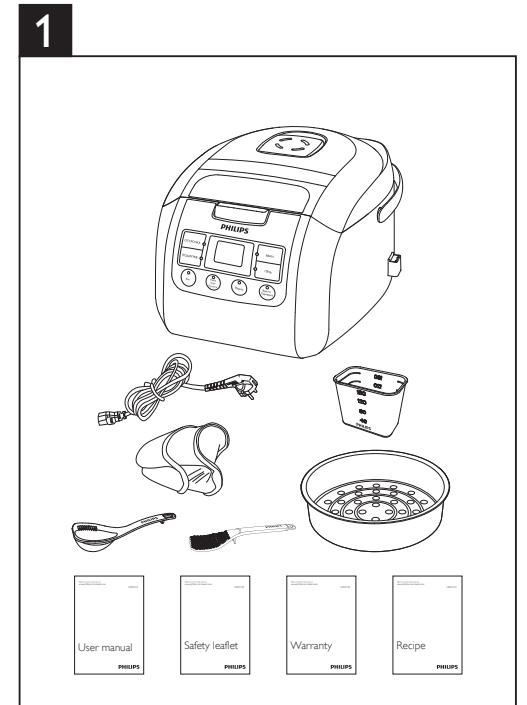

Note

- Make sure all parts are completely dry before you start using the multi-cooker.

Preparations before cooking (fig.4)

Before using the multi-cooker, you need to follow below preparations:

- Measure the rice using the measuring cup provided.
- Wash the rice thoroughly.
- Put the pre-washed rice in the inner pot.
- Add water to the level indicated on the scale inside the inner pot that corresponds to the number of cups of rice used. Then smooth the rice surface.
- Press the release lever to open the lid.
- Wipe the outside of the inner pot dry, then put the inner pot in the multi-cooker. Check if the inner pot is in proper contact with the heating element.
- Close the lid of the multi-cooker, and put the plug in the power socket.

Note

- Each cup of uncooked rice normally gives 2 bowls of cooked rice. 1 cup of rice is approximately 180ml.
- The level marked inside the inner pot is just an indication. You can always adjust the water level for different types of rice and your own preference.
- Make sure that the outside of the inner pot is clean and dry, and that there is no foreign residue on the heating element or the magnetic switch.

Rice cooking (fig.5)

- Follow the steps in "Preparations before cooking".

↳ The default cooking time starts flashing on the display.

- Wait for a few seconds before the multi-cooker automatically enters rice cooking mode.

- When the cooking is finished, you will hear a few beeps and the selected cooking function light will be off.

- The multi-cooker will be in keep-warm mode automatically.

↳ The keep-warm (ПОДОГРЕВ) indicator lights up.

Note

- After the cooking has started, you can press the off button (ВыКЛ) to deactivate the cooking process, and the multi-cooker will be in standby mode.
- The default cooking time is 35 minutes, and is not adjustable.

Cooking congee, making soup and stewing (fig.6)

- Follow the steps in "Preparations before cooking".

2 Press the congee/soup/stew button (Каша/Суп/Тушить).

↳ The default cooking time starts flashing on the display.

- Select a different cooking time, press the congee/soup/stew button (Каша/Суп/Тушить) repeatedly to do so.

- After the cooking time is selected, the multi-cooker automatically enters the selected cooking mode in a few seconds.

- When the cooking is finished, you will hear a few beeps and the selected function light will be off.

- The multi-cooker will be in keep-warm mode automatically.

↳ The keep-warm (ПОДОГРЕВ) indicator lights up.



Preset time for delayed cooking (fig.11)

You can preset the delayed cooking time for different cooking modes.
1 Follow steps 6 and 7 in "Preparations before cooking".
2 Press the desired cooking button.
3 Press the preset button (**ОТСРОЧКА**).
→ The default preset time starts flashing on the display.
4 Press the preset button (**ОТСРОЧКА**) repeatedly to select the desired preset time.
5 After the preset time is selected, wait for a few seconds before the multi-cooker automatically confirms the preset time.
6 The cooking will be finished when the preset time has elapsed. You will hear a few beeps and the selected cooking function will be off.
7 The multi-cooker will be in keep-warm mode automatically.
→ The keep-warm (**ПОДОГРЕВ**) indicator lights up.

Note

- The preset function is not available in fry mode (**Жарить**).
- The preset button is not responsive in standby mode.
- The default preset time is 1 hour. You can select the preset time between 1 to 24 hours.

5 Cleaning and Maintenance

Note

- Unplug the multi-cooker before starting to clean it.
- Wait until the multi-cooker has cooled down sufficiently before cleaning it.

Interior

Inside of the top lid and the main body:

- Wipe with wrung out and damp cloth.
- Make sure to remove all the food residues stuck to the multi-cooker.
- Heating element:
 - Wipe with wrung out and damp cloth.
 - Remove food residues with wrung out and damp cloth.

Exterior

Surface of the top lid and outside of the main body:

- Wipe with a cloth damped with soap water.
- Only use soft and dry cloth to wipe the control panel.
- Make sure to remove all the food residues around the control panel.

Accessories

Rice scoop, soup ladle, inner pot, steamer, and steam vent cap:

- Soak in hot water and clean with sponge.

6 Environment

Do not throw away the appliance with normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you can help to preserve the environment.



7 Guarantee and service

If you need service or information, or if you have a problem, visit the Philips website at www.philips.com or contact the Philips Customer Care Center in your country. You can find its phone number in the worldwide guarantee leaflet. If there is no Customer Care Center in your country, go to your local Philips dealer.

8 Specifications

Model Number	HD3133
Rated power output	980W
Rated capacity	5,0L

10 Troubleshooting

If you encounter problems when using this multi-cooker, check the following points before requesting service. If you cannot solve the problem, contact the Philips Consumer Care Center in your country.

Problem	Solution
The light on the button does not go on.	There is a connection problem. Check if the power cord is connected to the multi-cooker properly and if the plug is inserted firmly into the power outlet.
The light is defective.	Take the appliance to your Philips dealer or a service center authorized by Philips.
The display does not function.	The multi-cooker is not connected to the power supply. If there is no power supply, the power failure backup function does not work and the display does not function. The battery for the display runs out of power. Take the appliance to your Philips dealer or a service center authorized by Philips to have the battery replaced.
The rice is not cooked.	There is not enough water. Add water according to the scale on the inside of the inner pot. Make sure that there is no foreign residue on the heating element and the outside of the inner pot before switching the multi-cooker on. The heating element is damaged, or the inner pot is deformed. Take the multi-cooker to your Philips dealer or a service center authorized by Philips.
The rice is too dry and not well cooked.	Add more water to the rice, and cook for a bit longer.
The multi-cooker does not switch to the keep-warm mode automatically.	The temperature control is defective. Take the appliance to your Philips dealer or a service center authorized by Philips.
The rice is scorched.	You have not rinsed the rice properly. Rinse the rice until the water runs clear.
Water spills out of the multi-cooker during cooking.	Make sure that you add water to the level indicated on the scale inside the inner pot that corresponds to the number of cups of rice used.
Rice smells bad after cooking.	Clean the inner pot with some washing detergent and warm water. After cooking, make sure the steam vent cap, inner lid and inner pot is cleaned thoroughly.
Error message (E1, E2, E3, or E4) appears on the display.	There has been a power failure during cooking. Take the appliance to your Philips dealer or a service center authorized by Philips.

Русский

1 Мультиварка

Поздравляем с покупкой, и добро пожаловать в клуб Philips! Чтобы воспользоваться всеми преимуществами поддержки Philips, зарегистрируйте приобретенное устройство на сайте www.philips.com/welcome.

2 Комплектация (рис. 1)

Мультиварка
Ложка для риса
Мерный стакан
Руководство пользователя
Инструкции по безопасности

Пароварка
Половник для супа
Кухонные рукавицы
Гарантийная карточка
Рецепт

3 Обзор (рис. 2)

① Верхняя крышка	⑥ Разъем питания
② Внутренняя емкость	⑦ Нагревательный элемент
③ Кнопка открывания крышки	⑧ Индикация уровня воды
④ Панель управления	⑨ Рука мультиварки
⑤ Основной корпус	⑩ Съемная крышка отверстия выхода пара

Описание панели управления (рис. 3)

⑪ Кнопка отсрочки старта	⑯ Кнопка режима отваривания/приготовления на пару
⑫ Кнопка режима поддержания температуры	⑰ Кнопка режима выпечки
⑬ Кнопка приготовления риса	⑯ Кнопка выключения
⑭ Кнопка приготовления супа/каши/режима тушения	⑯ Дисплей
⑮ Кнопка режима обжаривания	

Обзор функций

Функции	Время приготовления, установленное по умолчанию	Регулируемое время приготовления	Время отсрочки старта
Рис (Рис)	35 минут	/	1 — 24 часа
Каша/суп/гущение (Каша/Суп/Тушить)	10 минут	5 минут — 10 часов	1 — 24 часа
Обжаривание (Жарить)	15 минут	5 — 60 минут	/
Отваривание/приготовление на пару (Варить/Пароварка)	30 минут	5 — 120 минут	1 — 24 часа
Выпечка (ПЕЧЬ)	45 минут	20 — 120 минут	1 — 24 часа

5 Использование мультиварки

Перед первым использованием

- Извлеките все принадлежности из внутренней емкости. Снимите с внутренней емкости упаковочные материалы.
- Тщательно очистите все детали мультиварки перед первым использованием (см. главу «Очистка и уход»).

Примечание

- Перед использованием мультиварки убедитесь, что все части являются абсолютно сухими.

Подготовка к работе (рис. 4)

Перед использованием мультиварки выполните следующие действия.

- Измерьте количество риса с помощью прилагаемого мерного стакана.
- Тщательно промойте рис.
- Поместите предварительно промытый рис во внутреннюю емкость.
- Добавьте воду до уровня, указанного на шкале во внутренней емкости, в соответствии с количеством используемых чашек риса. Разглядьте поверхность риса.
- Откройте крышку, нажав ручку открывания крышки.
- Протрите внешнюю поверхность внутренней емкости, установите емкость в мультиварку. Убедитесь, что внутренняя емкость касается нагревательного элемента должным образом.
- Закройте крышку мультиварки, вставьте сетевую витку в розетку сети.

Примечание

- В результате приготовления одной чашки сырого риса обычно получается 2 чашки готового риса. Емкость 1 чашки риса составляет примерно 180 мл.
- Уровень, отмеченный во внутренней емкости, является рекомендованным. Вы всегда можете изменить его в соответствии с видом риса и собственными предпочтениями.
- Убедитесь, что внешняя поверхность внутренней емкости является сухой и чистой, а на нагревательном элементе и магнитном переключателе отсутствуют загрязнения.

Приготовление риса (рис. 5)

- Следуйте инструкциям в главе «Подготовка к работе».
- Нажмите кнопку приготовления риса (Рис).
→ На дисплее начнет мигать время приготовления, установленное по умолчанию.
- Подождите, пока мультиварка перейдет в режим приготовления риса. Это займет несколько секунд.
- По окончании приготовления прозвучит несколько звуковых сигналов, индикатор выбранной функции погаснет.
- Мультиварка автоматически перейдет в режим поддержания температуры.
- Загорится индикатор режима поддержания температуры (ПОДОГРЕВ).

Примечание

- После запуска процесса приготовления для отключения программы нажмите кнопку выключения (ВыКЛ), мультиварка перейдет в режим ожидания.
- Время приготовления по умолчанию составляет 35 минут, изменить его нельзя.

Приготовление каши, супа, режим тушения (рис. 6)

- Следуйте инструкциям в главе «Подготовка к работе».
- Нажмите кнопку приготовления каши/супа/режима тушения (Каша/Суп/Тушить).
→ На дисплее начнет мигать время приготовления, установленное по умолчанию.
- Чтобы выбрать другое время приготовления, используйте кнопку приготовления каши/супа/режима тушения (Каша/Суп/Тушить).
- После выбора времени приготовления мультиварка через несколько секунд автоматически перейдет в выбранный режим.
- По окончании приготовления прозвучит несколько звуковых сигналов, индикатор выбранной функции погаснет.
- Мультиварка автоматически перейдет в режим поддержания температуры.
- Загорится индикатор режима поддержания температуры (ПОДОГРЕВ).

Примечание

- Во избежание переполнения мультиварки не превышайте рекомендованный объем и максимальный уровень воды, указанный на внутренней емкости.
- Если каши долго находилась в режиме поддержания температуры, она может загустеть.
- Если в вашем регионе в сети наблюдаются перепады напряжения, емкость мультиварки может переполниться.
- После запуска процесса приготовления для отключения программы нажмите кнопку выключения (ВыКЛ), мультиварка перейдет в режим ожидания.
- В режиме приготовления каши, супа, тушения отсчет времени приготовления начинается только после закипания воды.
- Время приготовления по умолчанию составляет 10 минут. Можно выбрать время приготовления от 5 минут до 10 часов.

Обжаривание (рис. 7)

- Положите ингредиенты во внутреннюю емкость.
- Следуйте инструкциям в шаге 6 главы «Подготовка к работе».
- Подключите сетевую вилку к электророзетке.
- Нажмите кнопку режима обжаривания (Жарить).
→ На дисплее начнет мигать время приготовления, установленное по умолчанию.
- Чтобы выбрать другое время приготовления, используйте кнопку режима обжаривания (Жарить).
- После выбора времени приготовления мультиварка через несколько секунд автоматически перейдет в выбранный режим.
- Во время приготовления часто помешивайте ингредиенты лопаткой.
- По окончании приготовления прозвучит несколько звуковых сигналов, индикатор выбранной функции погаснет.
- Мультиварка автоматически перейдет в режим поддержания температуры.
- Загорится индикатор режима поддержания температуры (ПОДОГРЕВ).

Примечание

- В режиме обжаривания не накройте прибор верхней крышкой.
- После запуска процесса приготовления для отключения программы нажмите кнопку выключения (ВыКЛ), мультиварка перейдет в режим ожидания.
- Время приготовления по умолчанию — 15 минут. Можно установить время приготовления от 5 до 60 минут.

Приготовление на пару (рис. 8)

- С помощью мерного стакана отмерьте несколько стаканов воды.
- Налейте воду во внутреннюю емкость.
- Поставьте паровую корзину во внутреннюю емкость.
- Положите ингредиенты в пароварку.
- Следуйте инструкциям в шаге 7 главы «Подготовка к работе».
- Нажмите кнопку режима приготовления на пару (Варить/Пароварка).
→ На дисплее начнет мигать время приготовления, установленное по умолчанию.
- Чтобы выбрать другое время приготовления, используйте кнопку режима приготовления на пару (Варить/Пароварка).
- После выбора времени приготовления мультиварка через несколько секунд автоматически перейдет в выбранный режим.
- По окончании приготовления прозвучит несколько звуковых сигналов, индикатор выбранной функции погаснет.
- Мультиварка автоматически перейдет в режим поддержания температуры.
- Загорится индикатор режима поддержания температуры (ПОДОГРЕВ).

Примечание

- Для перехода в режим поддержания температуры в режиме ожидания нажмите кнопку режима поддержания температуры (ПОДОГРЕВ).
- Для перехода в режим ожидания в режиме поддержания температуры нажмите кнопку режима поддержания температуры (ПОДОГРЕВ).

Функция отсрочки старта для включения в заданное время (рис. 11)

Функцию отсрочки старта можно выбрать для различных режимов приготовления.

- Следуйте шагам 6 и 7 в главе «Подготовка к работе».
- Нажмите кнопку соответствующего режима приготовления.
- Нажмите кнопку отсрочки старта (ОТСРОЧКА).
→ На дисплее начнет мигать время отложенного старта, установленное по умолчанию.
- Мультиварка автоматически перейдет в режим