


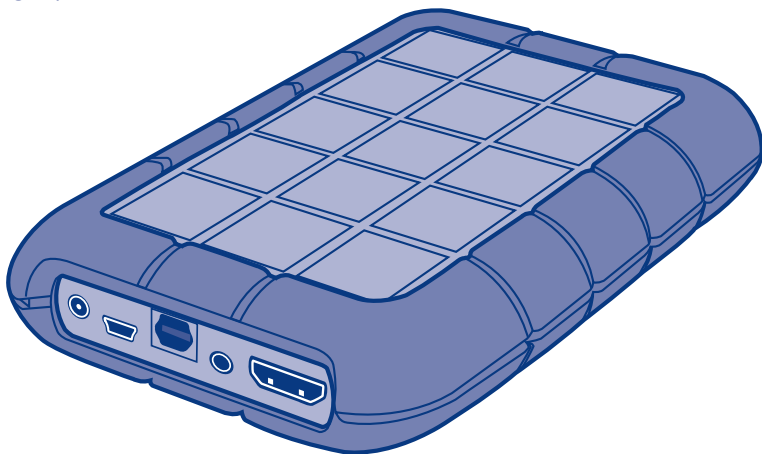

# LaCinema

R U G G E D


Design by Neil Poulton



## Quick Install Guide

## Box Content

LaCie LaCinema Rugged  
External power supply  
Video composite + stereo cable  
HDMI cable  
USB cable  
SCART out adapter  
Remote control  
2 x AAA batteries  
Quick Install Guide  
LaCie Utilities CD-ROM  
(with detailed User Manual and software)


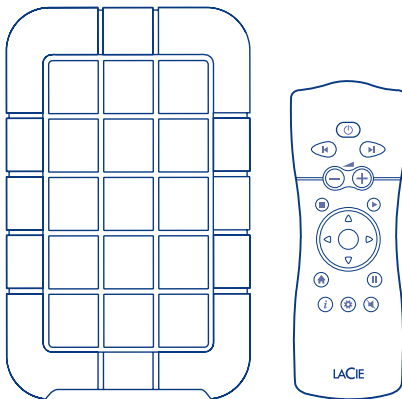


Your LaCie LaCinema Rugged has been pre-formatted as a FAT32 volume for use with Mac OS and Windows. For more information, please see the user manual on the LaCie Utilities CD-ROM.

**CAUTION:** Disk should not be reformatted in a file system other than FAT32 / MS-DOS. If you reformat the disk in HFS file system, files will not be available when connected to a TV.

**IMPORTANT NOTICE:** The LaCie LaCinema Rugged is not designed or intended for use in violation of copyrights or other intellectual property rights. The LaCie LaCinema Rugged may only be used in conjunction with materials legally owned or licensed by the user and only to the extent that such ownership or license rights permit such use.

Protect your investment—register for free technical support: [www.lacie.com/register](http://www.lacie.com/register)

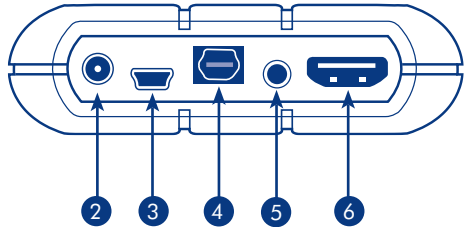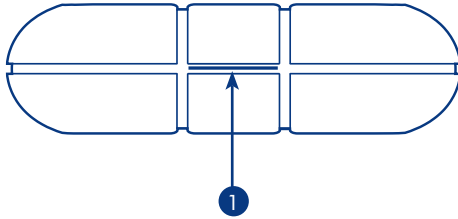

## Front View


1. Infra red transmitter and blue LED

## Rear View

- 2. Power supply connector
- 3. USB port
- 4. Optical Audio S/PDIF
- 5. Video composite + stereo connector
- 6. HDMI connector


## Setup Steps

1. Connect the USB cable to the LaCinema Rugged and to your computer.
2. If your computer USB port does not provide enough power, you may need to connect the power supply which turns on the LaCinema Rugged.
3. Copy your multimedia files to the LaCinema Rugged hard disk.
4. Safely disconnect the LaCinema Rugged and its power supply.

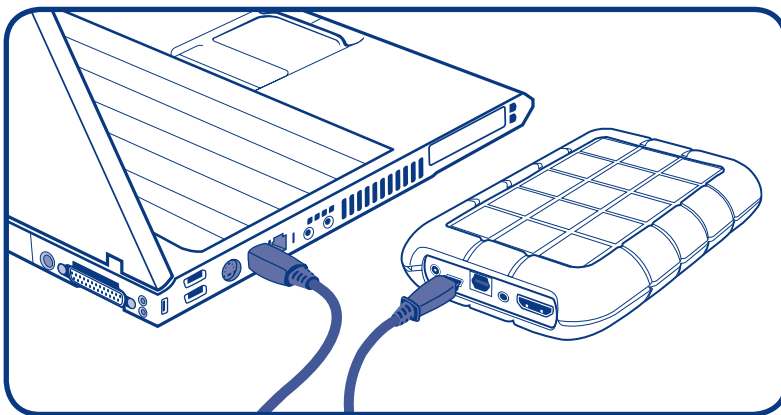

## Playing Multimedia Files


1. Choose ONE of the two connection methods:
  - A. Connect the LaCinema Rugged to your television and stereo with the provided video composite + stereo cable.
  - B. Connect the LaCinema Rugged to your television with the provided HDMI cable.

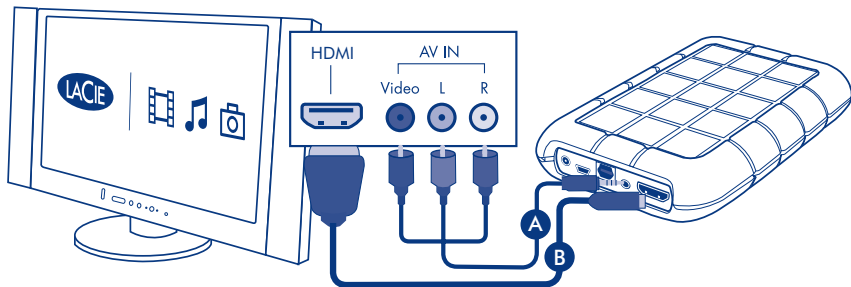

*You can also connect the LaCinema Rugged to your home theater receiver's Optical digital audio port with an Optical digital audio cable (also called S/PDIF) (not included). To connect your LaCinema Rugged to your television's SCART connector, use the included SCART adaptor.*

2. Connect the power supply.
3. Turn on your television and stereo (if applicable).
4. When the LaCinema Rugged is connected to your television, turn it on by pressing the remote control power button.
5. Use the remote control to select the media files you want to play.



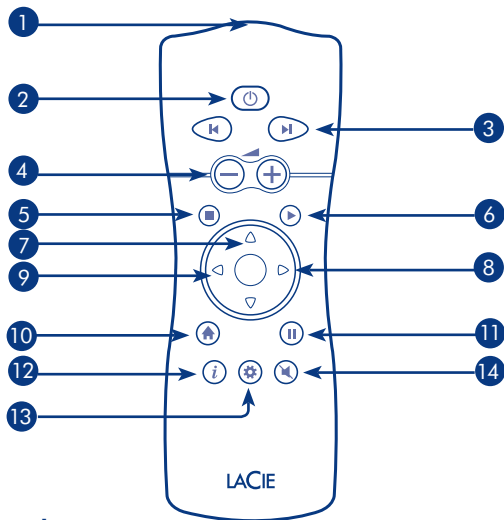

## Remote Control

- |                          |                             |
|--------------------------|-----------------------------|
| 1. Infra red transmitter | 8. Menu down / fast forward |
| 2. Power on / off        | 9. Menu up / fast reverse   |
| 3. Previous / next       | 10. Main menu / now playing |
| 4. Volume up/down        | 11. Pause                   |
| 5. Stop                  | 12. Info / contextual menu  |
| 6. Select / play         | 13. Setup                   |
| 7. Scroll up / down      | 14. Mute                    |

**NOTE:** By default your LaCinema Rugged is set to Composite Video Out mode (the yellow connector). To switch to HDMI mode, turn on the LaCinema Rugged using the power button on the remote control and then press the Info button.



## RU LaCie LaCinema Rugged

Жесткий диск LaCie LaCinema Rugged предварительно отформатирован в файловой системе FAT 32 для работы в системах Mac OS и Windows. Дополнительные сведения см. в руководстве пользователя на компакт-диске с утилитами LaCie.

**ВНИМАНИЕ!** Запрещается реформатировать жесткий диск в файловых системах, отличных от FAT32/MS-DOS. Если сделать это в файловой системе HFS, при подключении к телевизору файлы, хранящиеся на жестком диске, будут недоступны.

**ВАЖНОЕ ЗАМЕЧАНИЕ.** Жесткий диск LaCie LaCinema Rugged не предназначен для использования, сопряженного с нарушением авторских прав или иных прав интеллектуальной собственности. Его можно использовать исключительно для работы с материалами, на которые имеются законные права или лицензии, и только в рамках, обозначенных в положениях таких прав собственности или лицензий.

### Порядок установки

1. Подключите кабель USB к жесткому диску LaCinema Rugged и компьютеру.
2. Если питания USB-порта компьютера недостаточно, для включения жесткого диска LaCinema Rugged может потребоваться подключить дополнительный источник питания.
3. Скопируйте файлы мультимедиа на жесткий диск LaCinema Rugged.
4. Выполните безопасное отключение жесткого диска LaCinema Rugged и отключите питание.

### Воспроизведение файлов мультимедиа

1. Подключите устройство одним из указанных ниже способов.
  - A. Подключите жесткий диск LaCinema Rugged к телевизору и стереосистеме с помощью композитного аудио-/видеокабеля, входящего в комплект поставки.
  - B. Подключите жесткий диск LaCinema Rugged к телевизору с помощью кабеля HDMI, входящего в комплект поставки.

*Кроме того, жесткий диск LaCinema Rugged можно подключить к оптическому цифровому аудиоразъему домашнего кинотеатра с помощью оптического цифрового аудиокабеля (S/PDIF), который не входит в комплект поставки. Для того чтобы подключить устройство LaCinema Rugged к разъему SCART телевизора, воспользуйтесь адаптером SCART, входящим в комплект поставки.*
2. Подключите источник питания и включите жесткий диск LaCinema Rugged.
3. Включите телевизор и стереосистему (при наличии).
4. После подключения к телевизору включите жесткий диск LaCinema Rugged, нажав кнопку питания на пульте дистанционного управления.
5. С помощью пульта дистанционного управления выберите файлы мультимедиа, которые нужно воспроизвести.

**ПРИМЕЧАНИЕ.** По умолчанию устройство LaCinema Rugged настроено на режим композитного видеовыхода (желтый разъем). Для того чтобы перевести его в режим HDMI, включите устройство LaCinema Rugged с помощью кнопки питания на пульте дистанционного управления, а затем нажмите кнопку Info.

