

LIFESTYLE<sup>®</sup> V30  
LIFESTYLE<sup>®</sup> V20

**BOSE**<sup>®</sup>





:



:



:



:

/



89/336/EEC Low Voltage Directive 2006/95/EC.  
EMC RTTE 99/5/EC.

[www.Bose.com/static/compilance/index.html](http://www.Bose.com/static/compilance/index.html).



Lifestyle® V20. : Lifestyle® V30; Acoustimass®.  
: : \_\_\_\_\_ Acoustimass: \_\_\_\_\_  
: \_\_\_\_\_ : \_\_\_\_\_ : \_\_\_\_\_  
Bose

---

.....	<b>2</b>
.....	2
.....	2
.....	2
.....	2
..... DVD .....	3
.....	3
.....	4
.....	5
.....	6
.....	8
.....	8
.....	8
.....	10
.....	11
.....	12
.....	12
.....	12
.....	12
..... Acoustimass®.....	12
.....	14
..... FM .....	14
..... AM .....	14
.....	14

..... / .....	15
..... SCART ( .....	17
..... ) .....	18
..... - .....	19
.....	<b>20</b>
.....	20
.....	21
.....	<b>28</b>
.....	28
..... Lifestyle® .....	28
.....	29
.....	29
..... HDMI .....	30
..... Bose® .....	30
..... / .....	30
.....	31
..... HDMI .....	31
..... HDMI .....	31





Bose® Lifestyle®.

:

, . ,

« , , ».

:

, , :

- HDMI
- 
- ADAPTIQ®,

- 
- 
- 
- 
- 
- 

/ /

14



---

**DVD**

DVD

Lifestyle®  
DVD

Lifestyle®

DVD-

DVD:

•

•

•

ADAPTiQ®

Lifestyle®

•

ADAPTiQ  
Lifestyle®

•

•

•

(DVD,

•

•

•

ADAPTiQ

AM FM

. .).

2.

DVD-

Lifestyle®

.2.

1.

Lifestyle®.

Lifestyle®

( . . 1).

. 2

. 1

Lifestyle®.







DVD.  
 PLAY DVD-  
 DVD,  
 .28

" " .28

DVD Bose®,

1. Exit  
 Lifestyle®.

2. DVD-  
 Lifestyle®.

3. DVD-  
 DVD Bose®.

Lifestyle®.

Lifestyle®.

AUDIO IN  
( . . . 3).

ADAPTiQ® audio

ADAPTiQ


ADAPTiQ

. 3,

AUX

. 3

ADAPTiQ.

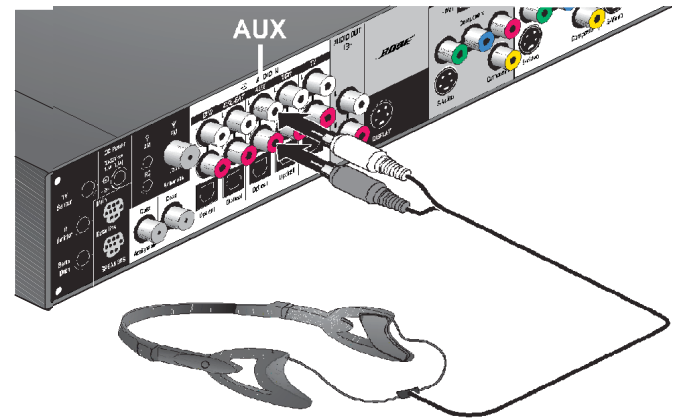

1. " " . 4. Lifestyle®, .
2. ADAPTiQ®,
3. Setup ( )
4. ADAPTiQ,



2.

Run.

3.

4.



(Enter)

ADAPTiQ,

. 4 Setup




Acoustimass®.

. iii.

( . . 5).

. 5

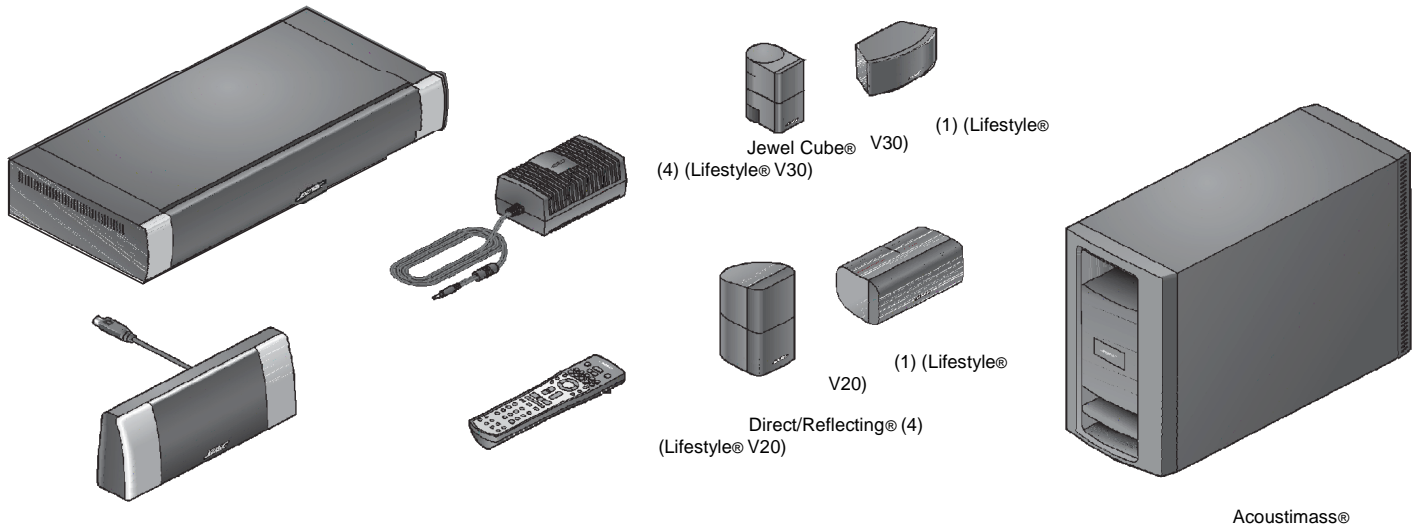



Jewel Cube® V30 (1) Lifestyle®  
(4) Lifestyle® V30

Direct/Reflecting® (4)  
(Lifestyle® V20) (1) Lifestyle®  
V20

.6

.6

SCART (

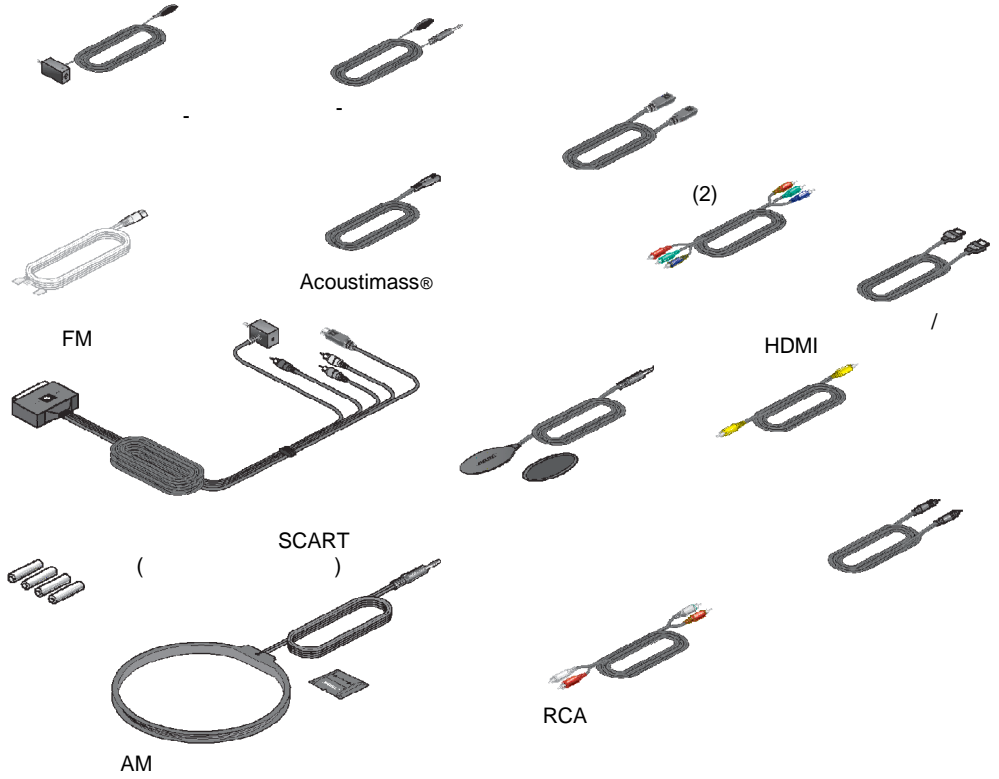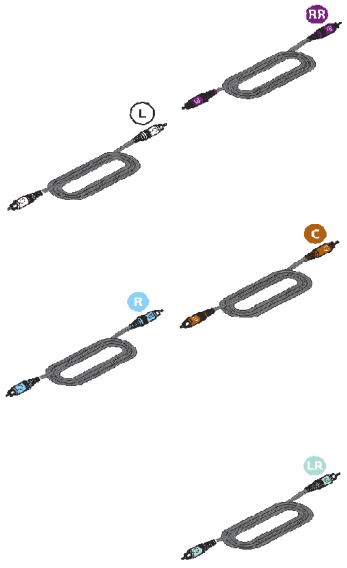

( , DVD, )

5

.7.


5

Bose

Bose®

Bose

www.Bose.com.

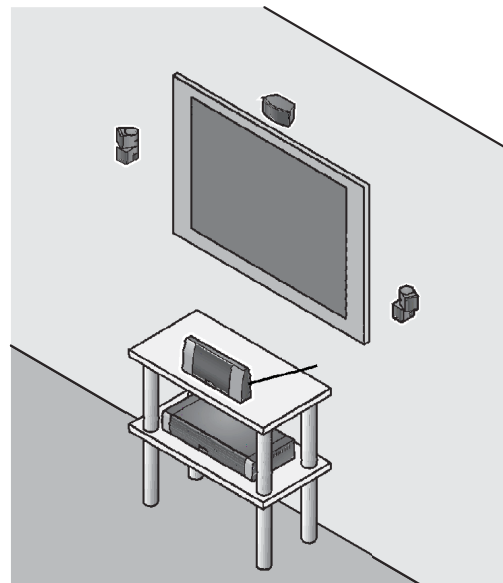



. 8

. 8

. 11,

ADAPTIQ®

ADAPTIQ®.

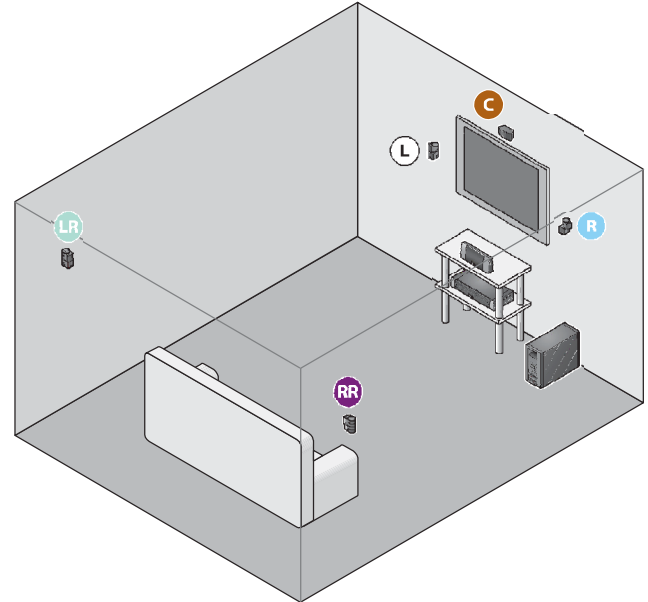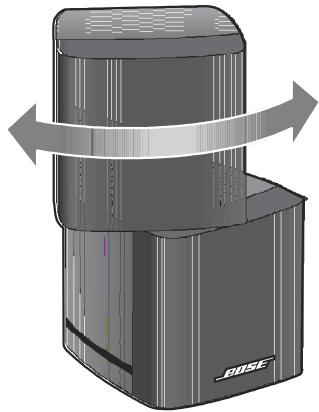



- 
- ( . . .8).
  - ,
  - , (6,1 )  
Acoustimass®.
  - 
  - 
  - 1 .
  - , (6,1 )  
Acoustimass®.
  - 
  - (15,2 )  
Acoustimass®.
  - 
  -





**Acoustimass®**

. 9  
Acoustimass

( , )

**Acoustimass®:**

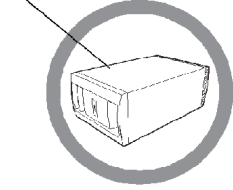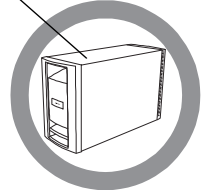


45

( . 9)

**Acoustimass:**

( . 9)

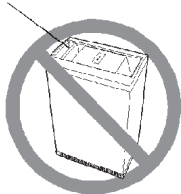


AM FM  
( . 10).

: FM

. 10

AM FM

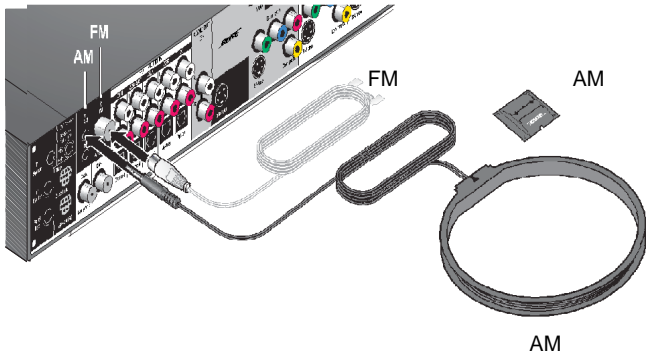

**FM**

1.

FM.

FM

2.

3.

Acoustimass®.

**AM**

1.

AM

AM.

2.

AM

3.

( 50 )

Acoustimass.

60

: AM

AM

FM

FM



/

1.

TV Sensor

SCART-

/

(DVD,

12 . 17).

( .

/

. .).

2.

/

( . 11).

,

:


,


/

,

. 11

/

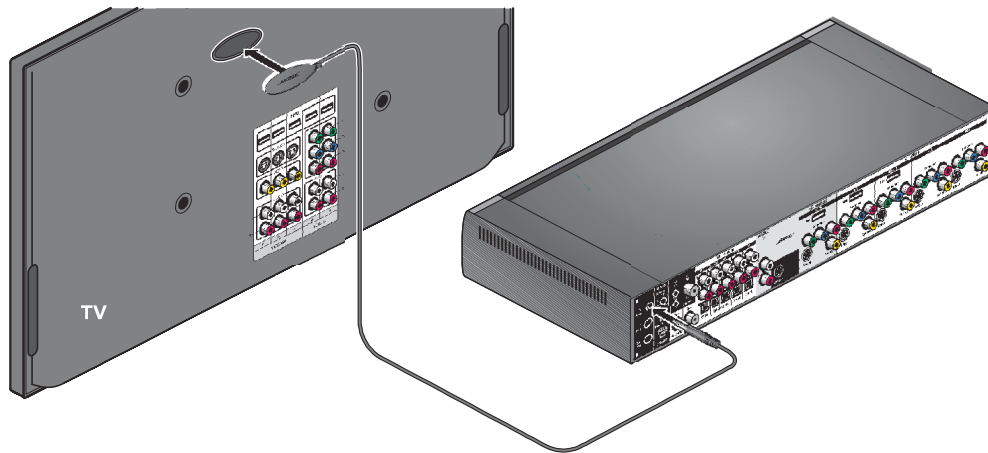

3. ,
4. System Lifestyle®.
5. Setup  ENTER.
6. TV Power, ENTER.
7. TV Power :
- Automatic ( SCART).
  - Euro Connector ( SCART).




8. ENTER.
- TV Power
- TV Power Status ( Not ).
- Detected ( ) TV On ( Not ).
9. TV Power Status Not Detected TV On.
10. TV Power Status Exit TV On,

# SCART ( )

SCART

. 12

SCART

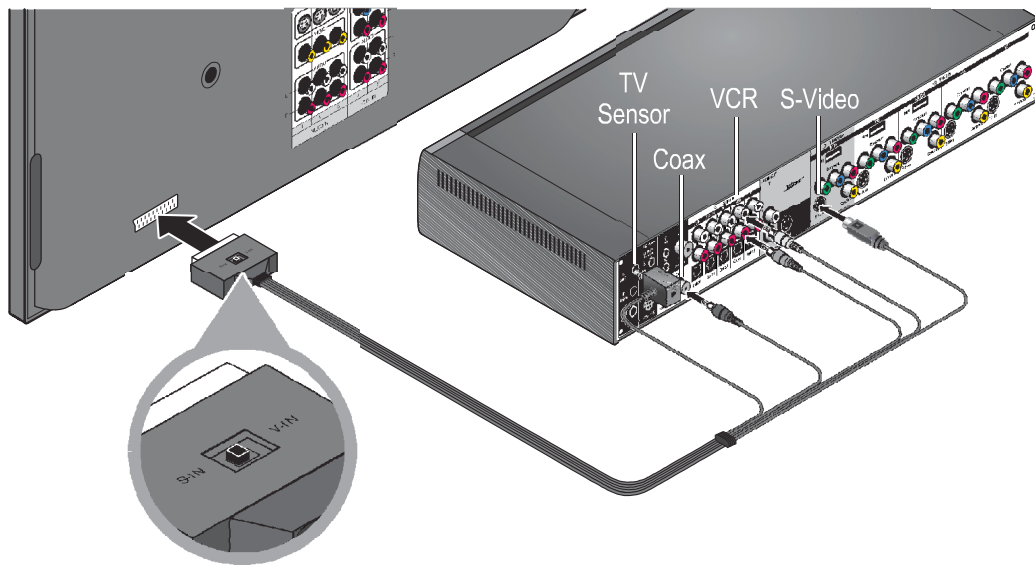

(FIX)

(VAR)

Fixed

Lifestyle®

Lifestyle®.

. 13


Lifestyle®:

RCA

(L)

(R)

(L R) TV Audio IN  
( . 13).

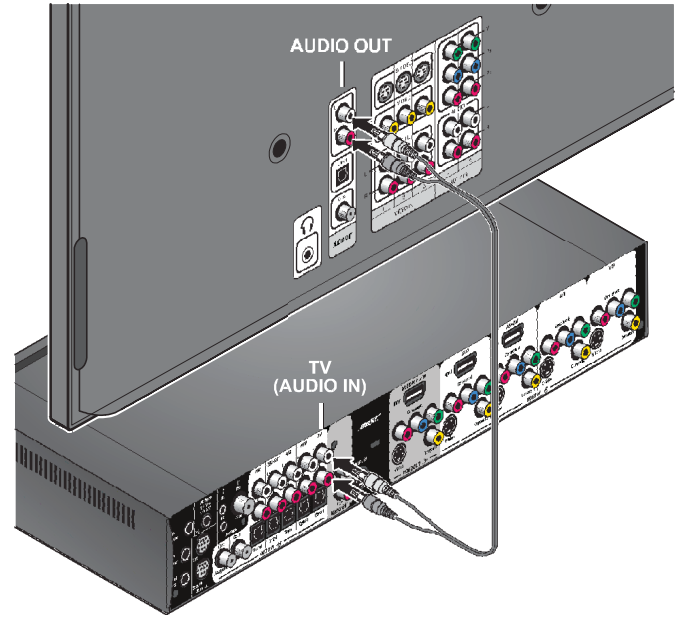


Lifestyle®

Lifestyle® —

Lifestyle®,

. 14

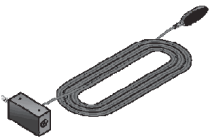

1.

**IR emitter**

2.

Lifestyle®.

3.

Lifestyle®.

4.

1.

Lifestyle®.

2.

3.

Lifestyle®.

4.

( ),



Lifestyle®.

. 1

Lifestyle®



**On/Off**

Bose®,

. ( .“ ” . 51).

**Source**

**Mute**

Bose®,

( .“ ” . 51).

**Vol –**

**Vol +**



**. 2**  
*Lifestyle®*

**LIFESTYLE®**

Lifestyle®,

- “ ” . 28.
- “ ” . 30.
- “ DVD” . 32.
- “ ” . 34.
- “ (AUX)” . 36.
- “ ” . 42.






**On/Off** – Lifestyle®,

Bose®,

( . “ ” . 51).

• **TV** – Lifestyle®,



• **On/Off** –

• **Input** –



**Mute** –

Bose®,

( . “ ” . 51)



• **CBL-SAT** –

CBL-SAT.

Lifestyle®,



• **On/Off** –

Lifestyle®

“ ”  
. 28.

DVD-

Lifestyle®.



• DVD –

, DVD.  
Lifestyle®,



• On/Off –

DVD.



• AUX –

, AUX.  
Lifestyle®,



• On/Off –

AUX .



• VCR –

, VCR.  
Lifestyle®,



• On/Off –

VCR.



FM –

FM-

Lifestyle®,



AM –

AM-

Lifestyle®,



Settings –

Info –



Info

VCR/DVR.



System

System –



Menu

Menu –




Exit

Exit

- Settings
- System.


Settings

VCR/DVR.

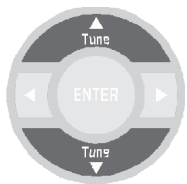


**Tune Up/Down**

- FM/AM
- 

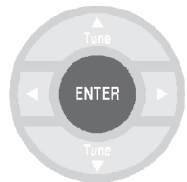

**Enter –**

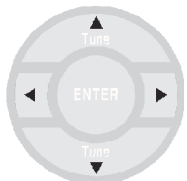

Guide

**Guide –**

( , , ).  
VCR/DVR



Page Δ

**Page Up/Down –**

/ , VCR/DVR.



Page ▽



Volume

**Volume –**

+ ( )  
• +  
• -



Channel  
Track

**Channel/Track –**

,  
- DVD.



**Stop**

•

( FM/AM)  
DVD VCD:

•

(

),



**Pause** –

FM/AM)

(



**Play** –

( FM/AM)



**Scan**

•



**Repeat**

Repeat

•

•

MP3.

CD




**Record**



Shuffle

**Shuffle**

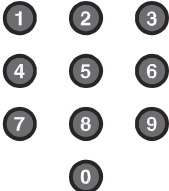

DVD,

CD



Previous

**Previous**



PIP

**Picture-in-picture**

« »

( ).



**Image View**

Lifestyle® HDTV-



List –

List



A



B



C



Favorites

A, B, C Favorites  
,  
(DVR).

A.

B.

C.



Teletext –



–



–




–



–

( )

Lifestyle®  
 (HDTV).  
 Lifestyle®  
 On/Off .  
**Lifestyle®**  
 1. .  
 2. TV Lifestyle®.  
 ( . “ . 21).  
 3. **System,**  
 Lifestyle® .  
 TV” ( : Lifestyle®  
 “SYSTEM: SEE  
 ).  
 Lifestyle®.

4. Setup,  
 ENTER.  
 5. TV Brand  
 ENTER.  
 6. ENTER.  
 7. TV Code  
 ENTER.  
 8. .  
 9. (TV) On/Off (  
 TV).  
 •  
 •  
 (TV) On/Off.  
 10. ENTER.  
 TV Code: \_\_\_\_\_  
 11. Exit.



( . 15).

Lifestyle®

Lifestyle®

Audio Delay,

.15

1. **Settings**

Lifestyle®,

2.

**ENTER.**



3.

**ENTER.**

- 2 (

Lifestyle®).  
30

(1-8)

4.

**Exit.**

1.

Lifestyle®, **System**

2.

Setup,



**ENTER.**

3.

**Widescreen TV**

**ENTER.**

4.

**No**

**ENTER.**

5.

**Exit.**

HDTV.

Lifestyle®)

Image View  
(HDMI)"

. 38 "


" . 44

HDMI.

1. Lifestyle®,  
/ Bose®

2. Lifestyle®,

3. System,  
Lifestyle®

4. Setup  


5. ENTER. CBL•SAT Device,

6. ENTER.  
ENTER.

7. ENTER. CBL•SAT Brand

8. ENTER.

9. ENTER. CBL•SAT Code

10. Lifestyle® (CBL-SAT)

11. On/Off, CBL-SAT.  
•  
• (CBL-SAT) On/Off

12. ENTER.  
CBL-SAT Code: \_\_\_\_\_

13. Exit.

1. **System,** Lifestyle® HDTV, HDMI, Lifestyle®

2. **TV Control** Lifestyle®

3. **ENTER.** **CBL•SAT** **ENTER.** CBL-SAT HDMI” . 41 HDMI.

4. **Exit.** Lifestyle®

**HDMI**

HDTV.

( Lifestyle®), Image View (HDMI)” . 38 HDMI.

**DVD**  
 DVD- Lifestyle® Lifestyle®,  
 DVD- Lifestyle®  
**DVD-** Lifestyle®  
 DVD- DVD-  
 DVD, DVD Lifestyle®.  
 1. Lifestyle®.  
 2. DVD-  
 3. **TV** Lifestyle®. ( .  
 “ ”  
 21).  
 4. **System,**  
 Lifestyle®  
 5. ENTER.  
 6. **DVD Device**  
 ENTER.  
 7. ENTER.  
 8. **DVD Brand**  
 ENTER.



9. **ENTER.**  
 10. **DVD Code**  
**ENTER.**  
 11.  
 12. Lifestyle® (DVD)  
**On/Off,** DVD.  
 • DVD-  
 • DVD-  
**DVD On/Off**  
 13. **ENTER.**  
 DVD Code: \_\_\_\_\_  
 14. **Exit.**



---

Lifestyle®

HDMI

HDMI

HDMI Lifestyle®

HDMI,

HDTV.

(

Image View (HDMI)" . 38

HDMI.

HDTV

Lifestyle®

HDMI"

. 41

HDMI.

1. Lifestyle®.

2.

3. **TV** Lifestyle®. (

4. **System,**  
Lifestyle®

5. **ENTER.**

Lifestyle®,

**Bose®**

Lifestyle®.



6. **ENTER.** **VCR Device**

7. **ENTER.**

8. **ENTER.** **VCR Brand**

9. **ENTER.**

10. **ENTER.** **VCR Code**

11.

12. (VCR) **On/Off** (VCR).

•

•

**VCR On/Off**

13. **ENTER.**

14. VCR Code: \_\_\_\_\_ **Exit.**  
Lifestyle®

**HDMI**  
Lifestyle®  
HDMI,

HDTV , , ,  
.

Lifestyle®

HDMI” . 41  
HDMI.

Lifestyle®,  
 Lifestyle®  
 Bose®  
**AUX**  
 AUX,  
 AUX,  
 AUX  
 Lifestyle®.  
 Lifestyle®.  
 AUX.  
**AUX** Lifestyle®.  
**System,**  
 Lifestyle®  
**Setup,**  
**AUX Device**  
**ENTER.**

7. **ENTER.**  
 8. **ENTER.** **AUX Brand**  
 9. **ENTER.**  
 10. **ENTER.** **AUX Code**  
 11.  
 12. (AUX) On/Off (  
 AUX).  
 • AUX  
 • (AUX)  
**On/Off**  
 13. **ENTER.**  
 AUX Code: \_\_\_\_\_  
 14. **Exit.**  
 Lifestyle®





**HDMI**  
Lifestyle® HDMI,

HDTV

Lifestyle®


HDMI”

. 41

HDMI.

# (HDMI)

Image View

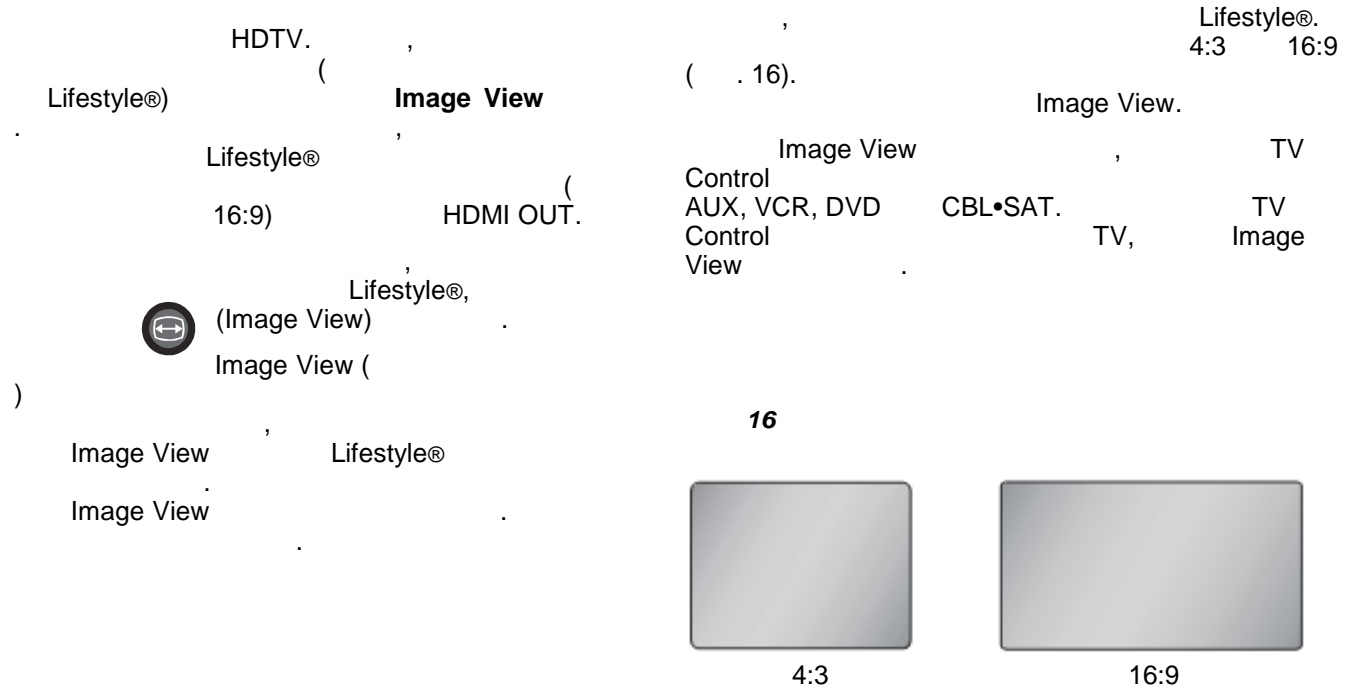




1.

4:3

		4:3
4:3	Normal ( )	
	Zoom ( 16:9 )	
	Stretch	
	Gray Bars	




2.

16:9

		16:9
16:9	Normal ( )	
	Zoom 16:9 ( )	
	Stretch	

# HDMI

Lifestyle®  
HDTV  
Lifestyle®  
HDMI OUT.  
Lifestyle® ( )  
Lifestyle® VCR AUX  
CBL-SAT, DVD,  
HDMI,

1. **Settings** (  ) Lifestyle®  
2. A-D ( )  
A. **System**,  
B. **ENTER.** (  ),  
C. **Resolution** **ENTER.** **Video**  
D. **Adjustable**, ( )  
**Settings.**  
2. **ENTER.** (  ),  
3. **Exit.**  
HDTV, \*default.  
\*default. 1080i, 1080i



AM, FM 20 AM 20 FM

Tune Up Tune Down.

- 1.
- 2.
- 3.

Seek.


- 1 9 PRESET:xx SET  
( xx ).

- 10 20 Lifestyle® PRESET:xx

SET.

« », PRESET:xx ERASED ( )).

DVD- Lifestyle®  
"Assignable"  
«TV», «VCR», «CBL·SAT» «AUX».

1. Lifestyle®  
**System.**
2. Media Center,  
 **ENTER.**
3. **Coaxial Source**  
**ENTER.**
4. **ENTER.**
5. **Exit.**





Lifestyle®,

HDTV





1. **Settings,**
2. **Enter.**
- 3




3.




Settings

		( )	
	2-3-5	5 (2, 3, 5 )	3. AUDIO. 5
	Surround ( )	0 (-10, -9, -8, -7, -6, -5, -4, -3, -2, -1, 0, +1, +2, +3, +4, +5, +6)	
	Center Channel ( )	0 (-8, -7, -6, -5, -4, -3, -2, -1, 0, +1, +2, +3, +4, +5, +6, +7, +8)	
	Audio Delay ( ) ( FM-AM)	2 (0, 1, 3, 4, 5, 6, 7, 8)	



	( )	
 <p>Movie EQ ( ) ( FM-AM)</p>	<p>On ( .) Off ( .)</p>	<p>( Audio Processing System User Adjustable).</p> <p>Digital . . . . . Dolby</p>
 <p>Range Compression ( ) ( FM-AM)</p>	<p>On ( .) Off ( .)</p>	<p>( Audio Processing System User Adjustable).</p>
 <p>Mono Decoding ( FM-AM)</p>	<p>On ( .) Off ( .)</p>	<p>( Audio Processing System User Adjustable).</p> <p>Decoding ( ), Mono Videostage® (2, 3 5)</p>
 <p>Audio 1 + 1 ( FM-AM)</p>	<p>1 (2, )</p>	<p>( ) Video CD HDTV. Video CD</p> <p>(1+1). Audio 1 + 1 1, 2</p>


		( )	
	SD Progressive Scan ( ) ( FM-AM)	On ( . ) Off ( . )	( Lifestyle® ) (480/576i) (480/576p).
	Video Resolution ( ) ( HDTV)	1080p (1080i, 720p, 480/576p)	( Lifestyle® HDMI). Lifestyle® Lifestyle® HDTV
	Image View ( ) ( HDTV)	Normal (Zoom, Stretch, Gray Bars)	( Lifestyle® HDTV HDMI). HDTV ( . “ (HDMI) ” . 38). TV Control AUX, VCR, DVD CBL•SAT, Image View TV Control TV, Image View

	( )	
 <p>Output Mode ( ) ( ) FM)</p>	<p>Auto (Mono - Stereo)</p>	<ul style="list-style-type: none"> <li>• <b>Auto</b> – FM-</li> <li>• <b>Mono</b> – FM-</li> <li>• <b>Stereo</b> – FM-</li> </ul>
 <p>RDS Info ( RDS) ( ) FM)</p>	<p>On ( .) Off ( .)</p>	<p>RDS</p>
 <p>Sleep Timer ( )</p>	<p>Off ( .) (10-90)</p>	<p>Lifestyle®</p> <p>90 10- 10</p> <p>3 Off.</p>

3.

. 17.

. 49.

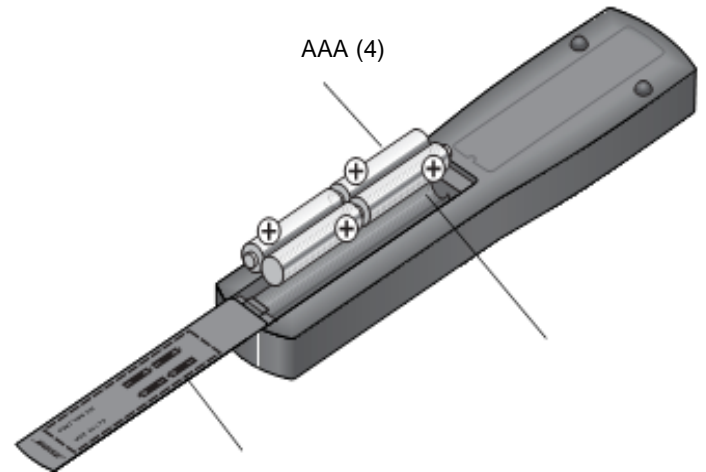

1.

. 17.

2.

IEC-LR3,

1,5

+ -

LIFESTYLE®

LIFESTYLE®

2.

Mute

1-4:

: ■■■■■

0000.

4.

Mute,

1.

( .18 .50).

2.

4

1,2,3

( , 2 1 3 4 1010.)

5.

Mute.

6.

3.

1-3.

4-5.


1.

On/Off

Mute,

1-4.

. 18.

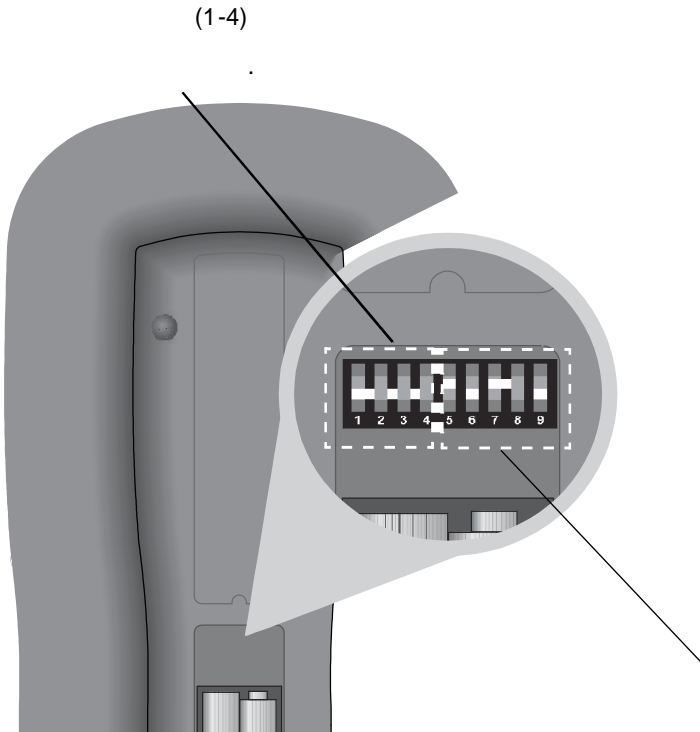

5  
( )  
“ . 51.  
6-9

**Bose® link**

1-4

5-9



**Bose® link**

LIFESTYLE®

( )

Bose® link.

Bose

AUX)

( , AM/FM- , DVD

II, 3•2•1 GS Series II

: Bose® link AL8,  
Wave®, 3•2•1® Series  
Lifestyle® RoomMate®

14 LIFESTYLE®

Bose® link

Personal® II,

Lifestyle® V-Class.

Bose® link

Bose.

Bose,

**Bose® link**

(1, 2, 3 4)

5:

(A).

(A).

(6, 7, 8 9)

(A)



B



I



C



J



D



K



E



L



F



M



G



N



H



O





	<ul style="list-style-type: none"> <li>• ,</li> <li>• , Acoustimass®</li> <li>• (DVD, VCR, FM . . .)</li> <li>• Lifestyle®.</li> <li>• ,</li> <li>• ,</li> </ul>
	<ul style="list-style-type: none"> <li>•</li> <li>• , MUTE ( . . .)</li> <li>• ).</li> <li>• ,</li> <li>• ,</li> <li>• , FM AM.</li> <li>• , Acoustimass ON.</li> <li>• , :</li> <li>–</li> <li>– multi-pin, Acoustimass</li> <li>• AUDIO INPUT.</li> <li>•</li> <li>•</li> <li>• , Acoustimass ON.</li> </ul>

( )	<ul style="list-style-type: none"> <li>• Bose®.</li> </ul>
	<ul style="list-style-type: none"> <li>• , 3 5 .</li> </ul>
	<ul style="list-style-type: none"> <li>• Central Channel ( ).</li> </ul>
	<ul style="list-style-type: none"> <li>• 5</li> <li>• Surround , .</li> <li>• , (DVD, VCR, DVR . .)</li> </ul>
	<ul style="list-style-type: none"> <li>• Surround , .</li> <li>• , .</li> </ul>
( ) .	<ul style="list-style-type: none"> <li>• (+ -).</li> <li>• , , .</li> <li>• « ».</li> <li>• Bose .</li> </ul>

Lifestyle®	<ul style="list-style-type: none"> <li>• (HDMI, , S-video )</li> <li>• « , »</li> <li>• Bose®.</li> </ul>
	<ul style="list-style-type: none"> <li>• LIFESTYLE®, " . 49). ( . "</li> </ul>
	<ul style="list-style-type: none"> <li>•</li> <li>• AM , 50 ,</li> <li>• Acoustimass®.</li> <li>• , AM</li> <li>•</li> <li>•</li> <li>•</li> </ul>
FM	<ul style="list-style-type: none"> <li>•</li> </ul>
FM	<ul style="list-style-type: none"> <li>• FM 2</li> </ul>
	<ul style="list-style-type: none"> <li>•</li> <li>•</li> </ul>
DVD, VCR, CBL-SAT AUX	<ul style="list-style-type: none"> <li>•</li> <li>•</li> <li>•</li> </ul>

	<ul style="list-style-type: none"> <li>• , , . . . . . , . . . . .</li> </ul>
<p>Lifestyle®  , DVD-  / ,</p>	<ul style="list-style-type: none"> <li>• . . . . . “ ” . 28.</li> <li>• , . . . . .</li> <li>• IR EMITTER ( ) . 19.</li> </ul>
	<ul style="list-style-type: none"> <li>• SCART,</li> <li>• <b>TV Power Status</b> Video System.</li> </ul>
Video	<ul style="list-style-type: none"> <li>• System , NTSC ( )</li> <li>• PAL ( ).</li> <li>• Settings , SD Progressive Scan ,</li> </ul>



! - ,

Bose®.

!


Bose.

**4:3** – « ».  
**5.1**– – 5.1-

**16:9** – « ».  
**C CD** – - .

**D Dolby Digital** –  
Laboratories, Dolby  
 – Dolby Digital.

**DTS** – Digital Theater Systems  
( ),  
**CD DVD** ,

 – DTS.

**DVD** – Digital  
Video Disc ( ) Digital

Versatile Disc ( )  
DVD CD,

**DVD-R, DVD+R, DVD-RW, DVD+RW** –

(R) (RW) -  
( ) (DVD).  
DVD-R +R  
DVD-RW +RW

**DVD-ROM** – Read Only  
Memory – (ROM)  
(DVD).

**DVD video** –  
ROM, MPEG, DVD-  
Digital Dolby

**DVR** – Digital Video Recording  
( ),  
PVR (Personal Video Recording). DVR

---

**H HDCP** – High-bandwidth Digital Content Protection. HDCP — Digital Content Protection, LLC (DVI) (HDMI).

**HDMI** – High-Definition Multimedia Interface (HDMI) —

**HDTV** – High-Definition TV (HDTV)

**M MP3** – (MPEG-1 Layer III),

**MPEG** – Moving Picture Experts Group

**N NTSC** – National Television System Committee

**P PAL** – Phase Alternate Line.

**PCM** – Pulse Code Modulation (PCM).

**PVR** – Personal Video Recording (PVR).  
DVR (Digital Video Recording),

**RDS** –



**S SCART** –

( ) DVD-

**S-video** –

( - )

S-video

/

S-video.

DVD-  
Lifestyle®.

**V Video CD** –

(CD),

**Videostage® 5** –

Bose®,

Lifestyle®.

YPbPr.

CD

VHS,

S-video.

**Y YPbPr** –

YUV

Y, B-Y, R-Y.

**A**

( - )

( )  
( ).

RCA.



Lifestyle®.

4:3

( , ), 4

3 . :4:3 16:9.

4:3 ( ) 16:9 ( ) . «

30

» . « » —

« »), 4:3 ( .

( )

16:9 ( . « - 16

9





305385

***BOSE***<sup>®</sup>  
*Better sound through research*<sup>®</sup>

©2007 Bose Corporation, The Mountain,  
Framingham, MA 01701-9168 USA  
AM305385 Rev.00