



EN User manual


RU Руководство пользователя

PHILIPS



Specifications are subject to change without notice
© 2013 Koninklijke Philips Electronics N.V.
All rights reserved.

HD3065_3067_UM_RU_V1.0_130419

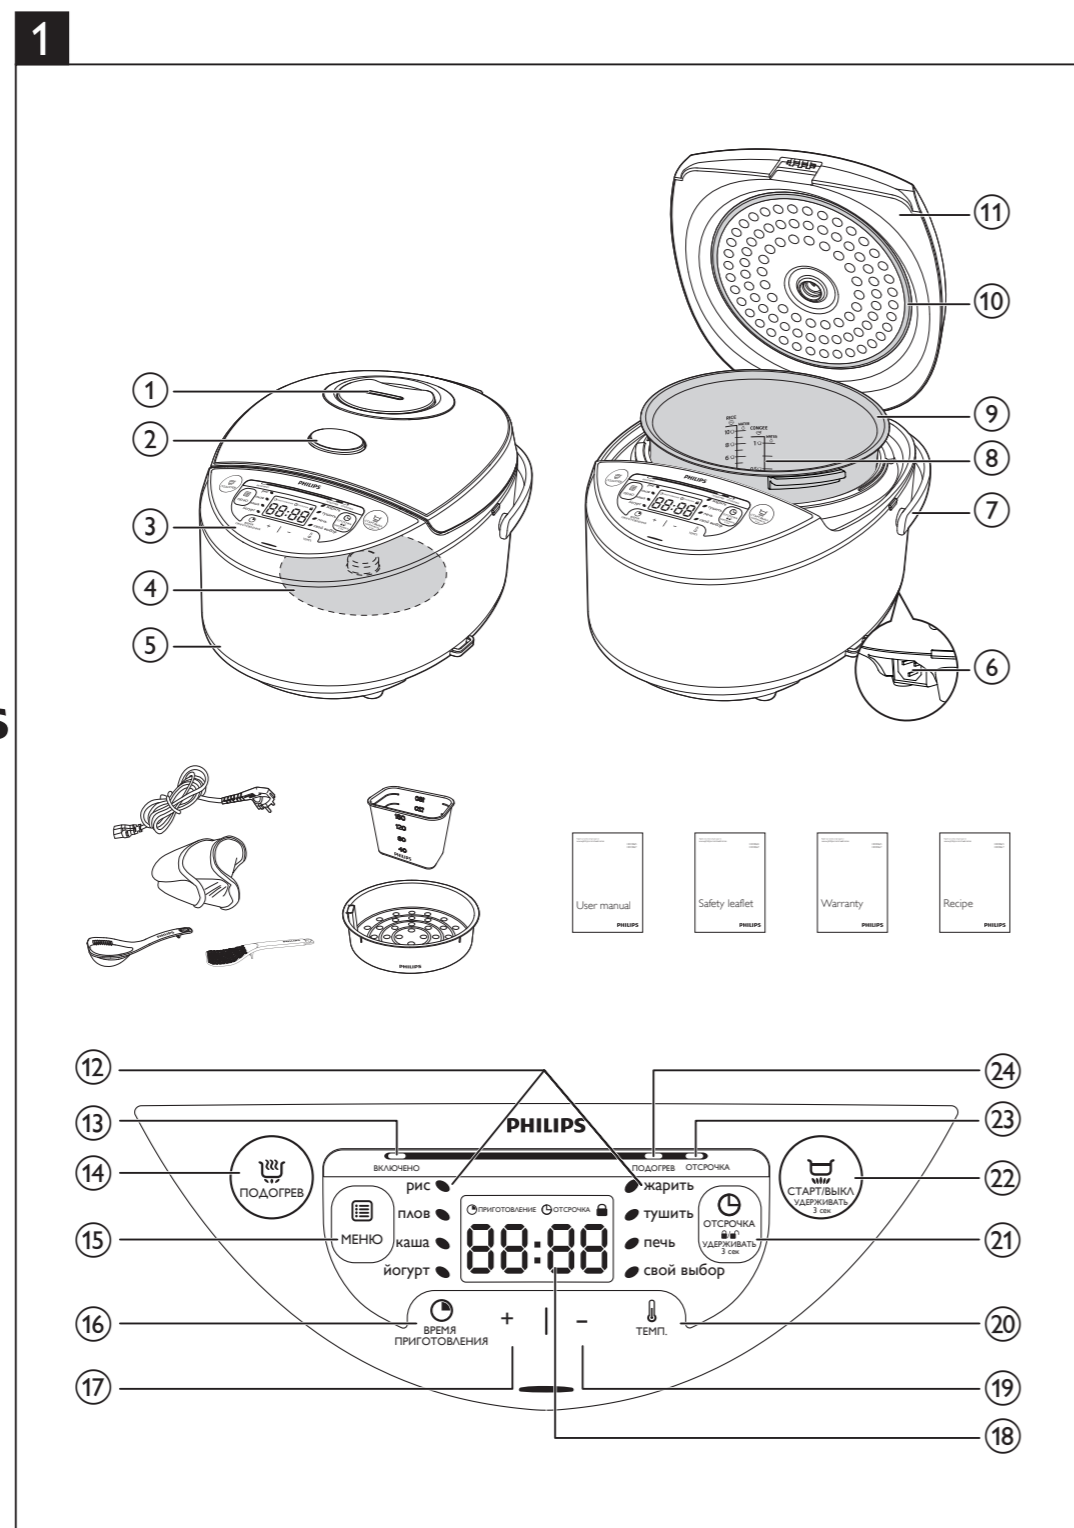

4 Using the multi-cooker

Before first use

- Take out all the accessories from the inner pot. Remove the packaging material of the inner pot.
- Clean the parts of the multi-cooker thoroughly before using it for the first time (see chapter "Cleaning and Maintenance").

Note

- Make sure all parts are completely dry before you start using the multi-cooker.

Preparations before cooking (fig.2)

- Before using the multi-cooker, you need to follow below preparations:
- Measure the rice using the measuring cup provided.
 - Wash the rice thoroughly.
 - Put the pre-washed rice in the inner pot.
 - Add water to the level indicated on the scale inside the inner pot that corresponds to the number of cups of rice used. Then smooth the rice surface.
 - Press the release lever to open the lid.
 - Wipe the outside of the inner pot dry, then put the inner pot in the multi-cooker. Make sure to fit the pot handle into the groove on the multi-cooker, and check if the inner pot is in proper contact with the heating element.
 - Close the lid of the multi-cooker, and put the plug in the power socket.

Note

- Each cup of uncooked rice normally gives 2 bowls of cooked rice. 1 cup of rice is approximately 180ml.
- The level marked inside the inner pot is just an indication. You can always adjust the water level for different types of rice and your own preference.
- Make sure that the outside of the inner pot is clean and dry, and that there is no foreign residue on the heating element or the magnetic switch.

Rice cooking (fig.3)

- Follow the steps in "Preparations before cooking".
- Press the menu button (МЕНЮ) until the rice cooking function (рис) is selected.
- Press and hold the start button (СТАРТ/ВЫКЛ) for 3 seconds to start cooking.
- When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.
- The multi-cooker will be in keep-warm mode automatically. The keep-warm (ПОДОГРЕВ) indicator lights up.

Note

- After the cooking has started, you can press and hold the Start/Off button (СТАРТ/ВЫКЛ) for 3 seconds to deactivate the cooking process, and the multi-cooker will be in standby mode.
- The default cooking time is 30 to 40 minutes, and is not adjustable.

Pilaf cooking (fig.4)

- Whisk the food and ingredients for the pilaf well.
- Follow steps 6 and 7 in "Preparations before cooking".
- Press the menu button (МЕНЮ) until the pilaf cooking function (плов) is selected.
- Press and hold the start button (СТАРТ/ВЫКЛ) for 3 seconds to start cooking.
- When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.
- The multi-cooker will be in keep-warm mode automatically. The keep-warm (ПОДОГРЕВ) indicator lights up.

Note

- After the cooking has started, you can press and hold the Start/Off button (СТАРТ/ВЫКЛ) for 3 seconds to deactivate the cooking process, and the multi-cooker will be in standby mode.
- The default cooking time is 30 to 40 minutes, and is not adjustable.

Cooking congee (fig.5)


- Follow the steps in "Preparations before cooking".
- Press the menu button (МЕНЮ) until the congee function (каша) is selected.
- Press the cooking time button (ВРЕМЯ ПРИГОТОВЛЕНИЯ), and the hour unit starts flashing on the display.
- Press the increase (+) or decrease (-) button to set the hour unit.
- After the hour unit is set, press the cooking time button (ВРЕМЯ ПРИГОТОВЛЕНИЯ) again, and the minute unit starts flashing on the display.
- Press the increase (+) or decrease (-) button to set the minute unit.
- Press and hold the start button (СТАРТ/ВЫКЛ) for 3 seconds to start cooking.
- When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.
- The multi-cooker will be in keep-warm mode automatically. The keep-warm (ПОДОГРЕВ) indicator lights up.

Note

- After the cooking has started, you can press and hold the Start/Off button (СТАРТ/ВЫКЛ) for 3 seconds to deactivate the cooking process, and the multi-cooker will be in standby mode.
- Do not exceed the volume indicated nor exceed the maximum water level indicated in the inner pot, as this may cause the multi-cooker to overflow.
- It is normal to find the congee stickier if it is left in keep-warm mode for too long.
- If the voltage is unstable at the area you live, it is possible that the multi-cooker overflows.
- The default cooking time is 10 minutes. You can select the cooking time between 5 minutes to 2 hours.
- The cooking time will not start counting down until the water temperature reaches 90°C.

Making Yogurt (fig.6)

- Whisk the ingredients for the yogurt well and put them in a glass container.
- Put the glass container in the inner pot. Make sure that the container is sealed.

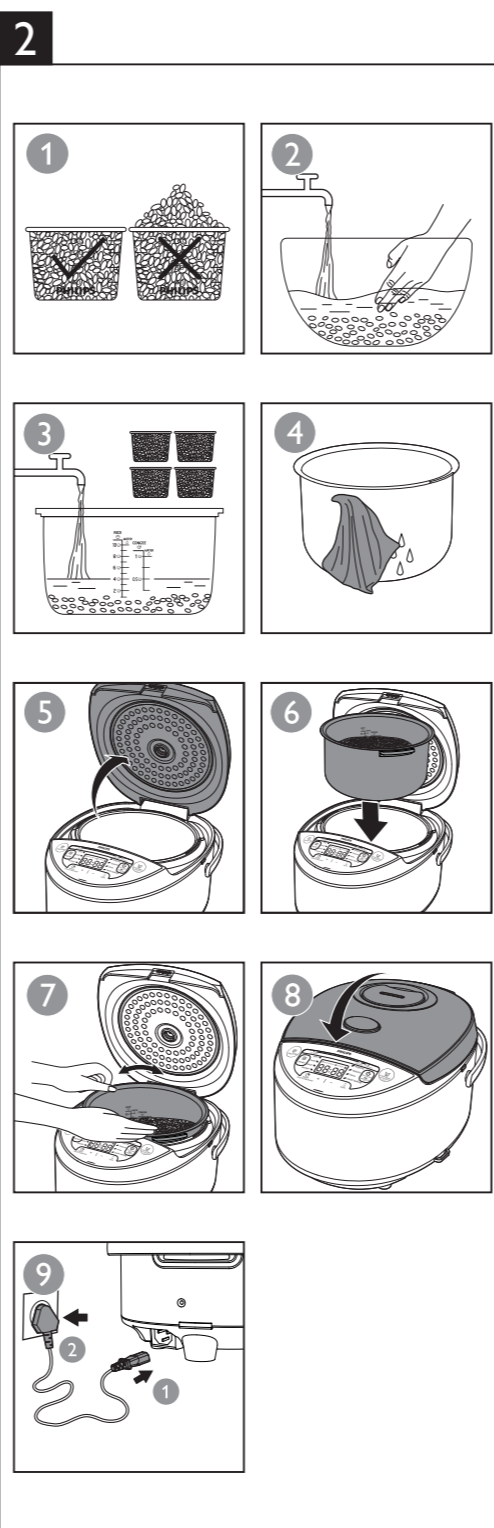

3 Pour some water in the inner pot. Make sure that half of the container is immersed in water.

- Follow steps 6 and 7 in "Preparations before cooking".
- Press the menu button (МЕНЮ) until the yogurt function (йогурт) is selected.
- Press the cooking time button (ВРЕМЯ ПРИГОТОВЛЕНИЯ), and the hour unit starts flashing on the display.
- Press the increase (+) or decrease (-) button to set the hour unit.
- After the hour unit is set, press the cooking time button (ВРЕМЯ ПРИГОТОВЛЕНИЯ) again, and the minute unit starts flashing on the display.
- Press the increase (+) or decrease (-) button to set the minute unit.
- Press and hold the start button (СТАРТ/ВЫКЛ) for 3 seconds to start cooking.
- When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.
- The multi-cooker will be in keep-warm mode automatically. The keep-warm (ПОДОГРЕВ) indicator lights up.
- Press and hold the start button (СТАРТ/ВЫКЛ) for 3 seconds to start cooking.
- When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.
- The multi-cooker will be in standby mode automatically.

Note

- After the cooking has started, you can press and hold the Start/Off button (СТАРТ/ВЫКЛ) for 3 seconds to deactivate the cooking process, and the multi-cooker will be in standby mode.
- The default cooking time is 8 hours. You can select the cooking time between 6 to 12 hours.

Frying (fig.7)


- Put food and ingredients into the inner pot.
- Follow step 6 in "Preparations before cooking".
- Put the plug in the power socket.
- Press the menu button (МЕНЮ) until the fry function (жарить) is selected.
- Press the cooking time button (ВРЕМЯ ПРИГОТОВЛЕНИЯ), and the minute unit starts flashing on the display.
- Press the increase (+) or decrease (-) button to set the required cooking time.
- Press the start button (СТАРТ/ВЫКЛ) for 3 seconds to start cooking.
- During cooking, stir the food constantly using a spatula.
- When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.
- The multi-cooker will be in keep-warm mode automatically. The keep-warm (ПОДОГРЕВ) indicator lights up.

Note

- Do not close the top lid when cooking in the fry mode.
- After the cooking has started, you can press and hold the Start/Off button (СТАРТ/ВЫКЛ) for 3 seconds to deactivate the cooking process, and the multi-cooker will be in standby mode.
- The default cooking time is 15 minutes. You can select the cooking time between 5 to 60 minutes.

Stewing (fig.8)

- Put the food and ingredients in the inner pot.
- Follow steps 6 and 7 in "Preparations before cooking".
- Press the menu button (МЕНЮ) until the stewing function (тушить) is selected.

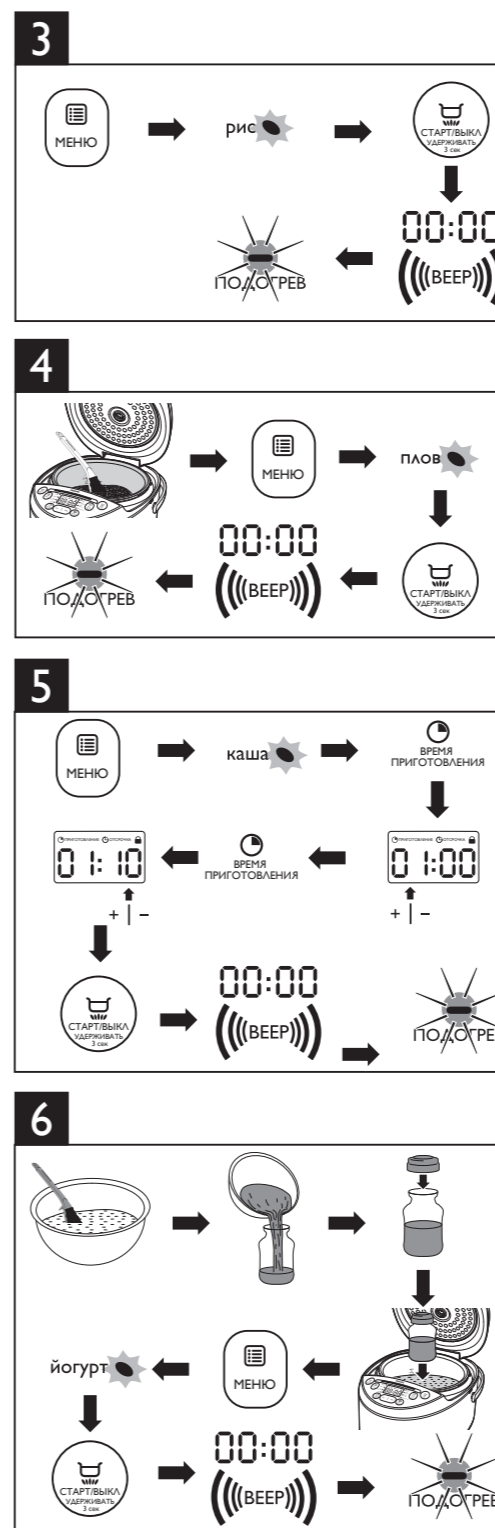

4 Press the cooking time button (ВРЕМЯ ПРИГОТОВЛЕНИЯ), and the hour unit starts flashing on the display.

- Press the increase (+) or decrease (-) button to set the hour unit.
- After the hour unit is set, press the cooking time button (ВРЕМЯ ПРИГОТОВЛЕНИЯ) again, and the minute unit starts flashing on the display.
- Press the increase (+) or decrease (-) button to set the minute unit.
- Press and hold the start button (СТАРТ/ВЫКЛ) for 3 seconds to start cooking.
- When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.
- The multi-cooker will be in keep-warm mode automatically. The keep-warm (ПОДОГРЕВ) indicator lights up.

Note

- After the cooking has started, you can press and hold the Start/Off button (СТАРТ/ВЫКЛ) for 3 seconds to deactivate the cooking process, and the multi-cooker will be in standby mode.
- The default cooking time is 1 hour. You can select the cooking time between 20 minutes to 10 hours.


Baking (fig.9)

- Put the food and ingredients in the inner pot.
- Follow step 6 in "Preparations before cooking".
- Put the plug in the power socket.

Note

- When baking cake, keep the lid closed during cooking. Baking cake at 130°C and by 45 minutes usually delivers best cooking result.
- When baking food other than cake, the lid must be opened during cooking.

- Press the menu button (МЕНЮ) until the baking function (печь) is selected.
- Press the cooking time button (ВРЕМЯ ПРИГОТОВЛЕНИЯ), and the hour unit starts flashing on the display.
- Press the increase (+) or decrease (-) button to set the hour unit.
- After the hour unit is set, press the cooking time button (ВРЕМЯ ПРИГОТОВЛЕНИЯ) again, and the minute unit starts flashing on the display.
- Press the increase (+) or decrease (-) button to set the minute unit.
- Press the temperature button (ТЕМП.), and the default cooking temperature starts flashing on the display.
- Press the increase (+) or decrease (-) button to choose a desired baking temperature.
- Press and hold the start button (СТАРТ/ВЫКЛ) for 3 seconds to start the baking process.
- When the baking is finished, you will hear 4 beeps and the selected function light will be off.
- The multi-cooker will be in keep-warm mode automatically. The keep-warm (ПОДОГРЕВ) indicator lights up.

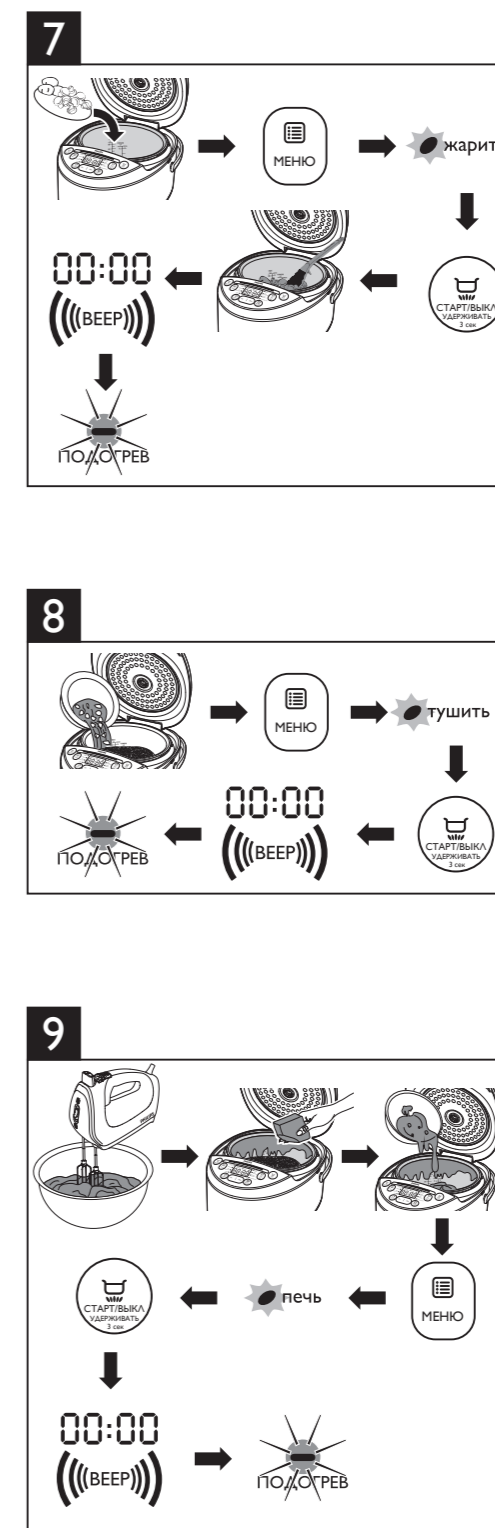

Note

- When removing the inner pot from the multi-cooker, use a kitchen glove or a cloth, as the inner pot will be very hot.
- After the cooking has started, you can press and hold the Start/Off button (СТАРТ/ВЫКЛ) for 3 seconds to deactivate the cooking process, and the multi-cooker will be in standby mode.
- The default cooking time is 45 minutes. You can select the cooking time from 20 minutes to 2 hours.
- The default cooking temperature is 100°C. You can select the temperature between 40°C to 160°C.

Manual (fig.10)


- You may use the manual mode to cook food with more control over the cooking time and temperature.
- Follow the steps in "Preparations before cooking".
 - Press the menu button (МЕНЮ) until the manual function (свой выбор) is selected.
 - Press the cooking time button (ВРЕМЯ ПРИГОТОВЛЕНИЯ), and the hour unit starts flashing on the display.
 - Press the increase (+) or decrease (-) button to set the hour unit.
 - After the hour unit is set, press the cooking time button (ВРЕМЯ ПРИГОТОВЛЕНИЯ) again, and the minute unit starts flashing on the display.
 - Press the increase (+) or decrease (-) button to set the minute unit.
 - Press the temperature button, and the default cooking temperature starts flashing on the display.
 - Press the increase (+) or decrease (-) button to set the desired cooking temperature.
 - Press and hold the start button (СТАРТ/ВЫКЛ) for 3 seconds to start cooking.
 - When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.
 - The multi-cooker will be in keep-warm mode automatically. The keep-warm (ПОДОГРЕВ) indicator lights up.

Note

- After the cooking has started, you can press and hold the Start/Off button (СТАРТ/ВЫКЛ) for 3 seconds to deactivate the cooking process, and the multi-cooker will be in standby mode.
- The default cooking time is 2 hours. You can select the cooking time between 1 to 24 hours.
- The default cooking temperature is 100°C. You can select the temperature between 40°C to 160°C.
- In manual (свой выбор) mode, when cooking at a temperature higher than 100°C, the top lid must be opened during cooking.

Keep-warm mode

- The multi-cooker provides you with easy control over the keep-warm mode.
- After you have selected the cooking function using the menu button (МЕНЮ), if you press the keep-warm button (СТАРТ/ВЫКЛ) for 3 seconds directly, the keep-warm indicator will light up. After the cooking is finished, the multi-cooker will switch to keep-warm mode directly.
 - After you have selected the cooking function using the menu button (МЕНЮ), if you press the keep-warm button (СТАРТ/ВЫКЛ) for 3 seconds, the keep-warm indicator will be off. After the cooking is finished, the multi-cooker will be in standby mode.

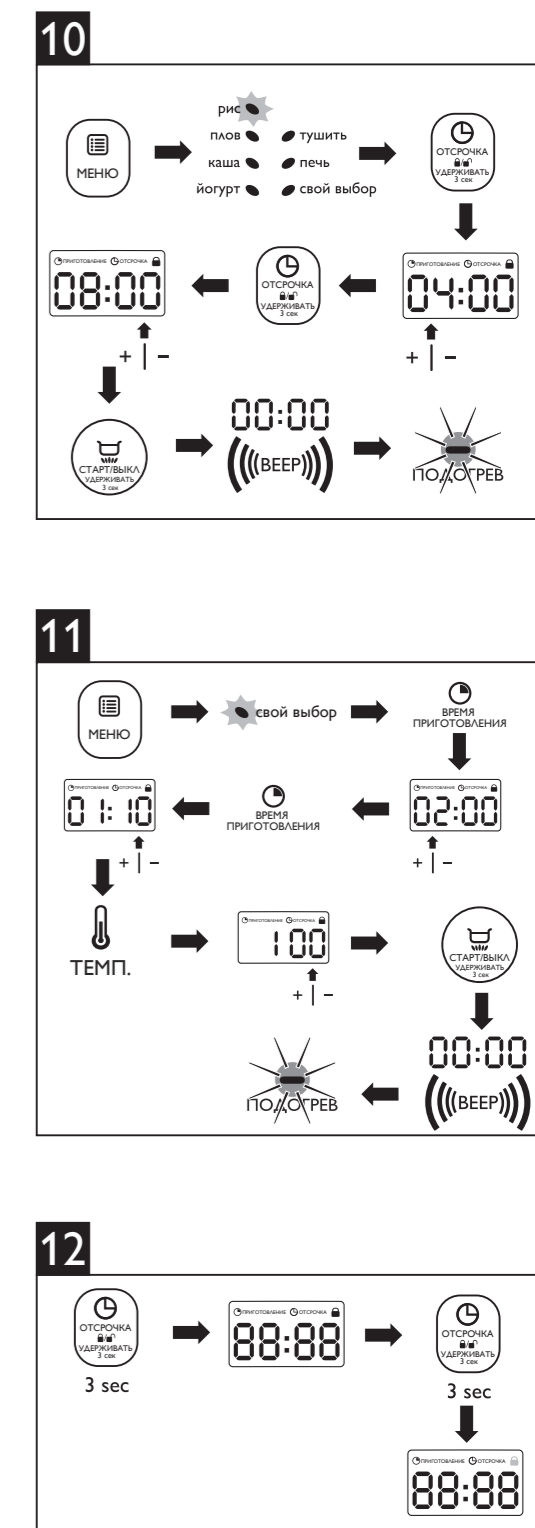

Note

- In standby mode, you can press the keep-warm button (ПОДОГРЕВ) to enter keep-warm mode.
- In keep-warm mode, you can press the keep-warm button (ПОДОГРЕВ) to enter standby mode.

Preset time for delayed cooking (fig.11)

- You can preset the delayed cooking time for different cooking modes.
- Follow steps 6 and 7 in "Preparations before cooking".
 - Press the menu button (МЕНЮ) until your preferred cooking function is selected.
 - Press the preset time button (ОТСРОЧКА), and the hour unit starts flashing on the display.
 - Press the increase (+) or decrease (-) button to set the hour unit.
 - After the hour unit is set, press the preset time button (ОТСРОЧКА) again, and the minute unit starts flashing on the display.
 - Press the increase (+) or decrease (-) button to set the minute unit.
 - Press the start button (СТАРТ/ВЫКЛ) for 3 seconds to confirm the preset time.
 - The cooking will be finished when the preset time has elapsed. You will hear 4 beeps and the selected cooking function light will be off.
 - The multi-cooker will be in keep-warm mode automatically. The keep-warm (ПОДОГРЕВ) indicator lights up.

Note

- The preset function is not available in fry mode (жарить).
- The preset button is not responsive in standby mode.
- The default preset time is 4 hours. You can select the preset time between 1 to 24 hours.
- After the cooking has started, you can press the Start/Off button (СТАРТ/ВЫКЛ) to deactivate the cooking process, and the multi-cooker will be in standby mode.

Setting up child lock (fig.12)

- To protect your child from using the multi-cooker, you may set up the child lock function.
- Press and hold the preset button (ОТСРОЧКА) for 3 seconds to enter the child lock mode.
- The child lock icon appears on the display.
- To unlock, press and hold the preset button (ОТСРОЧКА) for 3 seconds again, and the child lock icon disappears.

5 Cleaning and Maintenance

Note

- Unplug the multi-cooker before starting to clean it.
- Wait until the multi-cooker has cooled down sufficiently before cleaning it.

Interior

- Inside of the top lid and the main body:
- Wipe with wrung out and damp cloth.
 - Make sure to remove all the food residues stuck to the multi-cooker.

